# Singer 127-1

I BIOTHER CONTINUES

OCIACI PROMORENE

# LIST OF PARTS COMPLETE



Machine No. 127-1

THE SINGER MANUFACTURING COMPANY

# HISTORICAL COPY NUMBERING DEPARTMENT DO NOT REMOVE

#### LIST OF PARTS COMPLETE

FOR

## **MACHINE NO. 127-1**

For family use, vibrating shuttle with shuttle ejector.

*55501	Arn	with 443A and 829		
2002	tt	Dowel Pin		
8203	u	Rock Shaft with 1		
122E	u	" " Adjus	ting Screw	
8204	"	" " Centre	e (upper)	
301A	46	" " Screw	Centre	
1508E	u	u u u	" Nut.	
649E	"	Screw		
8341	"	Shaft		
8206	44	" Bushing		
443A	44	" " Set	Screw	
8300	144	Side Cover		
286D	44	" "Thumb	Screw	
2007	44	Spool Pin		
8879	"	" " Washer	(cloth)	
15282	Bala	nce Wheel, 2½ in.		
*8328				
256в	Clar	p Stop Motion Cla	mp Screw	
248a	и		" Stop Sere	ew
2020	"			
*15312	. "	" " Fla	nged Bushin	g
15313	44	u u	44 44	15312 with
		two 462c		
2022	Clan	p Stop Motion Fla		g Pin
462c	"	n u	u u .	Set Screw
15314	Clan	p Stop Motion con		
		and 15313		
8210	Face	Plate with 2827	· · · · · · · · · · · · · · · · · · ·	
219A	"			
2827	**	" Thread Gua	rd with 8505	
8505	. "	u u		
32562	Feed	Cam with 1285c	···	
. 1285c	и	" Set Screw		
8321	"	Dog, four teeth	at right of	needle (square
		corners)		

8437	Feed	Dog (	Carrie	r <b></b>					
1833	ű	u .	a ·	Rolle	r and	Screw S	tud		
315c	4	"	u ·	Screv	v Centi	re			
1519E		"	и	44	u	Nut.			
191c	"	4 5	Screw	<i>.</i>					
8348	"					t iron) v			
175B	"	"		41	Adju	sting S	crew		,
1381c	44	44		٠		ge Screw			
1520E	. 4	"		u	"			·•• · · · ·	
1832	"	"		"	Rolle	er and S	crew	Stud	
253в	"	Regul	ating	Thum	b Scre	w	<i></i> .		
8216	"								
8217	"	- "	· · I	riction	n Wasl	ner			
42D	. "	44	1	linge :	Screw.			·	
8334	"	Rock							
307c	44	۰ 44	"			e <b>.</b>			
1513E	· "	u,	и	u	. "	Nut			
25825	Feller	<b></b>							
25527в									
287в	и	Thur	nb Se	rew					
35857	Hemi	ner (f	oot) ½	s in. h	em				
26170	"								
35996	"								
6267	"	Fe	older						
25888	46								
				,					
Not				-		or 2588			
			1 3.7						

NOTE. When ordering Nos. 6267 or 25888, give width of hem and No. of Hemmer for which it is required.

55502	Needle	Bar	(hollow)
8222	"	ш	Cam with 175E and 400c
175E	"	"	" Clamping Screw
400c	**	ш	" Guide Adjusting Screw
233в	и	"	" Position Screw
1836	"	u	" Roller and Screw Stud
8338	и	"	Thread Guard
249A	"	" .	" and Needle Stop Screw
2054	и	Clar	np with 552c
552c	u ·	и	Thumb Screw
8224	Presser	Bar	*************
55507	· · · ·	и	Guide Bracket with 400F and 453C
400F	и	"	" " Adjusting Screw
453c	"	. "	" Set Screw
54503	u.	44	Lifter
97E	и	"	" Screw
8225	"	u	Spring.
2070	· 4	cc	" Washer
8337	"	Foo	t for 8321

50053в	Presser Foot Thumb Screw.
263в	Pressure Regulating Thumb Screw
8444	Shuttle Bell Crank
50036p	
54517	" Bobbin
*54504	Doug. Doug.
215н	Tension regulating berew
8326	" "Spring
54505 ·	Shuttle complete, Nos. 215H, 8326, 54504 and 54517
54506	" Carrier
54507	Shuttle Carrier complete, Nos. 50126E, 54506, 54508,
	54510, 54511 and two 54509
54508	Shuttle Carrier Cushion Spring
54509	" " Rivet
	Tel A Co
231c	bcrew
54510	" Ejector
50126E	" " Hinge Screw
54511	" " Spring
8232	" Pitman with two 175B
175в	" " Adjusting Screw
44A	" Screw Stud
520c	" " (eccentric)
1520E	" " " Nut
216A	" " " " Screw
55503	" Slide (back)
55504	" " (front)
2102	Tension Disc
· 1560B	" Regulating Thumb Nut
1274B	" Screw Stud
8238	" Spring
32572	" Releasing Disc
55505	", Lever,
55506	" " " Hinge Pin
12329	" " Spring
54515	" Pin
26076	Thread Cutter
8241	" Take-up Cam with 448c
2117	" " Pin
448c	" " Set Screw
8242	" " Lever with 1822
8243 •	" " Cover
8401	" " " with 8422
107в	" " " Hinge Screw
8422	" " " Thread Guard
79c	" " Hinge Screw
1822	" " Roller and Stud
8244	" "Spring
54516	" " Regulator Plate
233в	Aujusting
0000	Screw
8323	2
219A	" Screw

### BOBBIN WINDER (Automatic)

8342	Bobbin	Winder	er Back Centre
8256	u	***	" " Head
8343	"	и	" " Spring
8344	""	<b>"</b> .	Bracket (belt cover)
158в	ш	<i>u</i> ,	" Screw
8257	4	"	Cam
219A	".,	u	" Serew
8345	u	и	Frame
80272	и	u	" Friction Washer
50101в	44	u	" Hinge Screw
1718H	. <b>u</b>	u	" " " Nut
15287	и	"	Friction Ring (rubber)
50102A	. "	u	Spindle
15288	"	"	" Pulley
8346	и	44	Thread Guide
92в	"	44	" " Hinge Screw
8260	и	u	" " Spring
8261	u '	."	Worm Wheel
2749	u	"	" " Friction Washer
50104 B	a .	"	" · " Screw Stud (eccentric)
1718н	и .	"	" " " " Nut
8347	Bobbin	Winde	ler (automatic) complete, Nos. 92B,
	2	219a, 2	2749, 8256, 8257, 8260, 8261, 8342 to
		3346, 1	15287, 15288, 50101B, 50102A, 50104B,
		80272 a	and two 1718H
			-

### HAND ATTACHMENT

0055	'TO 1										
8377	Body.										
33647	u	Bracket				11.12					
1831		"		<b></b>							
8380	Crank	Handle	(wood	) <b></b>							
8433	u ·	"	Spindl	e							
8434	"	ш	4	8433	with	8382.	<b></b>				
8382	. "	44	u,	Wasl	her						
8280	u ·	Hinge 1	Pin		2		, .				
8435	ű	Lever									
8281	u	Lock P	in								
8282	u	. u	Sprin	ıg							
8436	Crank	complet	te, Nos	. 8380,	8434	and a	343	<b>5</b>			
33642	Driver										
33643	. "	Finger.									
33644	•44	"	33643	with 8	390, 8	391 a	nd a	336	45	٠	
8386	и	44	Hinge	Pin							

8387	Drive	er Finger	Lock	Pir	1			٠								
8388	u		и													
33645	44		Sheat													
8390	" .	. "	"		late											
8391	и	u	"	St	aple.								. :			
8392	Gear	with 828	31 and	82	82											
8393	. "	Cover					έ.				٠.	-		٠		
399a	. "、	" Sc	rew													. :
659 D	"	Screw St	t <b>ud</b> .													
8394	Pinio	n														
2532	. "	Dowel	Pin						٠,							
660D	. "	Screw	Stud				٠.						<i>:</i> .			
33646	Hane	d Attachi	ment o	om	plete,	No	s.	13	71	E,	65	91	D,	6	60	D,
		2532, 8	3280, 8	337	7, 8380	6 to	8	38	8,	88	39:	2 1	to	8	39	4,
		8436, 8	33642,	336	544, 33	364	7 a	m	l t	w	0 (	ea	cł	ı 1	8	3D
		and 39	9a			··										
137E	Hand	l Attachi	ment S	Scre	<b>w.</b>									Ϊ.		