Singer 7-10

Price List of Parts HISTORICAL COPY DO NOT REMOVE

No. 7-10

MACHINE

SHE

The Singer Manufacturing Company.

List of Parts No. 7-10

MACHINE.

In ordering from this list, use ONLY the PART number, in the first column.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows :

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished "
- E. Soft, not Polished.

These letters MUST BE USED when they appear in the list, and AFTER the number, as in the list.

In this series

I to 1500 are Screw Numbers.

1501 "1800 "Nut

1801 " 2000 " Roller "

2001 and upward are numbers of Machine Parts.

"

The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

PARTS COMPLETE FOR

7-10 MACHINE.

DROP FEED, ADJUSTABLE PRESSER, EITHER VIBRATING OR STATIONARY. ____

÷

No. Plate.	Name.	Eac	h.	Old No.
* 11911	Arm	. 20	00	
8702 887	" Dowel Pin	. :	15	3
872E 900	" Screw	•	10	
11912	" Shaft	. 7 (00	-
11354 830	" " Bushing	. '	75	5
437o 899	" " Set Screw	. (04	—
11913 825	" Side Cover,	. :	25	_
65d 899	" " Screw	•	15	_
11517 854	Balance Wheel with 347c	. 2 /	50	278
11518 859	" " Key		10	279
347c 900	" " Set Screw		08	
* 11359	Bed	.18	50	
11519 858	" Foot Bracket		10	281
185E 899	" " Serew		05	_
670r 862	" Front Bearing Clamping Screw		06	
11363 825	Crank Connecting Rod			206
* 11864	" " Cap			
145E 899	" " Screw.)4	
565c 898	" " Hinge Screy		15	_
1513 890	11 11 11 11 11 11			
1010 000	Nut	. ()5	
11865 855	Face Plate	. 2 (00	_
161d 901	" " Screw	. 1	04	
11866	" " complete, 11865 with 190			
	910c, 11867, 11868, 11871 to 1187			
	and two each 164D and 8800	. 5 '	75	
11365 828	Feed Bar	. 1 /	50	25
307 0 898	" " Screw Centre	. (96	_
1513 890	·· ·· ·· ·· Nut	. (05	_
11367 830	" Cam with two 445c		90	12
445c 900	" " Set Screw		03	
11868 830	" Connecting Link		85	16
565c 898	" " " Hinge Screw		15	
1513 890	** ** ** ** **			
	Nut		05	
11893	Feed Dog for general work	. 1 (00	_
11521 856	" " " Bag Handles	. '	75	288
166d 899	" " Screw	. (07	_
11870 825	" Forked Connection	. 1	75	207
5650 898	" " Hinge Scr.	-	15	
1 513 890				
	Nut		05	_
11371 825	Feed Lifting Rock Shaft	. 1	40	81
11372 ——	" " 11371 wit			
	11874	. 2	55	29

		5		
No,	Plate	Name E	Each.	Qld No.
11874	830	Feed Lifting Rock Shaft Crank with		
		4530 and 1861	95	_
2117	890	Feed Lifting Rock Shaft Crank Pin	01	23
1861	862	" " " " Roller		
480	000	and Stud.	85	
4030	r 899	Feed Lifting Rock Shaft Crank Set		
584	c 898	Screw Feed Lifting Rock Shaft Screw	02	
0040	0.00	8	10	
1508	890	Centre Feed Lifting Rock Shaft Screw	12	
1000	0.00	Centre Nut	06	
11375	830	Feed Regulator	60	208
	E 898	" " Hinge Screw	15	200
	p 902	" " Thumb "	40	
11376	825		140	21A
11877		" " 11876 with 11879		20
11379	898	" " Crank with 4580	- 60	22
2117	890	" " " Pin	01	28
4580	899	" " Set Screw.	02	
	808	" Screw Centre	12	
1508	890	" " " " Nut.	06	
25881	894	Guide	40	84
2541	5 90 2	" Thumb Screw	40	
11522	855	Lifting Presser Bar	1 00	800
11523	856	" " Bell Crank	1 50	307
11524	856	" " Ad-		
		justing Link	1 50	356
11525		Lifting Presser Bar Bell Crank Ad-		
		justing Link 11524 with 1518, 1828		
		and 2718	1 80	308
6111	o 905	Lifting Presser Bar Bell Crank Ad-		
0		justing Link Adjusting Screw	12	—
81	> 898	Lifting Presser Bar Bell Crank Ad-	•	
1000	000	justing Link Hinge Screw	20	. —
1828	862	Lifting Presser Bar Bell Crank Ad-		
000		justing Link Roller and Screw 872c	25	
3720	898	Lifting Presser Bar Bell Crank Ad-	10	
1518	890	justing Link Roller Screw	12	
1910	090	Lifting Presser Bar Bell Crank Ad-		
2718	862	justing Link Roller Screw Nut Lifting Presser Bar Bell Crank Ad-	04	_
2110	605	justing Link Roller Screw Nut		
		Washer	01	80 9
11526	889	Lifting Presser Bar Bell Crank Con-	01	007
11050	000	nection Stud	75	_
11527		Lifting Presser Bar Bell Crank Con-	10	
110~1		nection Stud 11526 with 164p, 11528		
		and two 858c	95	310
1641	5 899	Lifting Presser Bar Bell Crank Con-	- 4	0-0
		nection Stud Screw	04	_
11528	862	Lifting Presser Bar Bell Crank Con-		
		nection Stud Screw Washer	15	311

	0					-		
No. Plate	Name	Each.	Old No.		No. Plate	Name	Each.	Old No.
	Lifting Presser Bar Bell Crank Con-				11841 827	Oscillating Rock Shaft (steel)	1 75	-
0000 000	nection Stud Set Screw	03			11398 827	" " Hinge Pin	75	256
11000 050	Lifting Presser Bar Lifter				1508 890	" " Nut	06	
11867 857	0		805		6220 899	14 11 11 14 14 Ser.	•••	
11531 881	" " " " Bracket				0000 000	Bearing	15	
2117 890			23		1508 890	Oscillating Rock Shaft Hinge Pin		
11868 860	" " " '' Hinge "	10	_		1000 000	Screw Bearing Nut.	06	_
910a 900	44 44 45 46 46 64			i	11165 897	0	01	
	Set Screw	03				" " " 11841 with	01	_
11409 827	Lifting Presser Bar Spring	15	50		11842	11041 WITH		
11869 860	" " Adjusting					622c, 11165, 11398 and two 1508		
	Block	1 00	_		11850 825	Oscillating Shaft		
523c 901	Lifting Presser Bar Spring Adjusting			1997 - C	11393 887	" " Collar with two 4530	10	354
	Block Set Screw	18			453c 899	" " Set Screw	02	
11538 855	Needle Bar	1 00	286		11848 – –	" " Crank	30	
11539 856	" " Connecting Link	80			11849 830	" " 11848 with 1885	75	
566c 898	" " " Hinge				2117 890	•• •• •• Pin	01	23
0000 090	Screw				1885 900	" " Roller and Scr.		
1513 890	Needle Bar Connecting Link Hinge					Stud	40	
1010 000	Screw Nut				190 899			
11511 000	Needle Bar Connecting Stud			i i		Screw	03	
11541 889	" " Clamp-		201	1	5968 887	Oscillating Shaft Crank Roller Cap		
129b 90 1	ing Screw					Screw Washer.	02	_
448	Needle Bar Connecting Stud Set Scr.				453c 899	Oscillating Shaft Crank Set Screw.	02	
446c 899					11851 833	Shuttle (cylinder), 3-in. diameter, with		
258d 899	Solen Basing Hereit				11001 000	11910		
11898 860	1 11 0 10 10 10 10 10 10 10 10 10 10 10				44010 000			
190 899	Detew				11910 833	Shuttle Bobbin (solid and hardened).	25	_
11542	" Clamp with 680D and 11385			1	11852 883	Oynnuer		
10106 862	" Disc				8961 833	IIIngo I m	02	63
11385 890	" " Gib				11853 833	" " Latch	15	
10107 862	" " Spring	01	292		12002 883	" " Pin	01	—
830 901	" " Screw	05	· _		11854 8 38	" " Spring	03	
680p 862	" " Thumb "	10) <u> </u>		590E 901	ic ii ii Screw	02	
11543 889	" " 11542 with 880, 10107	ſ		i	11856 830	" Driver with 4530	1 75	
11010 000	and two 10106		290		2117 890	" " Pin	01	28
11387 ——	Oil Cup	80	294	,	453o 899	" Set Screw	02	
11917	" " Cover		i		11855 833	" Frame	2.75	_
9084 889	" " Hinge Pin		. —		11832 850	" Race Back	-	
2205 862	" " Latch Spring		296		11833 889	" " Dowel Pin	01	_
	" " " Screw					" " Spring	25	
	" " Screw			1		" " " Spring	15	
185D 899				1	82p 901	Derewitter		_
11919 888	a monte all creations				11835	Doug		<u> </u>
8953 ——	" or Wax Stripper (felt)		3 297	1	11837 825	Flame with 11000		
5480 887	Hubber (Steel		1	;	11888 889	" " Position Pin	03	_
	for 11387		. —	1	11836 825	" complete, Nos. 32D,		
11918 888						11832, 11834, 11835 and two 11833.	4 00	
	for 11917				135d 899	Shuttle Race Screw	05	
207 901			2	I.	11545 858	" " Slide (back)	50	819
11920 855	" Cup complete, Nos. 2205, 5480	1			180 901	" " " Screw	03	
	9084, 11887, 11917, 11918, 11919, two	С			11418 858	" " (front)	85	318
	8953 and three 207		5 —	,	7730 901	" Tension Regulating Screw	05	_
11544 854	Oil Cup Lamp Holder	. 03	5 298	1	8964 838	" " Spring	40	360
190 899	" " Screw		3 —	Ţ	0001 000	~pringin	10	
100 000				l.				
				!				

-

8

\$

Î

Ż

÷.

	8		
No. Plat	e Name	Each.	Old No.
11879 —	Spool Holder Bracket	25	·
11880 855	" " 11879 with 11881	50	
881D 899	-	06	
851 £ 857			
	fixed cone	15	_
8019 887	Spool Holder Tension Spool Pin		
	Spring	02	
8018 890		05	_
1541 890	in a a a a Nut.	05	_
11881 857			
	plete, Nos. 851E, 1541, 8018 & 8019.	25	
1560 890		04	
8905 862	÷ -	~ 1	
0303 004	Washer	. 01	361
850p 902		25	
8791 888		10	320
11043 897		03	
8879 887		01	
11044 89		. 75	۰
11871	" (wheel) complete, Nos. 850D,	0	
11011	1560, 8791, 8905, 11043, 11044 and		
	two 8879		
11070 001		1 25 05	
11872 861	5	00	_
11873 860			
11547	Aetamer Dracket	80	328
158D 901	DCIEW	03	
2102 888	Disc	05	84
1560 890	, regulating rhunio	04	
8905 86	Nut 2 Thread Retainer Regulating Thumb		
8900 80	0		001
aaa	Nut Washer	01	361
633д 865		10	
2103 88		03	
2049 85) inteau ounde r m.	01	236
11546 85	ompiete, nos. 0500,		
	1560, 2049, 2103, 8905, 11547 and		
	two 2102	60	327
11857 —	- Thread Take-up Cam		
8873 88			
434 c 89			
11859			
	Piece.		
159 90	4	,	
	Cam Piece Screw		-
2022 88			
	Cam Piece Steady Pin		. —
11858	-		
	2022, 11859 and two 159		
11844) —
11845 8			
	1845	. 1 50) 321

	9		
No. Plate	Name	Each.	Old No.
	Thread Take-up Lever Hinge Screw	15	_
1845 899	" " Roller and		
1040 000	Screw Stud	80	
1518 890	Thread Take-up Lever Roller and		
1010 000	Screw Stud Nut.	04	
11874 857		15	
	Thread Take-up Spring		_
164D 899	ocrew	04	
8800 890	Washer	60	90
11875 85 7	" " Regulator	60	_
164d 899	14 14 14 A		
	Screw	04	—
8800 890	Thread Take-up Spring Regulator		
	Screw Washer	06	90
11876 8 61	Thread Take-up Spring Thread		
	Guard	10	
190 899	Thread Take-up Spring Thread		
	Guard Screw	03	_
11432	Throat Plate Body for 11433	75	_
11434 862	" " Needle Plate (round		
11101 002	needle hole)	20	331
11435 862	Throat Plate Needle Plate (oblong	20	001
11400 004		05	000
	needle hole),	25	332
219D 901	Throat Plate Needle Plate Screw	02	_
11433 874	11x00 with 010D and		
	11484 or 11435 for 11893		329
11555	Throat Plate Body for 11556	80	—
11557 856	" " Feed Way Strip (round		
	needle hole)	40	383
202 900	Throat Plate Feed Way Strip Screw	02	
11556 856	" " 11555 with 11557 and		
	two 202.	1 25	330
381d 899	Throat Plate Screw	06	
11558 855	Vibrating Presser Bar	1 00	334
11559 859	" " Cap Bracket	- 00	001
11000 005	(upper)	50	335
11560 859	Vibrating Presser Bar Cap Bracket		
11900 000	(lower)	50	336
128E 901	Vibrating Presser Bar Cap Bracket	00	000
TOOL DOI	Screw (inside)	04	
010-005	Wilsoffw (Insule)	04	
612r 905	Vibrating Presser Bar Cap Bracket		
	Screw (outside)	06	
11561 859	Vibrating Presser Bar Guide Bracket	2 00	339
2049 853			000
	Pin	01	
681D 862	Vibrating Presser Bar Hinge Screw.	08	
11563 8 62	· · · · · · · · · · · · · · · · · · ·	4 0	337
190 899			
	Screw		- 8
11564 862	Vibrating Presser Bar Spring Stud		
	Spring		338
11565 859	Vibrating Presser Bar Stop complete,		
	Nos. 682D, 8146, 11566 and 11567	40	841

No.	Piate	Name	Each.	Old No.
11566	862	Vibrating Presser Bar Stop Block	25	342
8146	861	\$ \$ \$\$ \$\$ \$\$ \$\$		
		Washer (front)	01	343
11567	862	Vibrating Presser Bar Stop Block		
		Washer (inside)	01	344
6821	> 862	Vibrating Presser Bar Stop Thumb		
		Screw		_
11568	859	Vibrating Presser Foot (narrow)		345
11569	859	" " " (wide)		846
11570	859	" " for bag		
		handles	1 00	347
11571	859	Vibrating Presser Foot for blinds		348
11572	859	" " " traces		
		(narrow)		349
11573	859	Vibrating Presser Foot for traces		
		(wide),		350
164u	» 899	Vibrating Presser Foot Screw		_

ACCESSORIES.

No. F	Plate.	Name. Ei	ach. (Did No.
25957	895	Oiler with 41-in. spout	12	5704.44
25958		" Spout, 4½-in	04 (571 **
26026	895	Screw Driver	10	398 "
11831		"" " 5-in. blade	20	_
8909	894	Wrench for 1518 and 1518	15	852
8910	894	" " 611 " 1508	25	

.

PARTS COMPLETE FOR BINDER (ADJUSTABLE).

No.	Plate.			Nai	ne.			Each.	Old No.
11577		Binder	Bed					1 25	
11578	857	**	**	Spring	Guide			15	_
11579	861	**	**	••	**	Cam		50	
11882	861	**		**	• •	44	Stud	10	_
7071	861	**	14	••	÷ •	**	**		
		W٤	isher	•				01	
207	901	Binder	Bed	Spring				02	
8146	861	44	64	••	16	٤,			
		Wash	ier	• • • • • • •		• • • •		01	-
11576	857	Binder	com	plete, N	os. 207	7, 814	6, 7071,		
		11577	to 1	1579 an	d 1188	32	• • • • • •	2 00	-

11

PARTS COMPLETE FOR

CUIDE (ADJUSTABLE).

No. Pl	late.			Name.			Each.	Old No.
11581 8	857	Guide	Block		· · · · · · · · ·	• • • • • •	1 00	-
11582 8	857	"	Bracket .				50	
771 0 9)02	**	" T	հսուն է	Screw		10	
11583 8	857	"	Plate				1 75	
283D §	902	"	" Screv	w	• - • • • • •		10	· -
8800 8	890	**	et 16	Wasł	ne r .		- 06	90
760D 8	357	**	Regulator	Screw	. .		60	
2269	889	"	Ŭ 1 1	**	Dowel J	Pin	01	153
175o §	901	**	44	**	Stop Sc	rew	02	-
1576 8	861		**	41	Thumb	Nut.	. 80	-
11580 -		• •	complete,					
		7711	o, 1576, 22	89, 115	81 to 115	83	4 50	—

TABLE BOBBIN WINDER.

No.	Plate.	Name.		Old No.
11767		Belt	05	
11768		" 11767 with 25028	05	370
25028	889	" Hook	01	871
11769	892	Frame	40	863
11770	859	Pulley	15	365
11760		" Driving Wheel		366
8380		" " Handle		
11762		" " " " Stud	10	
8382		en en 62 45 42		
0004	***	Washer	01	
11761	859	Pulley Driving Wheel Handle of	om-	
		plete, Nos. 8380, 8382 and 1176	2 10	369
11763	859	Pulley Driving Wheel Stud	10	367
2269	889	Pin,	01	153
11764	862	" " Wasl	ner., 01	368
11771	858	Spindle	50	364
11766	855	Bobbin Winder complete, Nos. 5		
		2269, 11760, 11761, 11763, 1	1764	
		and 11768 to 11771	2 00) 362
598	е 859	Bobbin Winder Clamping Screw		

\$

4

de,

OBSOLETE PARTS.

No. Plate.	Name,	Each.	Old No.
*11628	Arm		
11514 855	" Shaft		
≈11515 854	" Side Plate		276
11520 854	Face Plate		
11369 856	Feed Dog	. 75	
11529	Lifting Presser Bar Lifter	. 1 23	5 —
11580 856	" " 11529 witl	1	
	11532 and 11533		302
11532 862	Lifting Presser Bar Lifter Friction	1	
	Spring		306
11533 862	Lifting Presser Bar Lifter Friction		
	Spring Stud		355
11534 862	Lifting Presser Bar Lifter Screw		
	Washer) 303
11535 862	Lifting Presser Bar Lifter Screw		
44.505 000	Washer Steady Pin		304
11537 889	Lifting Presser Bar Spring Adjust		
105 000	ing Block with 435c		301
435c 900	Lifting Presser Bar Spring Adjusting		
	Block Set Screw		
93 900	Needle Clamp Spring Screw, use 830) 04	-
11388 854	Oil Cup complete	1 25	
8951 862	i meau 12yeich		295
11396 831	Oscillating Rock Shaft with two		
11897	each 11400 and 11401		
11397	Oscillating Rock Shaft 11396 with		054
11792 831	622c, 11398 and two 1508 Oscillating Rock Shaft with two		254
11185 001	each 11401 and 11793		10
11391 855	Oscillating Shaft		
11395 837	" " Crank with 1861	1 20 95	299 44A
11827 834	Shuttle complete		44A 312
11415	" Race complete	5 50	312 314
11414 859	" Driver with 453c		314 317
11416 832	" Race Frame	4 75	315
11417 858	" " Ring		315 316
11411 030 11828 834	" Tension Spring	40	
11548 862	Thread Eyelet for 11520	03	
11574 862	" Guard for 11538		
11549	" Take-up Cam	5 00	
11550 854	" " 11549 with		
	11551, two each 159, 434c and 2117		822
11551 859	Thread Take-up Cam Vibrating Cam		~~~
	Piece		323
11552 859	Thread Take-up Spring	08	324
11553 859	" " " Regulator		
	Plate	10	325
11554 862	Thread Take-up Staple	03	826
11575 856	Wrench for No. 611	25	353

Numerical List of Parts.

13

	ale.	Name.	Each,	Old No
8d 8	98	Lifting Presser Bar Bell Crank Ad-	-	
		justing Link Hinge Screw	20	
32d 9	01	Shuttle Race Back Spring Screw	15	
65d 8	99	Arm Side Cover Screw	15	
98 9	00	Needle Clamp Spring Scr. (obsolete).	04	
128 e 9	01	Vibrating Presser Bar Cap Bracket	2	
		Screw (inside)	04	
129ь 9	01	Needle Bar Connecting Stud Clamp-		
		ing Screw	04	
1850 S	99	Oil Cup Screw	05	
135n 89	99	Shuttle Race Screw		
135r 89	99	Bed Foot Bracket Screw	05	
145e 89	99	Crank Connecting Rod Cap Screw	04	
158р 90	01	Thread Retainer Bracket Screw	03	
159 90	01	" Take-up Vibrating Cam Piece	,	
		Screw		_
161 p 96	01	Face Plate Screw		
1640-89	99	Lifting Presser Bar Bell Crank Con-		
		necting Stud Screw		_
164D 8	99	Thread Take-up Spring Screw,		_
1640 S	99	" " " Regulator		
		Screw	04	
164 d 8	99	Vibrating Presser Foot Screw	04	_
166d 89	99	Feed Dog Screw	07	-
1750 90	01	Guide Regulator Screw Stop Screw.	02	
180 90	01	Shuttle Race Slide (back) Screw	03	_
190 8	99	Needle Bar Thread Eyelet Screw	03	
190 8	99	Oil Cup Lamp Holder Screw	03	_
190 8	99	Oscillating Shaft Crank Roller Cap		
		Screw	03	
190 89	99	Vibrating Presser Bar Spring Stud		
		Screw,	03	
190 89	99	Thread Take-up Spring Thread	••	
		Guard Screw	03	_
202 96	00	Throat Plate Feed Way Strip Screw		_
207 90	01	Oil Cup Cover Latch Spring Screw	02	
	01	" or Wax Stripper Washer Screw.	02	
	01	Binder Bed Spring Guide Screw	02	_
2190 90	01	Throat Plate Needle Plate Screw	02	
254D 90	02	Guide Thumb Screw	40	
254D 90		Feed Regulator Thumb Screw	40	
258D 89		Needle Bar Screw Bushing	20	
283D 90		Guide Plate Screw	10	
3070 8		Feed Bar Screw Centre	06	
3470 90	ю	Balance Wheel Set Screw	08	_
3720 89		Lifting Presser Bar Bell Crank Ad-		-
0100 00	00	justing Link Roller Screw	12	
		Jussing Link Koner Screw	12	_

Ξ.

÷,

1

-

 ϕ

No. Plate		Each. O	ld No.
381 d 899	Spool Holder Bracket Serew	06	—
38 1d 899	Throat Plate Screw	06	
434 0 899	Thread Take-up Cam Set Screw	04	
485o 900	Lifting Presser Bar Spring Adjusting		
	Block Set Scr. for 11537 (obsolete).	04	-
437 0 899	Arm Shaft Bushing Set Screw	04	
	Feed Cam Set Screw	03	
446o 899	Needle Bar Connecting Stud Set Scr.	03	
453o 899	Feed Lifting Rock Shaft Crank Set		
	Screw	02	
4530 899	Feed Rock Shaft Crank Set Screw	02	—
	Oscillating Shaft Collar Set Screw	02	
45 3 a 899	" " Crank Set Screw	02	
453o 899	Shuttle Driver Set Screw	02	
523o 901	Lifting Presser Bar Spring Adjusting		
	Block Set Screw	18	
528e 859	Bobbin Winder Clamping Screw	20	
564o 898	Feed Lifting Rock Shaft Scr. Centre	12	
564o 898	" Rock Shaft Screw Centre	12	_
5650 898	Crank Connecting Rod Hinge Screw.	15	-
5650 89 8	Feed Connecting Link Hinge Screw.	15	
5650 89 8	" Forked Connection Hinge Scr.	15	
566c 898	Needle Bar Connecting Link Hinge		
	Screw	15	
567d 898	Thread Take-up Lever Hinge Screw	15	
568e 898	Feed Regulator Hinge Screw	15	
590e 901	Shuttle Cylinder Latch Spring Screw	02	—
611d 905	Lifting Presser Bar Bell Crank Ad-		
	justing Link Adjusting Screw	12	
612в 905	Vibrating Presser Bar Cap Bracket		
	Screw (outside)	06	
622 0 899	Oscillating Rock Shaft Hinge Pin		
	Screw Bearing	15	
633d 862	Thread Retainer Screw Stud	10	—
670e 862	Bed Front Bearing Clamping Screw.	06	
680р 862	Needle Clamp Thumb Screw	10	
681D 862	Vibrating Presser Bar Hinge Screw.	08	-
682d 862	" " Stop Thumb		
	Screw		_
760n 857	Guide Regulator Screw		_
771d 902	" Bracket Thumb Screw		—
7730 901	Shuttle Tension Regulating Screw		
830 901	Needle Clamp Spring Screw		-
850р 902	Tension Screw Stud		-
851E 857	Spool Holder Tension Spool Pin with		
	fixed cone		_
8580 900	Lifting Presser Bar Bell Crank Con		
	necting Stud Set Screw		-
872E 900	Arm Screw		~~~~
	Lifting Presser Bar Lifter Hinge Pin	1	
910 0 900	Set Screw	. 08	

Each. Old No. No. Plate Name Feed Lifting Rock Shaft Screw Cen-1508 890 tre Nut..... 06 Feed Rock Shaft Screw Centre Nut. 1508 890 06 ____ 1508 890 **Oscillating Rock Shaft Hinge Pin Nut** 06 -----.. 1508 890 Bearing Nut -06 Crank Connecting Rod Hinge Screw 1513 890 05 1513 890 Feed Bar Screw Centre Nut..... 05 " Connecting Link Hinge Screw 1513 890 05 Feed Forked Connection Hinge Scr. 1513 890 05 Needle Bar Connecting Link Hinge 1513 890 05 Screw Nut. 1518 890 Lifting Presser Bar Bell Crank Adjusting Link Roller and Screw Nut 04 1518 890 Thread Take-up Lever Roller and Screw Stud Nut... 04Spool Holder Tension Spool Pin Nut 05 1541 890 ___ 1560 890 Thread Retainer Regulating Thumb 04 Tension Regulating Thumb Nut . . 04 1560 890 Guide Regulator Screw Thumb Nut. 30 1576861 Lifting Presser Bar Bell Crank Ad-1828 862 justing Link Roller and Screw 872c. 25 Thread Take-up Lever Roller and 1845 899 Screw Stud..... 80 Feed Lifting Rock Shaft Crank 1861 862 Roller and Stud..... 35 Oscillating Shaft Crank Roller and 1885 900 Screw Stud..... 40 Thread Take-up Vibrating Cam 2022 887 Piece Steady Pin..... 01 Thread Retainer Thread Guide Pin. 236 01 2049 853 Vibrating Presser Bar Guide Bracket 2049 853 01 236 Pin..... Thread Retainer Disc 05 84 2102 888 44 2103 888 " Spring..... 03 85 Lifting Presser Bar Lifter Bracket 2117 890 28 01 Pin..... Oscillating Shaft Crank Pin..... 23 2117 890 01 Shuttle Driver Pin 01 23 2117 890 2117 890 Feed Lifting Rock Shaft Crank Pin.. 01 23 " Rock Shaft Crank Pin 23 01 2117 890 296 Oil Cup Cover Latch Spring 04 2205862Bobbin Winder Pulley Driving Wheel 2269 889 01 158Stud Pin.... 2269 889 Guide Regulator Screw Dowel Pin.. 01 153

	No.	Plate	Name	Each.	Old No.
	2718	862	Lifting Presser Bar Bell Crank Ad-		
			justing Link Roller and Screw Nut		
			Washer	01	809
	3146	861	Binder Bed Spring Guide Screw		
			Washer	01	343
	3146	861	Vibrating Presser Bar Stop Block		
			Washer (front)	01	343
	5480	887	Oil or Wax Stripper Washer (steel)		
			for 11387	01	
	5968	887	Oscillating Shaft Crank Roller Cap		
			Screw Washer.	02	
	7071	861	Binder Bed Spring Guide Cam Stud		
			Washer	01	
	8018	890	Spool Holder Tension Spool Pin Cone.	05	
	8019	887	" " " " Spring	02	
	8380	893	Bobbin Winder Pulley Driving		
			Wheel Handle	03	-
	8382	887	Bobbin Winder Pulley Driving		
			Wheel Handle Stud Washer	01	
	8702	887	Arm Dowel Pin	15	8
	8791	888	Tension Spring	10	320
	8800	890	Thread Take-up Spring Scr. Washer	06	90
	8 800	890	" " Regulator		00
			Screw Washer	06	90
	8800	890	Guide Plate Screw Washer	06	90
	8873	887	Thread Take-up Cam Pin	05	81
	8879	887	Tension Washer (felt)	01	
	8905	862	"Regulating Thumb Nut Washer	01	861
	8905	862	Thread Retainer Regulating Thumb	01	001
	9900	000	Nut Washer	01	861
	8909	894	Wrench for 1518 and 1518	15	852
	8910	894	" " 611 " 1508	25	
	8951	862	Oil Cup Thread Eyelet (obsolete)	03	295
	8953		" or Wax Stripper (felt)	03	297
	8961	833	Shuttle Cylinder Hinge Pin	02	63
	8964	833	" Tension Spring	40	860
	9084	889	Oil Cup Cover Hinge Pin,	02	
	10106	862	Needle Clamp Disc.	08	291
	10107	862		01	292
	11043	897	Tension Washer (steel)	08	
	11044	897	Wheel	75	
	11165	897	Oscillating Rock Shaft Oil Pad	01	
	11854			75	5
ł	11959		Bed	18 50	
	11863	825	Crank Connecting Rod	$1 \ 25$	
ł	11864			_	
	11865	828	Feed Bar	1 50	25
	11867	830		1 00	12
	11868	880		35	16
	11969	856		75	282
			<u> </u>		

		Norma	Ea	oh	Old No.
No.	Plate	Name			207
11370	825	Feed Forked Connection		40	31
11371	825	" Lifting Rock Shaft		-10	01
11372		11874		35	29
11374	830	Feed Lifting Rock Shaft Crank with		•	
11914	000	4530 and 1861		95	
11077	830	Feed Regulator		60	208
11875	825	" Rock Shaft	1	40	21 A
11376	040	" " " 11876 with 11879		00	20
11877	893	" " Crank with 4530		60	22
11379	890	Needle Clamp Gib		15	40
11385	690	Oil Cup		80	294
11887	854	" " complete (obsolete)		25	293
11388	855	Oscillating Shaft "		25	299
11391		" " Collar with two 453c	_	10	354
11393	887 837	" " Crank with 1861			
11895	001	(obsolete)		95	44л
11396	831	Oscillating Rock Shaft with two)		
11000	001	each 11400 and 11401 (obsolete)	1	50	
11397		Oscillating Rock Shaft 11396 with	1		
11001		622c, 11398 and two 1508 (obsolete)	2	50	254
11398	827	Oscillating Rock Shaft Hinge Pin		75	256
11409	827	Lifting Presser Bar Spring		15	50
11414	859	Shuttle Driver with 4580 (obsoletc).	. 1	25	317
11415		" Race complete (obsolete)	5	50	314
11416	832	" Race Frame (obsolete)	. 4	75	815
11417	858	" " Ring "		75	316
11418		" " Slide (front)		35	318
11432		Throat Plate Body for 11438		75	i
11432		" 11432 with 219D and			
11100	0,1	11434 or 11435 for 11893	. 1	00	329
11434	862	Throat Plate Needle Plate (round	d		
11303	000	needle hole)		2() 331
11435	862	Throat Plate Needle Plate (oblon	g		
11100	000	needle hole)		2	5 882
11514	855	Arm Shaft (obsolete)	. 7	0) 277
*11515		" Side Plate (obsolete)			- 276
11517		Balance Wheel with 3470	. 2	5) 278
11518		" " Key	•	1	0 279
11519		Bed Foot Bracket	•	1	
11520		Face Plate (obsolete)	. 2	8 0	
11521		Feed Dog for Bag Handles	•	7	
1152		Lifting Presser Bar	• 1	10	
1152		" " Bell Crank	• -	15	0 807
1152		·· ·· ·· ·· ·· Adjus	t		0 0r0
1101		ing Link		15	0 856
11529	5 ——	Lifting Presser Bar Bell Crank Ac	1-		
		justing Link 11524 with 1518, 182	ю.	1 0	0 808
		and 2718	•	18	0 000
11520	3 889	Lifting Presser Bar Bell Crank Con	1-		75 -
		necting Stud.	·		10 .
		2			

			0111
No. Plate	Name		Old No.
11527 —	Lifting Presser Bar Bell Crank Con-		
	 necting Stud 11526 with 1640, 11528 and two 858c 		310
11528 862	Lifting Presser Bar Bell Crank Con-		010
11020 002	necting Stud Screw Washer		811
11529	Lifting Presser Bar Lifter (obsolete).		
11530 856	" " " " 11529 with		
11000 000	11532 and 11533 (obsolete)		302
11581 881	Lifting Presser Bar Lifter Bracket		305
11532 862	" " " Frietion		
-	Spring (obsolete)		306
11533 862	Lifting Presser Bar Lifter Friction		
	Spring Stud (obsolete)		355
11534 862	Lifting Presser Bar Lifter Screw		
	Washer (obsolete)		303
11535 862	Lifting Presser Bar Lifter Screw		904
41 COR 000	Washer Steady Pin (obsolete)		804
11537 889	Lifting Presser Bar Spring Adjusting Block with 4850 (obsolete)		301
11538 855	Needle Bar		286
11536 855 11589 856	" " Connecting Link		288
11541 889	" " " Stud		287
11542	" Clamp with 680n and 11385.		
11543 889	" " 11542 with 830, 1010		
11010 000	and two 10106		290
11544 854	Oil Cup Lamp Holder		298
11545 858	Shuttle Race Slide (back)		819
11546 859	Thread Retainer complete, Nos.633D	,	
	1560, 2049, 2103, 8905, 11547 and	1	
	two 2102	60	327
11547 ——	Thread Retainer Bracket		328
11548 862	" Eyelet for 11520 (obsolete)		
11549		5 00	
11550 854	" " 11549 with 11551		
	two each 159, 4340 and 2117 (obso		900
44884 050	lete)		322
11551 859	Thread Take-up Cam Vibrating Can Piece (obsolete)		823
11552 859	Thread Take-up Spring (obsolete)		
11552 859	" " " Regulato		UAL
11000 008	Plate (obsolete)		825
11554 862	Thread Take-up Staple (obsolete).		326
11555	Throat Plate Body for 11556		
115 56 856	" " 11555 with 11557 and		
	two 202		380
11557 856	Throat Plate Feed Way Strip (round		838
44880 088	needle hole)		
11558 855 11559 859	Vibrating Presser Bar	- 1 UU t	00%
11009 008	(upper)	. 50	885
11560 859	Vibrating Presser Bar Cap Bracke		
	(lower)		836
	· · · · ·		

No.	Plate			Old No.
11561	859	Vibrating Presser Bar Guide Bracket		33 9
11563	862	" " " Spring Stud	40	337
11564	862	es es es se	00	. 000
		Spring	02	838
11565	859	Vibrating Presser Bar Stop complete,	10	0.44
		Nos. 682D, 3146, 11566 and 11567	40	
11566	862	Vibrating Presser Bar Stop Block	25	342
11567	862			
		Washer (inside)	01	
11568	859	Vibrating Presser Foot (narrow)	1 00	
11569	859	" " (wide)	1 00	346
11570	859	" " for bag		
		handles		
11571	859	Vibrating Presser Foot for blinds	1 00	848
11572	859	" " traces		
		(narrow)	1 00) 349
11573	859	Vibrating Presser Foot for traces		
		(wide)	1 00) 850
11574	862	Thread Guard for 11588 (obsolete)	05	289
11575	856	Wrench for No. 611 (obsolete)	25	i 35 3
11576	857	Binder complete, Nos. 207, 3146, 7071,		
11010	0.91	11577 to 11579 and 11882) —
11577		Binder Bed		·
11578	857	" " Spring Guide	18	· -
11579	861	" " " Cam	50) —
11580	001	Guide complete, Nos. 175D, 760D, 771D,		
11990		1576, 2269, 11581 to 11583	4 50) _
11581	857	Guide Block	1 00) _
	857	" Bracket	5()
11582	857	" Plate		i —
11583		Arm (obsolete)		
+11628	892	Bebbin Winder Pulley Driving Wheel	50	
11760	859 859		-	
11761	008	Handle complete, Nos. 8380, 8382	3	
		and 11762) 369
11762	893	Bobbin Winder Pulley Driving Wheel	L	
11104	000	Handle Stud) —
11000	859	Bobbin Winder Pulley Driving Wheel	l I	
11763	000	Stud	10) 867
11804	862	Bobbin Winder Pulley Driving Whee	1	
11764	00.0	Stud Washer	. 0	1 868
44000	OFF	Bobbin Winder complete, Nos. 528n		
11766	855	2269, 11760, 11761, 11763, 11764 and	í	
		11768 to 11771		0 362
		Bobbin Winder Belt		
		" " " 11767 with 2502		-
		" " Frame		
11769		" " Pulley		
11770		" " Spindle		
11771				. UUNE
11792	831	Oscillating Rock Shaft with two each 11401 and 11793 (obsolete)		o 46
		11401 and 11495 (obsolete)	• I U	UF U

No.	Plate			Old No.
11827	834	Shuttle complete (obsolete)	8 00	812
11828	834	** Tension Spring (obsolete)	40	813
11831	895	Screw Driver, 5-in. blade	20	_
11832	830		1 00	
11833	889	" Dowel Pin	01	
11834	830	" " Spring	25	
11835			2 75	
11836	825	" " complete, Nos. 32D,		
11000	040		L 00	'
11007	825		2 00	
11837	-	" " " Position Pin	03	
11838	889	L'OMEION X MILLIN	1 75	
11841	827		1 10	
11842				
		622c, 11165, 11898 and two 1508 5	8 10	
11844	 ·	Thread Take-up Lever	1 20	
11845	856	" " 11844 with	1 50	821
		1010	1 50	941
11848		Oscillating Shaft Crank	30	
11849	830	" " 11848 with	75	
		1885		
11850	825		1 25	
11851	833	Shuttle (cylinder) 3-in. diam., with		
			6 00	
11852	833	Shatate Of Indexto Providence Prov	2 50	
11853	833	" " Latch	15	
11854	888	" " Spring	03	
11855	833	L Tame	2 75	
11856	830		1 75	
11857		Thread Take-up Cam	5 00	
11858		" 11857 with 2022,		
11000		11859 and two 159	6 00	-
11859		Thread Take-up Cam Vibrating Cam		
11000			1 00	
11865	855		2 00	
		" complete, 11865 with 190,		
11866		910c, 11867, 11868, 11871 to 11876		
		and two each 164p and 8800	5 75	
		Lifting Presser Bar Lifter	1 00	-
11867			100	
11868		IIIIge I III.	n	
11869	860	" " " Spring Ad- justing Block	1.00	۱. –
		Tension (wheel) complete, Nos. 850b,	1 00	
11871				
		1560, 8791, 8905, 11043, 11044 and	1 04	-
		two 8879	1 25	
11872	8 861	Thread Eyelet for 11866	05	
11878	860	" Guard " "	08	
1187-	1 857	" Take-up Spring	1	
11870	5 857		60)
11876	3 861	" " Thread		•
		Guard	10	
11879)	Spool Holder Bracket	2	
11880	0 855	" " 11879 with 11881	5	0 - 0


		21		
No.	Plate	Name Ea	ch.	Old No.
11881	857	Spool Holder Tension Spool Pin		
		complete, Nos. 851E, 1541, 8018 and		
		8019	25	
11882	861	Binder Bed Spring Guide Cam Stud.	10	
11893 -		real hog to general control -	00	
11898	8 6 0	Needle Bar Thread Eyelet	10	
11910	838	Shuttle Bobbin (solid and hardened)	25	
#1 1911		Arm	00	—
11912		** Shaft 7	00	
11913	825	" Side Cover	25	
11917	•	Oil Cup Cover	25	
11918	888	" or Wax Stripper Washer (steel)		
		for 11917	03	
11919	888	Oil Cap Thread Eyclet	05	_
11920	855	" " complete, Nos. 2205, 5480,		
		9084, 11387, 11917, 11918, 11919, two		
		8953 and three 207 1		
12002	833	Shuttle Cylinder Latch Pin	01	
25028	889	Bobbin Winder Belt Hook	01	371
25881	894	Guide	40	34
25957	895	Oiler with 41-in. spout		5704.81
25958		" Spout, 4½-in		571 "
26026	895	Screw Driver	10	393 **

THE SINGER MANUFACTURING COMPANY use and recommend exclusively the WILLIMANTIC SPOOL COTTON.

į.

._____

.

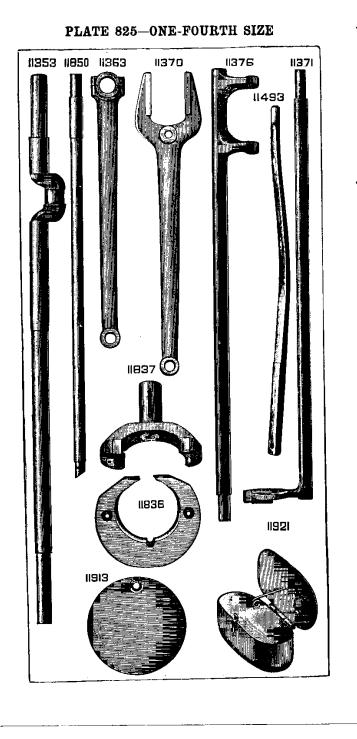


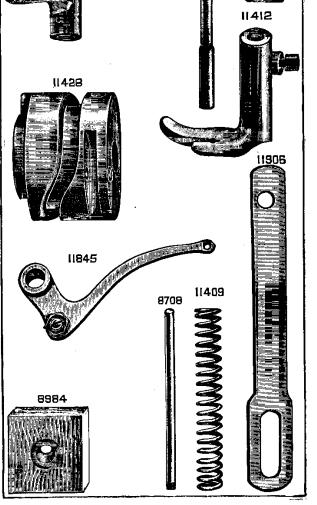



PLATE 827-ONE-HALF SIZE

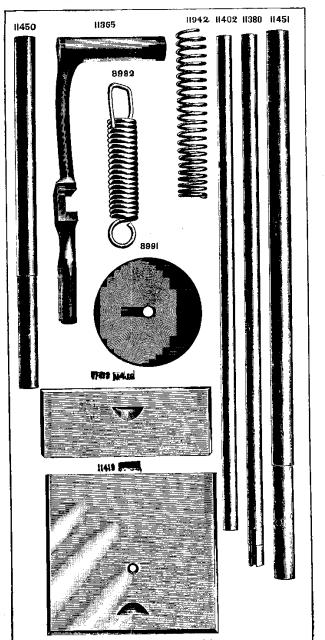



(138) d


PLATE 828-ONE-HALF SIZE


PLATE 830-ONE-HALF SIZE

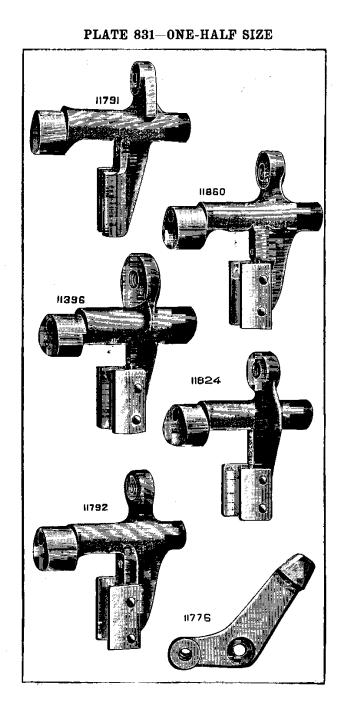

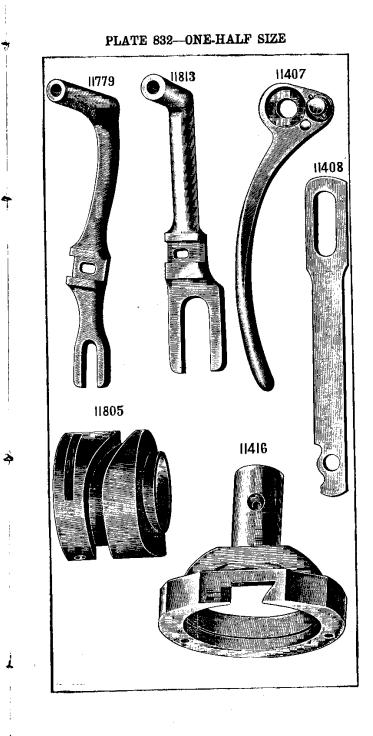

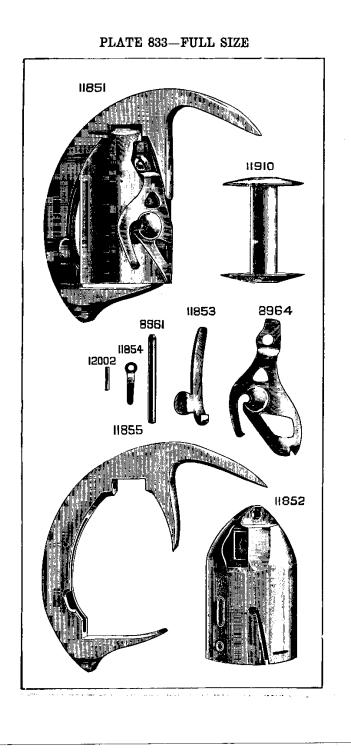

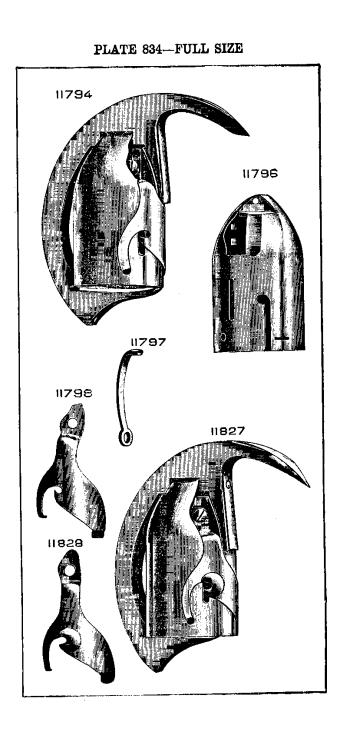

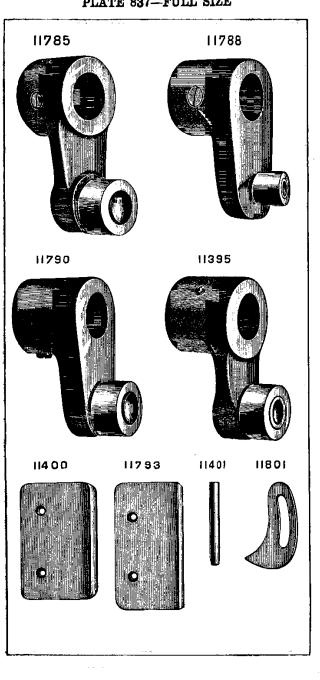

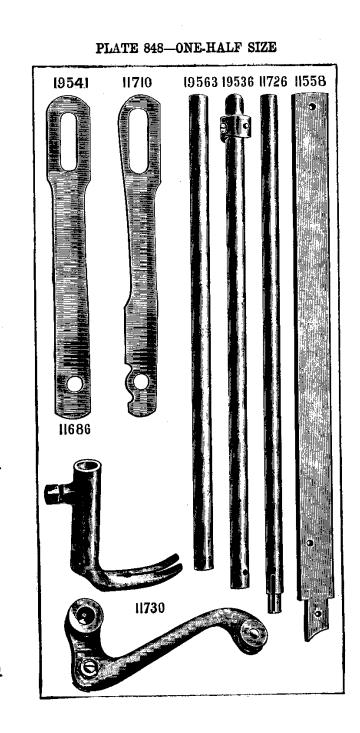
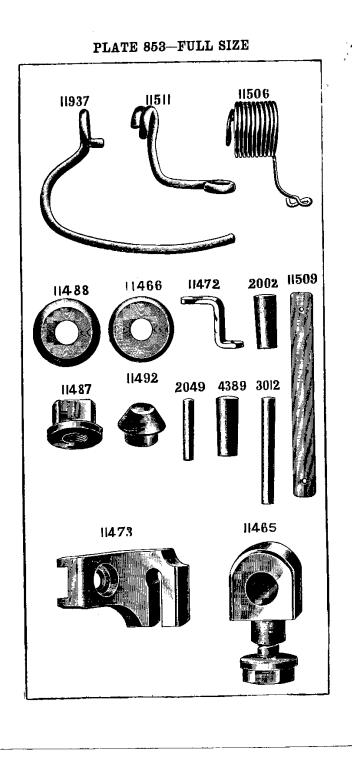
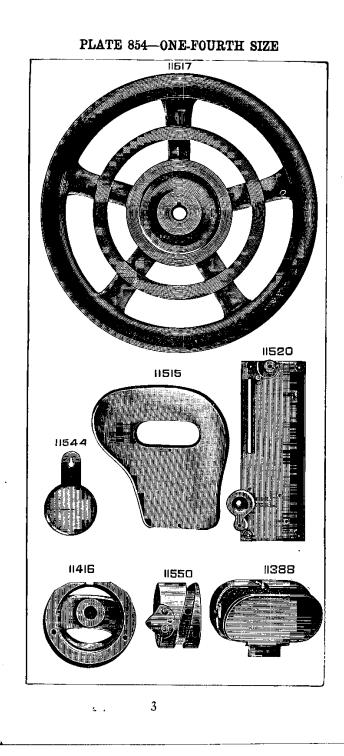
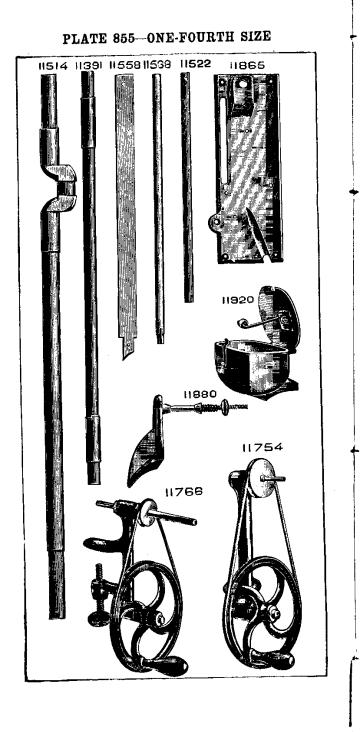
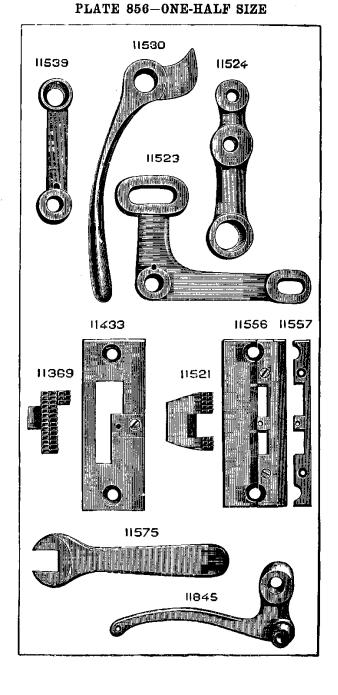



PLATE 837-FULL SIZE













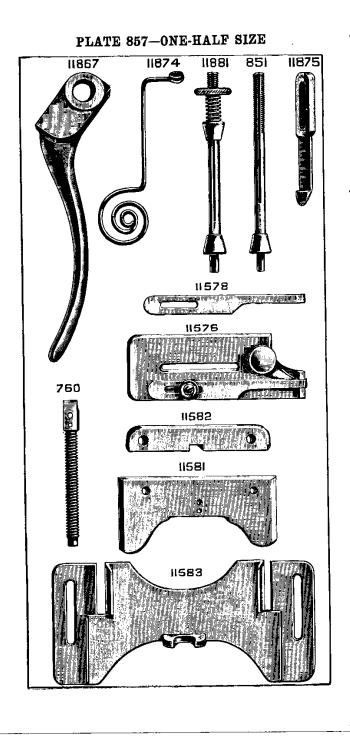

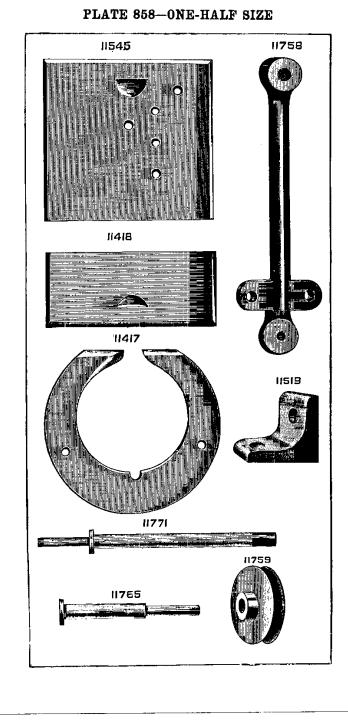

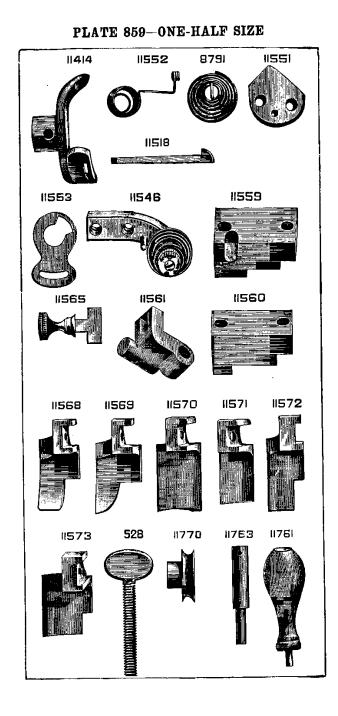

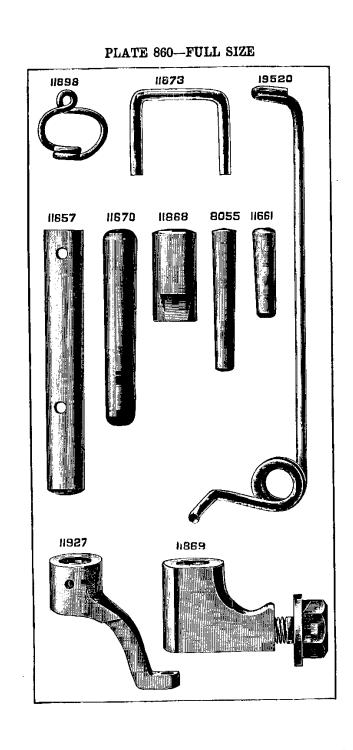

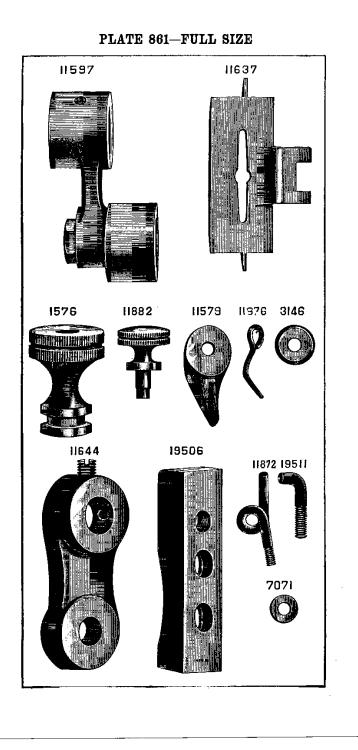

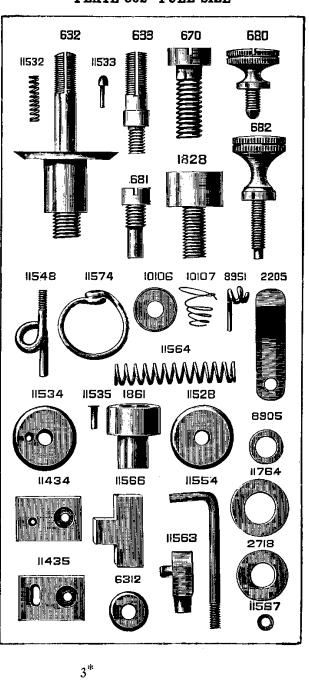
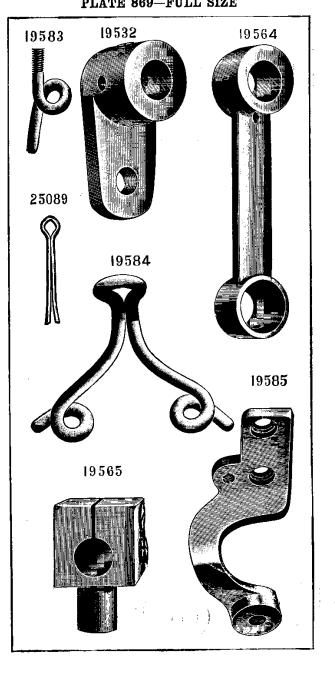


PLATE 862-FULL SIZE



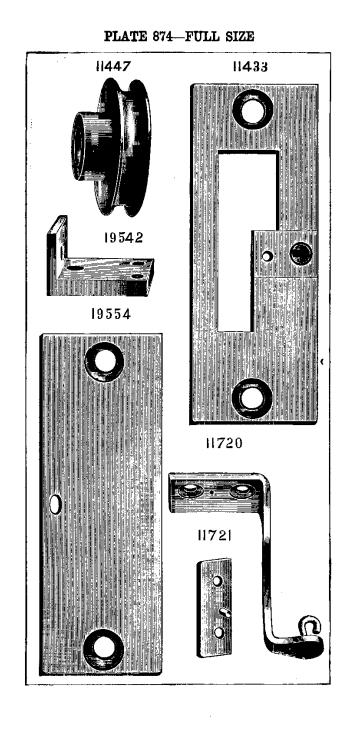
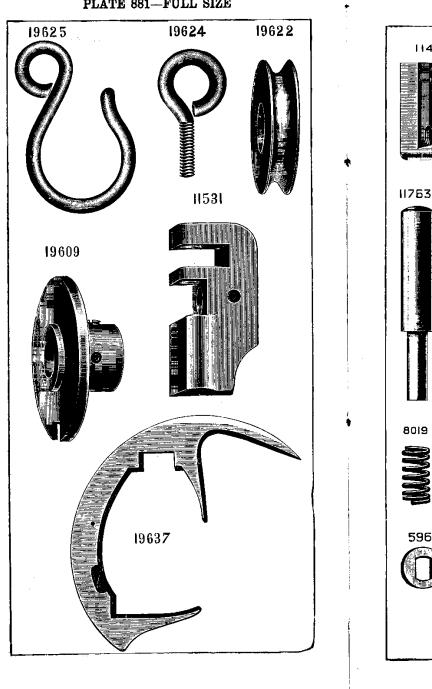


PLATE 869-FULL SIZE



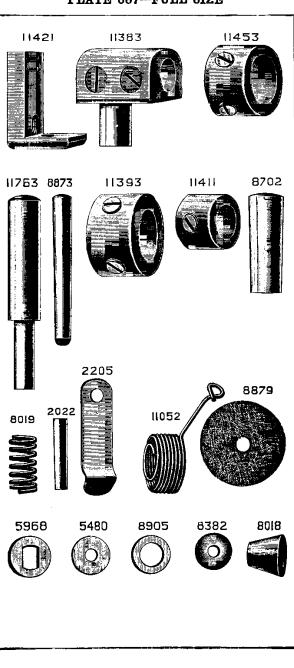
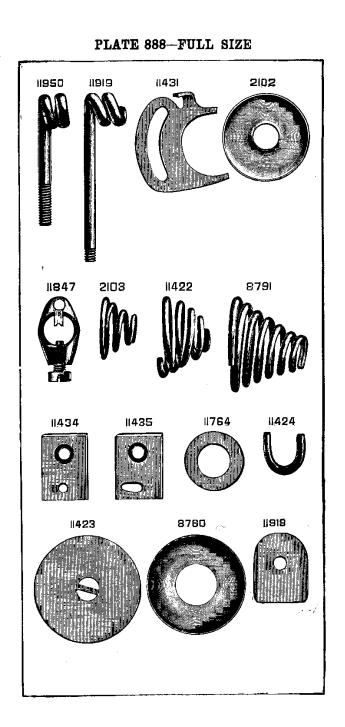
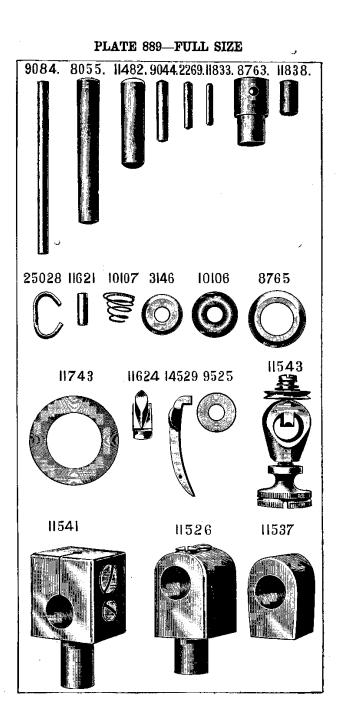
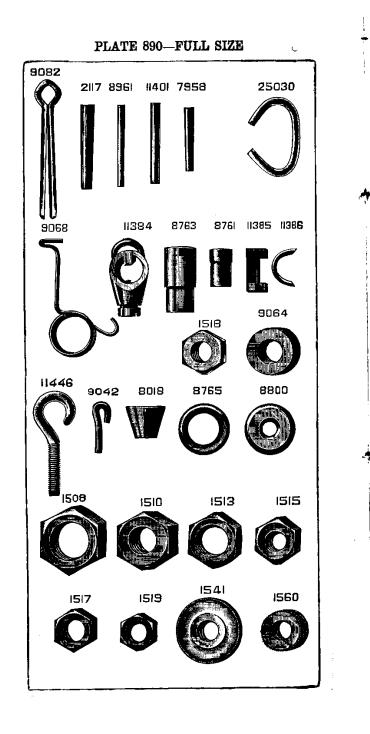



PLATE 881-FULL SIZE


PLATE 887-FULL 8IZE









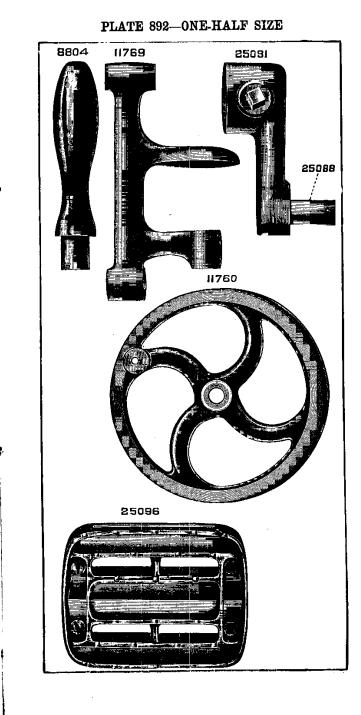

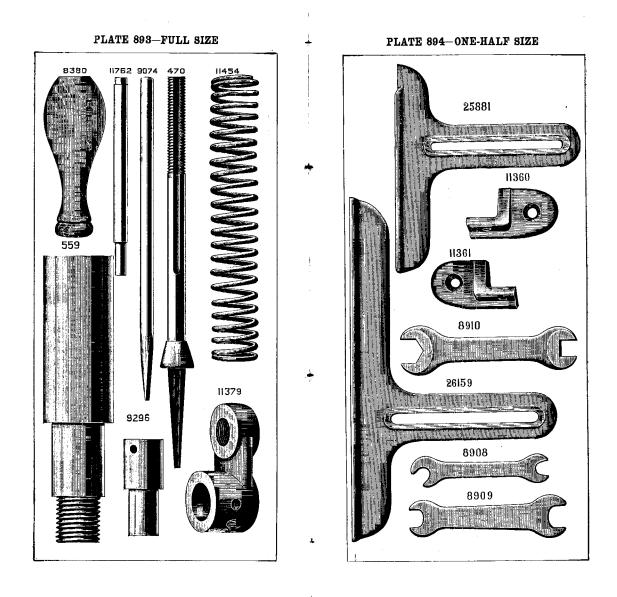

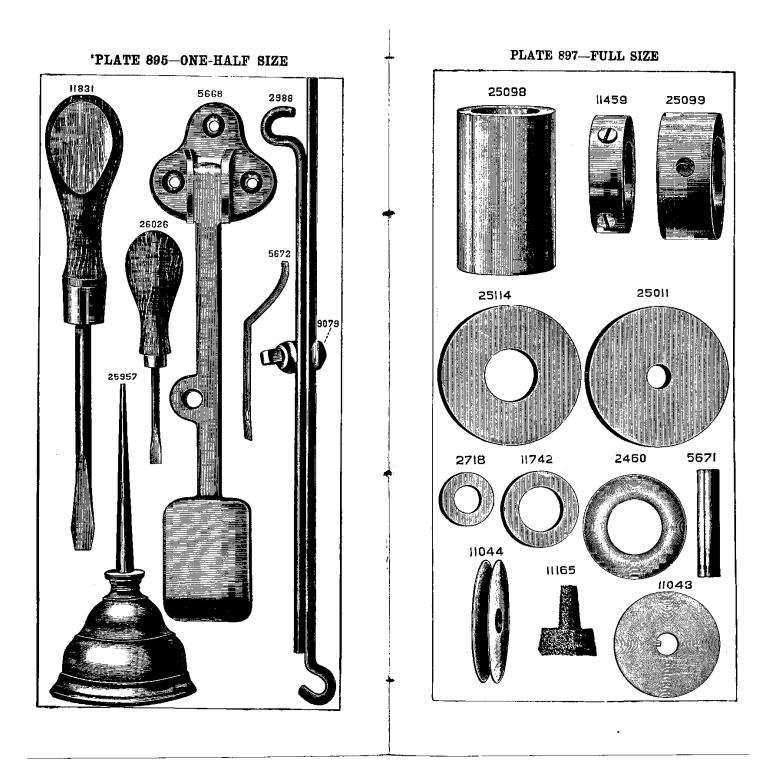

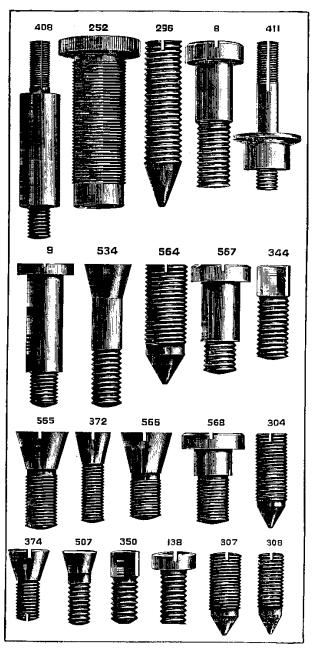

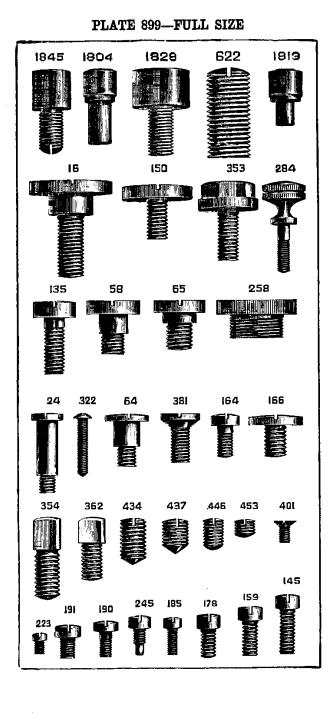


PLATE 898-FULL SIZE

