
Singer 95-60

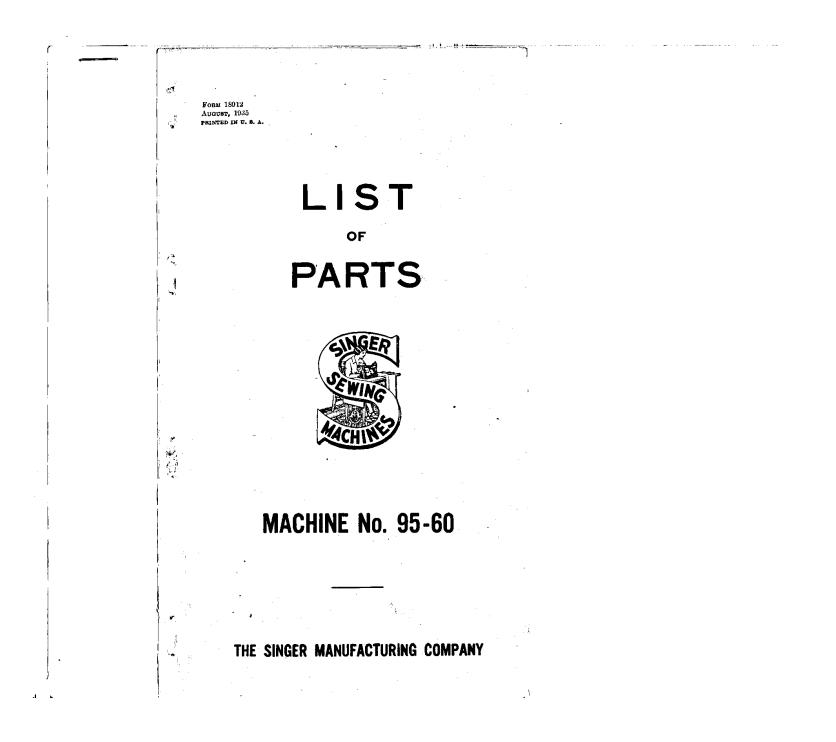

INSTRUCTIONS FOR OILING

. an lin at time

.

27576

11

ł

4

1

3

3

1

лy.

2.1

െ്ത്

æ

Oil should be applied at the places indicated by the word "OIL" and when the machine is in continuous use it should be oiled at least four times each day. All wicking must be kept saturated with oil.

Use Only Singer "Manufacturing Sewing Machine Oil (Cloth and Leather)" for general use or "Manufacturing Sewing Machine Oil (Stainless for White Goods)" where a stainless oil is desired.

Copyright, U. S. A., 1917, 1921, 1922, 1933, 1934 and 1935 by The Singer Manufacturing Co. All Rights Reserved for all Countries

INDEX Accessories		
INDEX INDEX Accessories		
INDEX INDEX Accessories		
INDEX Accessories		
INDEX Accessories		
INDEX Accessories Fage Bobbin Winders 15 Pinger Guarda 15 Pool Lifter Parts 18 Kone Lifter Parts 19 Machine Ros 55-60 Numerical List of Parts 23 Thread Unwinder 21		
INDEX Accessories		
INDEX Accessories	,	
INDEX Accessories		
INDEX Accessories. 15 Bobbin Winders. 15 Pingor Guards. 18 Foot Lifter Parts. 18 Knee Lifter Parts. 19 Machine Base. 15 Machine No. 95-60. 7 Numerical List of Parts. 23 Thread Unwinder. 21		
INDEX Accessories. 15 Bobbin Winders. 15 Pingor Guards. 18 Foot Lifter Parts. 18 Knee Lifter Parts. 19 Machine Base 15 Machine No. 95-60. 7 Numerical List of Parts. 23 Thread Unwinder. 21		
INDEX Accessories. 15 Bobbin Winders. 15 Pinger Guards. 18 Foot Lifter Parts. 18 Knee Lifter Parts. 19 Machine Base 15 Machine No. 95-60. 7 Numerical List of Parts. 21		
INDEX Accessories. 15 Bobbin Winders. 15 Pinger Guards. 18 Foot Lifter Parts. 18 Knee Lifter Parts. 19 Machine Base 15 Machine No. 95-60. 7 Numerical List of Parts. 21		
INDEX Accessories. 15 Bobbin Winders. 15 Pingor Guards. 18 Foot Lifter Parts. 18 Knee Lifter Parts. 19 Machine Base. 15 Machine No. 95-60. 7 Numerical List of Parts. 23 Thread Unwinder. 21		
INDEX Accessories	i.	
Accessories 15 Bobbin Winders 15 Pingor Guards 18 Poot Lifter Parts 19 Machine Base 15 Machine No. 95-80 7 Numerical List of Parts 23 Thread Unwinder 21		
Accessories. 18 Bobbin Finders. 15 Pinger Guards. 18 Foot Litter Parts. 18 Knee Litter Parts. 19 Machine Base 15 Machine No. 95-60. 7 Numerical List of Parts. 23 Thread Unwinder. 21		INDEX
Accessories		
Accessories		Page
Finger Guards. 18 Foot Lifter Parts. 18 Knee Lifter Parts. 19 Machine Base 15 Machine No. 95-60. 7 Numerical List of Parts. 23 Thread Unwinder. 21		Accessories15
Foot Lifter Parts. 18 Knee Lifter Parts. 19 Machine Base 15 Machine No. 95-60. 7 Numerical List of Parts. 23 Thread Unwinder. 21		Bobbin Winders 15
Knee Lifter Parts. 19 Machine Base 15 Machine No. 95-60. 7 Numerical List of Parts. 23 Thread Unwinder. 21		Finger Guards 18 Foot Lifter Parts 18
Machine No. 95-60		Knee Lifter Parts 19
Numerical List of Parts		Machine Base 15
Thread Unwinder		Numerical List of Parts
		Thread Unwinder
		•

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine Part 1s in every case the number of the single part only. Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must

be used when ordering the combination. Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

ħ

7

12

A-Hardened, Polished, Nickel Plated and Buffed B-Polished, Nickel Plated and Buffed C-Hardened Only

D-Polished Only

E-Soft, Not Polished F-Hardened and Polished

H-Blued

J-Nickel Plated Only

K-Hardened and Nickel Plated L-Brass Plated

L-Drass Flated

N-Japanned, Dull

P-Japanned, Bright

R-Merlized

T-Copper Plated

T.A-Hardened, Polished, Copper and Nickel Plated and Buffed T.B-Copper and Nickel Plated and Polished T.J-Copper and Nickel Plated Only T.K-Hardened, Copper and Nickel Plated T.M-Copper Plated and Oxidized T.L-Copper and Brass Plated U-Zinc Plated

V-Silver Plated

W-Polished and Nickel Plated

Y-Black Nickel Plated Only

Z-Chromium Plated

Z.B-Polished, Nickel Plated, Buffed and Chromium Plated Z.J-Nickel and Chromium Plated

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.

In this series:

 
1 to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers


1501 to 1800 and 51501 to 51800 are Nut Numbers 1801 to 2000 and 51801 to 52000 are Roller Numbers

2001 to 50000 and 52001 to 140001 and 142000 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts

The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED.in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.



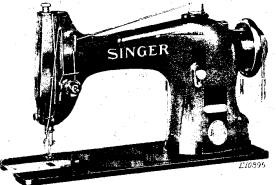

MACHINE NO. 95-60

FOR LIGHT AND MEDIUM WEIGHT FAERICS, MAXIMUM STITCH EIGHT TO THE INCH. DROP FEED. THE MACHINE IS FITTED WITH HEAVY GEAR SHAFTS, ALSO WITH BALL BEARINGS FOR THE ARM SHAFT. THE GEARS ARE LUBRICATED WITH OIL INSTEAD OF GREASE SPEED 4000.

No.	Plate	Name
*52228	·	Arm with 15404 and two each 15405 and 56015.
No	ment,	to the accuracy required for gear align- Arm cannot be supplied separately and can
	• • • •	be sent out as a unit, Arm and Bed assem-
•	bled.	
16532	21824	Arm Dowel Pin
52182	21824	" 011 Tube with 52184, for oiling 52205.
52183	21824	" " " 52184, for oiling 52024.
52180	21824	" " (long) with 52184, for oiling
		52022
52185	21824	Arm Oil Tube (short) with 42367, for oiling 52022.
52186	21824	Arm Oil Tube with 52184, for oiling 127156
		for 127193
127187	21824	Arm Oil Tube (bent) with 42367, for oiling
		127152, for 127193

--- Í

						<i>m</i>	
	PARTS FOR MACHINE 95-60	•		•		PARTS FOR MACHINE 95-60 9	
,	Name	ļ		No.	Plate	Name	
÷	Arm 011 Tube for 52149 " " 52148 with 52150, for oiling	· +	1	54897	21809	Arm Shaft (horizontal) Front Bearing Oil Cup (ball type)	
	127072 and 127074		1	52146	21824	Arm Shaft (horizontal) Front Bearing Oil Pad (braided cotton)	
	" " Packing (wick) for 52180,		1	127072	21827	Arm Shaft (horizontal) Bevel Gear with two	
Ļ.	52182,52183 and 52186			127070	21833	1036C Arm Shaft (horizontal) Bevel Gear Case	
ł	52149. Arm 011 Tube Packing (braided cotton) for		r ·	121E	21827	(two pieces) with 121E Arm Shaft (horizontal) Bevel Gear Case	
ł	52185 and 127187 Arm Screw (back)			1036C	21809	Screw Arm Shaft (horizontal) Bevel Gear Set	
,	" (front) " Shaft (horizontal) with 127067 for	N	ł	144D	21827	Screw Arm Shaft (horizontal) Screw	1
	52204			127058	21803	" (upright)	
	Arm Shaft (horizontal) 52173 with 52214,			52492	21804	" " Bushing (lower)	
	for 52174		, N	4320	21809	" " " Set Screw	
	Arm Shaft (horizontal) 52204 with 52218		74	52493	21804	." " " (upper)	
	and 127152		, I	4350	21825	""""""" " Bet Screw	
\$	Arm Shaft (horizontal) Back Bearing 011		ι. -	127073	21827	" " Bevel Gear (lower)	
	Cup (ball type)			12/0/3	ETOE !	with two 1259C	
1	Arm Shaft (horizontal) Back Bearing Oil	I		10500	01000		
t	Pad (braided cotton)	,		12590	21809	Arm Shaft (upright) Bevel Gear (lower) Set	
5	Arm Shaft (horizontal) Ball Bearing (back)	1	}	127074	21827	Screw Arm Shaft (upright) Bevel Gear (upper) with two 1259C	
	Cover Arm Shaft (horizontal) Ball Bearing (back)	:		1259C	21809	Arm Shaft (upright) Bevel Gear (upper) Set	
,	Cover 127143 with 127145	i	<u>}</u>			Screw	
	Arm Shaft (horizontal) Ball Bearing (back)	1	¥	127146	21806	Arm Side Cap	
	Cover 011 Lead		3	219J	21825	" " Screw	
	Arm Shaft (horizontal) Ball Bearing (back)	<i>,</i>	સ	127079	21833	" Cover	
,		•		50053J	21827	" " Thumb Screw	
	Cover Screw		a k	12403	21803	" Spool Pin and Thread Eyelet	
)	Arm Shaft (horizontal) Ball Bearing (back)			8879	5936	" " Washer (cloth)	
	Locking Pin.	ų.		127192	21833	" Top Cover	
) ·	Arm Shaft (horizontal) Ball Bearing (back) Locking Pin Cone	~	1. 19 6 2. 1	127193	21833	" " 127192 with 12403, 52186 and	
	Arm Shaft (horizontal) Ball Bearing (back)		1			127187	
,		1	i	158J	21827	Arm Top Cover Screw	
	Locking Pin Cone Screw		2	52176	21833	Balance Wheel (power) 2 3/16 in. pulley	
2	Arm Shaft (horizontal) Ball Bearing (front)		1			with two 448C	1
)	Comon		-	448C	21825	Belance Wheel Set Screw	
	Cover Arm Shaft (horizontal) Ball Bearing(front)			*52154		Bed	
2	Cover Screw		4	No		bue to the accuracy required for gear align-	
5	Arm Shaft (horizontal) Ball Bearing(front)	-	3.	,	only	be sent out as a unit Arm and Bed assem-	
_	Key				bled		
5	Arm Shaft (horizontal) Flanged Bushing		ş.	12431		Bed Slide	
	(back)		v.	4307	21803	" " Spring	
5	Arm Shaft (horizontal) Flanged Bushing	•	b 🖛 👘	725J	21827	" " Screw	
	(back) Set Screw		ý.	12432	21806	Bed Slide complete, Nos.4307,12431 and two	
	49 		8			725J	
		2.	8.1				
		P1	3				
	· · · ·						

52149..... 42367 21824 Arm 011 Tube Packin 52185 and 127187 116E 21824 Arm Screw (back) ... " " (front). 868E 21824 21831 " Shaft (horizor 52204..... Arm Shaft (horizon ---for 52174..... ----Arm Shaft (horizon and 127152.... 21809 Arm Shaft (horizon Cup (ball type) 21824 Arm Shaft (horizon Pad (braided cot 127011 21825 Arm Shaft (horizont -----Cover..... 127144 21833 Arm Shaft (horizont Cover 127143 wi Arm Shaft (horizon ----Cover Oil Lead. 219J 21825 Arm Shaft (horizon

8

No.

52148

52149

56015

52184

52150

52173

52204

52174

54897

52146

*127143

*127145

52486

52487

127066

127067

52490

21825

21825

21825

21825

21825

446C 21825

401E 21825

4480 21825

127009 21825

Plate

21824

21824

21824

No	Plate	Name
No.	21827	Feed Lifting Rock Shaft Crank Clamping
157J	51061	Screw
1012	21827	Feed Lifting Rock Shaft Crank Roller and
1813	STOP!	Stud
50191C	21827	Feed Lifting Rock Shaft Screw Center
52097		" " " " " 501910
0.0007		with 1513J
1513J	21827	Feed Lifting Rock Shaft Screw Center Nut.
52074	21828	" Regulator with 50083C
52118		" 52074 with 52073
1128E	21826	" " Hinge Screw
818D	21826	* * Thumb Screw
52068	21831	" Rock Shaft
52069		Feed Rock Shaft complete, Nos. 29633 and
		52068
29633	21826	Feed Rock Shaft Crank with 157J
157J	21827	CISTIDUUS DOLAW
50191C	21827	SCIEW CERCELSSON
52097		SOIAIC MIC
		1513J
1513J	21827	Feed Rock Shaft Screw Center Nut
25878	21832	Guide
50190J	21827	" Thumb Screw
52155	21803	Needle Bar (hollow) with 857H
52199	21803	" " " " " Set Screw
1133E	21809	" " (upper)
52014	21803	" " " Set Screw
1133E	21809	" Connecting Link with 52207
52205	21804	" " " 52205 with 2404
52206	21809	
775E	21809	" " " Lubricating Pa
52207	21007	(wood)
24041	21804	Needle Bar Connecting Stud with 207E
24041 207E	2834	" " " Clamping Screw
52213	21831	" Crank with 1036C, 1037C and 1065
52214		" " 52213 with 401E and 12700
10650	21826	* / * * Position Screw
857H	21809	" Set Screw
*52201		Oil Absorbent (wick)
52202	21807	" " 52201 with 52203, fo
		lower cavity in head of arm
*52203		Oil Absorbent (wick) Wire
127133	21826	" Tube with 52045
127091	21826	" Bracket
52167	21832	12/091 #101 12/100, 10
		oiling Feed Connecting Link
52045		Oil Tube Packing (wick)
12391	21831	Presser Bar (hollow)
		* '

. 10	-	ADD DOD MAGUINE OF 10
10	, P	ARTS FOR MACHINE 95-60
	Plate	Name
		Plate
	21809 "	Screw
	21807	" Thread Guard (lower)
226J 2	21809 "	" " " Screw
52170 2	21907 "	" " (upper)
226J 2	21809 "	", " " Screw
52052 2		Plate complete, Nos.52051,52053,5217
501007 0		d two 226J
		Plate Thumb Screw
		Bar
0100 2	21827 "	" Screw Center
		313C with 1519J
	1909	" " " Nut
		Connecting Link
	1827	"Hinge Screw
	21827 "	Nut
	21827 "	Stud
	21827 "	Set Screw.
52031 2		Dog, 19 teeth (24 teeth to the inch
		r 52032 and 52033
		Dog Screw
52218 2		and Feed Lifting Eccentric with 4480, 990, 52210 and 52211
52210 2		and Feed Lifting Eccentric Lubricat
		g Pad (long) wood
52211 2		and Feed Lifting Eccentric Lubricat-
		g Pad (short) wood
12990 2		and Feed Lifting Eccentric Position
		rew
		and Feed Lifting Eccentric Set Screw.
	21826	S100V0
		Forked Connection
52085 -		" 24037 with 3750
1		18J and 52165
		Forked Connection Hinge Screw
15185 2	1827 "	" " " Nut
52065 2	1831 * :	Lifting Rock Shaft
- 52066 -		Lifting Rock Shaft complete, Nos. 376 and 52065
127156 2	1832 Feed	Lifting Rock Shaft Connecting Rod
		th two 966E
966E 2		Lifting Rock Shaft Connecting Rod Car
•		rew
3750 2	1827 Feed	Lifting Rock Shaft Connecting Roc
1		nge Screw
1518J 2		Lifting Rock Shaft Connecting Rod nge Screw Nut
12376 2		Lifting Rock Shaft Crank with 157J
		1 1813
· · · · ·	div	

- J

Ķ

. . . I

v į k

i T

. **.** .

¥

1.

.

.

and a second constrained

and the second second

الم الم الم الم الم

			× ;				
12		PARTS FOR MACHINE 95-60	-	ì			PARTS FOR MACHINE 95-60 13
No.	Plate	Name	;				· · · · · · · · · · · · · · · · · · ·
52338	5936		-		No.	Plate	Name
02000	0900	Presser Bar Guide Bracket with 223C and			52018	21808	Rotating Hock Bobbin Case Holder Position
		453C		1			Bracket
453C	5936	Presser Bar Guide Bracket Set Screw			704J	21809	Rotating Hook Bobbin Case Holder Position
52016	5936	" Lifter		i			Bracket Screw
689C	5936	" Hinge Screw			52475		Rotating Hook Bobbin Case Locating Plate.
1520J	5936	" Nut					KOTATING HOOK DOODIN CASE DOCATING FIRTE.
12327	5936	" Lifting and Releasing Lever			52476		
10007	0300						Rivet
		Bracket			40274	21808	Rotating Hook Section
127108	21807	Presser Bar Spring			1367D	21808	" " Screw
11170	5936	Washer			12530	21809	" Set Screw
62527	21809	Foot Hinge Pin	-		52156	21831	" " Shaft
24544	21826	Plate	,		127004	21804	" Bushing (back)
24982		Shank	P.		127043		127004
26231		" Spring		.	12/040		
24983	5867				50045		and 52045
\$49.00	0007	Presser Foot (spring hinged) complete, Nos.		. <u>8</u>	52045		Rotating Hook Shaft Bushing (back) Packing
		24544,24982,26231 and 62527	× .	, 16 ,			(wick)
176J	21809	Presser Foot Screw		÷	11430	21809	Rotating Hook Shaft Bushing (back) Set
688J	21826	Pressure Regulating Thumb Screw		:			Screw
127095		Rotating Hook with three 1253C	1		127005	21804	Rotating Hook Shaft Bushing (front)
127096		" 127095 with 127102 and four		(°	127044		". " " " 127005
	w., .	1053D		{			with 52045
*127119		Rotating Hook 127096 with 40274,127100 and		2	54897	21809	Rotating Hook Shaft Bushing (front) 011
10/110		three 1367D		1	04007	21000	Cup
127097	21808	Rotating Hook 127096 with 40274 and three		1	52045		
12/09/	21000			4	52045		Rotating Hook Shaft Bushing (front) Pack-
	. 1	1367D (For Agents Only)					ing (wick)
127098		Rotating Hook 127119 with 52473		1	1148C	21809	Rotating Hook Shaft Bushing (front) Set
40264	21808	" Bobbin		ľ			Screw
52472		" " Саве		l.	127073	21827	Rotating Hook Shaft Bevel Gear with two
-52481		" " 52472 with 591E		ŧ.			12590
	,	1380D and 40394) e	127007	21833	Rotating Hock Shaft Bevel Gear Case (two
40392	21808	Rotating Hook Bobbin Case Latch		È			pieces) with 121E and 50234D
125320	21808	Lever			50234D	21826	Rotating Hook Shaft Bevel Gear Case Plug
				§ 2.	002040	21020	
2974	21808	Ful-	***	Sec.			Screw
		crum Pin		ļ.	121E	21827	Rotating Hook Shaft Bevel Gear Case Screw,
2975	21808	Rotating Hook Bobbin Case Latch Spring		4	1259C	21809	, Set Screw.,
592E	21808	" " Stop Screw		1	127102	21808	" Thread Guard
40393		" " Hinge, Nos.2974,			1053D	21809	" " Screw
		40392 and 125320			52337	5936	Slack Thread Regulator
591F	21808	Rotating Hook Bobbin Case Tension Regulat-		1 e	2230	5936	" " Set Screw
		ing Screw		Ý	2102	21829	Tension Disc
40394	21808	Rotating Hock Bobbin Case Tension Spring.		÷.	15600	21809	" Regulating Thumb Nut
	21808	Notating more bobbin case rension opring.		1.	32572	21829	
1380D				1			Releasing Disc
52473	21808	Rotating Hook Bobbin Case complete, Nos.		V.	43944	5936	Lever
		592E,2975,40393 and 52481		1	12398	5936	Hinge Pin
127099		Rotating Hook Bobbin Case 52473 with			12329	5936	" " Spring
		127100	•	1	32574	21826	• • Pin
127100	21808	Rotating Hook Bobbin Case Holder with			13710	21829	* Spring
		52475 and two 52476		}	50304C	21829	* Stud
					52098		* 50304C with 1560C
		4 - 1 	240	1 1-			· · · · · · · · · · · · · · · · · · ·
				1 -			

.

4

.

.

MACHINE BASE

No.	Plate	Name
24106	4761	Bed Frame Cushion (felt)
158E	21827	" Screw
24107	4761	" " Hinge Connection
9261	4761	" " " Pin
970D	4761	" " Thumb Screw
24108	5876	Bed Frame complete, Nos.970D, two each 9261
		24107, four each 158E, 24106 and six wood screws 1 1/4 in. No. 12

ACCESSORIES

No.	Plate	Name
12361	4761	Machine Hinge Connection
44139	4761	" " Plate
44140		Machine Hinge complete, Nos.12361,44139
		and merlized wood screw 1 1/4 in. No.14
12405	4761	Machine Rest (felt)
120342	21835	Oiler (copper plated) with 120343
120343	21835	" Spout, 3 1/2 in. long
26026	21835	Screw Driver (large)
26485	21835	" (small)
8909	21835	Wrench for 1513 and 1518
8908	21835	" 1519 and 1520

BOBBIN WINDERS

BOBBIN WINDER (SWINGING AUTOMATIC, LEFT HAND)

No.	Plate	Name
41913	21834	Bracket with 457C
41583	21834	Frame with 457C
34105	21834	" Hinge Pin
457C	21829	" " Set Screw
41914	21834	" Spring
41585	21834	Pulley with 171D
17 1 D	21829	" Set Screw
41586	21834	Spindle
41587	21834	Stop Latch
42614	21834	" Hinge Stud
457C	21829	" " " Set Screw
7958	21829	" " Stop Pin

14 .		PARTS FOR MACHINE 95-60
No.	Plate	Name
50305C	21826	Tension Stud Set Screw
52092		Tension complete, Nos.13710,32572,32574,
		52082,52083,52098 and two 2102
52171	21807	Thread Eyelet for 52199
52027	21807	" Guard (side of arm)
52454	21804	* Retainer
624C	21809	" * Set Screw
52215		Thread Take-up complete, Nos. 11204, 52025
		and 52217
52216	21804	Thread Take-up Crark
52217		" " 52216 with 775E and
		52206
10370	21809	Thread Take-up Crank Position Screw
10360	21809	" " Set Screw
52022	21807	Lever with 52130
52023	21809	" " Hinge Pin
52024	21804	Link
11204	21804	" " Hinge Pip
4350	21825	" " " " " Set
		Screw
52130	21807	Thread Take-up Lever Thread Eyelet Bushing
52025		Thread Take-up Lever complete, Nos. 52022
	•	to 52024
52082	21829	Thread Take-up Spring
52083	21829	Regulator with 50305C
4480	21825	" Set Screw
52032		Throat Plate, large needle hole, for 52031
52033	21829	small needle hole, for 52031
N		nroat Plate No. 52033 is sent with this ma- o unless otherwise stated on order.
691 F	21829	Throat Plate Screw
*15404	61069	Trade Mark
15405		" Rivet
24079	5877	Drip Pan
LARV 10	0017	2p

.

.

ъţ.

X . #

.....

-

1

₩.

. فلعب . *p*e

4

1.0

1.

**.

14

.

BOBBIN WINDER

17

No.	Plate-	Name
41346	2834	Stop Latch Lever
1430D	2834	" " Hinge Screw
2455	2834	Tension Disc
1562J	2834	" Regulating Thumb Nut
418E	2834	" Screw Stud
10141	2834	* Spring
2106	2834	Thread Guide
60456		Bobbin Winder, Nos.152F,207D,1429D,1550H,
		41339 to 41346 and three 1430D
41347	2833	Bobbin Winder, Nos.60456 and two each 9331
		and wood screws 1 in. No. 10 R.H.B
41348		Bobbin Winder (swinging automatic, right
		hand) complete, Nos.27308 and 41347
9331	2834	Bobbin Winder Washer

BOBBIN WINDER (SWINGING AUTOMATIC, RIGHT HAND) FOR POWER TABLE

No.	Plate	Name
225433	3469	Bobbin Winder and Tension Bracket Base
225453	3470	Frame with 202277 and 225438
225454	21830	" Hinge Pin
202277		" Oil Packing (wick)
225438	21830	" " Well Cap
225455	21830	" Spring
225456	21830	" " Plunger
202473	3470	Pulley with 200380C
2003800	21830	" Set Screw
225381	3470	Spindle
225444	21830	Stop Latch
200056E	21830	" Screw
225458	21830	" " Thumb Lever
225459	21830	" " Hinge Stud
225459	21830	" " Joint Stud
202478	21830	" " Trip Lever
200299H	21830	" " " Hinge Screw
225461	21830	Tension Bracket with 201499B
200082D	21830	" " Screw
228026		" " Washer
2102	21829	" Disc
202407	21830	" Spring
201499B	21830	" Stud
201572B	21830	" Thumb Nut
22 5462		Tension Bracket complete, Nos.201572B, 202407,225461 and two 2102

16		BOBBIN WINDER
No.	Plate	Name
41588	21834	Stop Latch Tripping Arm with 185H
185H	21829	Clamping Screw
150459	21834	Tension Bracket with 460C
150460		Tension Bracket complete, Nos.12403, 41593
		to 41595,52186,127187,150459 and two
		2455
158J	21827	Tension Bracket Screw
12403	21803	Spool Pin and Thread Eye-
		let
8879	5936	Tension Bracket Spool Pin Washer (cloth)
2455	2834	Disc
41593	5936	* Spring
41594	5936	" Stud
460C	21829	" " Set Screw
41595	5936	" Thread Guide
60845		Bobbin Winder, Nos.7958,34105,41583,41585
Ċ.		to 41588,41913,41914 and 42614
41915	21834	Bobbin Winder 60845 with 880E and 25446
150461		Bobbin Winder (swinging automatic, left
		hand) complete, Nos. 41915 and 150460
3088	21829	Bobbin Winder Screw
25446		" " Washer

.

BOBBIN WINDER (SWINGING AUTOMATIC, RIGHT HAND)

No.	Plate	Name
41339	2833	Base
41340	2833	Frame
1429D	2834	" Hinge Screw
41341	2833	" Spring
207D	2834	" Screw
41342	2833	Pulley with 200F
200F	2834	" Set Screw
41343	2834	Spindle
27306	2834	Spool Pin
27307	2833	" Stand
27308	2833	Spool Stand complete, Nos.418E,1562J,2106,
*		// 10141,11241,27306,27307 and two each
		2455 and wood screws 1 in. No. 10
11241	2833	Spool Washer (cloth)
41344	2834	Stop Latch
41345	2834	" " Finger
152F	2834	" " Screw
1430D	2834	" " Hinge Screw
1550H	2834	" " " Nut

2 3

* * *

٠

• \ A

16

×

<u>بو</u>

u } ≠

سة إلي

BOBBIN WINDER

No. Plate 225382 3469

~

18

.

Bobbin Winder complete, Nos. 200056E, 200082D 200299H, 202473, 202478, 225381, 225433, 225444, 225453 to 225456, 225458, 225468, 228026, two each 225459 and wood screws 3/4 in. No. 12 R.H.B.

Name

FINGER GUARDS

No.	Plate	Name
121326	21816	Finger Guard
36819	21816	" Friction Washer
36820	21816	Holder with 1961
-196J	21816	" " Screw
50316J	21816	" Set Screw
121327	21816	Finger Guard complete, Nos. 36819, 36820,
		50316J and 121326
121345	21816	Finger Guard
120858	21816	" Holder with 50302J
50302J	21816	" " Screw
236J	21816	" " Set Screw
121346	21815	Finger Guard complete, Nos. 120858, 121345
		and two 236J

FOOT LIFTER PARTS

No.	Plate	Name
5596	5878	Bell Crank
56848		" 5596 with 5599 and 5601
5599	5878	" " Bracket
178E	21828	" " Screw
5601	4761	" Hinge Pin
5735	4761	" Spring
5598	5878	Bell Crank complete, Nos. 5735 and 56848
5670		Chain, length 26 in. to 35 in., with 56864
		and 56865
No	te: W	hen ordering No. 5670, state length required
4879	5878	Chain Connecting Link
56864	21828	" Hook (large)
56865	21828	" " (small)
16510	5878	Lifting Lever with 448C
52028	5878	" " Connecting Rod
12416	4761	" " Joint

FOOT LIFTER PARTS

A N.L.

ļ

(a) (a)

1

. .

2

4

-5

لير

e;

*

No.	Plate	- Name
76D	4761	Lifting Lever Connecting Rod Joint Hinge
		Screw.
1521J	4761	Lifting Lever Connecting Rod Lock Nut
802D	21828	" Hinge Screw
12241	5936	* * Link
766D	21828	" " Hinge Screw
12240	5936	" " Pin
448C	21825	" " Set Screw
2763	5876	Rock Shaft
12242	5876	" " Hanger with two wood screws 1
		in. No. 10
6337	5876	Rock Shaft Lifting Bracket with two 356C
12243	.5876	" " Hook
7125	5876	" " Hook
356C	21828	" " " Set Screw.
356C	21828	" " " Set Screw
2770	5876	" " Stop Dog with 356C
3560	21828	" " " Set Screw
4880	5876	Rock Shaft complete, Nos. 2763, 2770, 7125.
		12243 and two each 6337 and 12242
4881	5876	Treadle
4882	5878	" Shaft
4883	5878	" Spring
4884	5876	* Stand
4885	5876	Treadle complete, Nos.4879,4881 to 4884
		and two wood screws 1 in. No. 16
52029		Foot Lifter complete, Nos. 76D, 766D, 802D.
	•	1521J,4880,4885,5598,5670,12240,12241,
		12416,16510,52028 and two 178E

KNEE LIFTER PARTS

No.	Plate	Name
5596	5878	Bell Crank
56848	~	" 5596 with 5599 and 5601
5599	5878	" " Bracket
178E	21828	" " Screw
5601	4761	" " Hinge Pin
5735	4761	" Spring
5598	5878	Bell Crank complete, Nos. 5735 and 56848.
16510	5878	Lifting Lever with 448C
52028	5878	" Connecting Rod
12416	4761	" " Joint
76D	4761	" " " Hinge
		Screw
1521J	4761	Lifting Lever Connecting Rod Lock Nut

19

• •

THREAD UNWINDER

i

21

FOR TWO SPOOLS OR TWO LARGE CONES OF THREAD

No.	Plate	Name
225257	20335	Spool Rest with 201018C
150203	20335	" Cushion (felt)
225388	20335	" " Rod
2003830	21830	" " Set Screw
2010180	21830	" " Set Screw
202490	20335	" Stand with 200383C
225391	20335	Thread Guide
201696J	21828	" Lock Nut
225326	21828	" " Position Cup
225324	20335	" Rod with 208E and 225322
208E	21828	" " Screw
225322	21830	" "Washer
225258	20335	Thread Unwinder complete, Nos. 201696J,
		202490,225257,225324,225326,225388, two
		each 150203, 225391 and three wood
		screws 7/8 in. No. 12
27739	7234	Thread Cone (wood) for large cones
225390	7234	" Holder, for inverted cones
No	te: No	s. 27739 and 225390 are used with, but not
	inclu	ded in 225258.

20		KNEE LIFTER PARTS
No.	Plate	Name
802D	21828	Lifting Lever Hinge Screw
12241	5936	Link
766D	21828	" " Hinge Screw
12240	5936	" " Pin
448C	21825	" " Set Screw
2759	5877	" Rod with 2761
2761	21828	" Cap (washer)
2762	21828	" Collar with 362C
3620	21828	" " " Set Screw
2760		Lifting Rod complete, Nos. 2759 and 2762
2763	5876	Rock Shaft
12242	5876	" " Hanger with two wood screws 1
100/36	0070	in. No. 10
2765	5877	Rock Shaft Knee Arm for 2768
6335	5877	
2766	5877	
3560	21828	* * * * [*] Set Screw
2768	03013	Rock Shaft Knee Arm complete, for 2777,
2700		Nos. 2765 to 2767
6336		Rock Shaft Knee Arm complete, for 19168.
0000		Nos. 2766, 2767 and 6335
2767	5877	Rock Shaft Knee Plate with 356C
3560	21828	-
2769	5877	" " Set Screw
2769 356C		Lifting Arm with 356C
6337	21828	Set Screw
	5876	Bracket with two 356C
2778	5877	Hook
356C	21828	" " " Set Screw.
3560	21828	Set Screw
2770	5876	Stop Dog with 356C
3560	21828	" " Set Screw
2777	5877	Rock Shaft complete, for 52030, Nos. 2763,
19168		2768,2770,2778,6337 and two 12242
19100		Rock Shaft complete, for 52038, Nos. 2760,
		2763,2789,6336 and two each 2770 and 12242
52030		Knee Lifter complete (power table) Nos.
02000		76D,766D,802D,1521J,2777,5598,12240,
		12241,12416,16510,52028 and two 178E
52038		Knee Lifter complete (bench stand) Nos.
02030		
		76D, 766D, 802D, 1521J, 5598, 12240, 12241,
		12416,16510,19168,52028 and two 178E

• .

1 4

× . .

4

.

25

.

÷.,

4

4

Υ.

•

.

R.

NUMERICAL LIST OF PARTS

. . .

.

•

-

2

2

 $\boldsymbol{\omega}^{*}$

ۍ د ر

×

÷

يې:

6

.

×.

50

	No.	Plate	Name
	76D	4761	
	700	4/01	Lifting Lever Connecting Rod Joint Hinge Screw for 52029, 52030 and 52038
	116E	21824	Arm Screw (back)
	121E	21827	" Shaft (horizontal) Bevel Gear Case
			Screw for 127070
	121E	21827	Rotating Hook Shaft Bevel Gear Case Screw
	1010		for 127007
	144D	21827	Arm Shaft (horizontal) Screw
	152F	2834	Bobbin Winder Stop Latch Finger Screw for
	IUGF	2004	60456
	157J	21827	Feed Lifting Rock Shaft Crank Clamping
		•	Screw for 12376
	157J	21827	Feed Rock Shaft Crank Clamping Screw for
			29633
۰.	158J	21827	Arm Top Cover Screw
	158E	21827	Bed Frame Cushion Screw for 24108
	158J	21827	Bobbin Winder Tension Bracket Screw
	171D	21829	" " Pulley Set Screw for 41585
	176J	21809	Face Plate Screw
	176J	21809	Presser Foot Screw
	178E	21828	Bell Crank Bracket Screw for 52029,52030
	1,00	21020	and 52038
	185H	21829	Bobbin Winder Stop Latch Tripping Arm
	1001	ETOP2	Clamping Screw for 41588
	196J	21816	Finger Guard Holder Screw for 36820
	200F	2834	Bobbin Winder Pulley Set Screw for 41342
	2070	2834	" Frame Spring Screw for 60456
	2070	2834	Needle Bar Connecting Stud Clamping Screw
	2070	2004	for 24041
	208E	21828	Thread Unwinder Thread Guide Rod Screw for
			225324
	219J	21825	Arm Shaft (horizontal) Ball Bearing (back)
			Cover Screw
	219J	21825	Arm Side Cap Screw
	2230	5936	Slack Thread Regulator Set Screw 52338
	226J	21809	Face Plate Thread Guard (lower) Screw for 52052
	226J	21809	Face Plate Thread Guard (upper) Screw for
			52052
	236J	21816	Finger Guard Set Screw for 121346
<u>к</u> , к	3130	21827	Feed Bar Screw Center for 56813
	356C	21828	Rock Shaft Knee Arm Hub Set Screw for 2766
	356C	21828	" " Plate Set Screw for 2767
	356C	21828	" " Lifting Arm Set Screw for 2769.
	3560	21828	" " Bracket Hook Set Screw
		22000	for 6337

23

1

----- .1 to max-

NUMERICAL LIST OF PARTS NUMERICAL LIST OF PARTS 24 No. Plate Name Name Plate No. Rock Shaft Lifting Bracket Set Screw for 356C 21828 775E 21809 6337.... Rock Shaft Stop Dog Set Screw for 2770 356C 21828 802D 21828 Lifting Rod Collar Set Screw for 2762..... 362C 21828 Feed Connecting Link Hinge Screw..... 3750 21827 818D 21826 Forked Connection Hinge Screw for 375C 21827 857H 21809 52085 868E 21824 Feed Lifting Rock Shaft Connecting Rod 3750 21827 880E 21829 Hinge Screw..... 966E 21827 401E 21825 Arm Shaft (horizontal) Ball Bearing(front) Cover Screw for 52214..... 970D 4761 Bobbin Winder Tension Screw Stud for 27308 418E 2834 10360 21809 Arm Shaft (upright) Bushing (lower) Set 4320 21809 Screw..... 10360 21809 Arm Shaft (upright) Bushing (upper) Set 4350 21825 1037C 21809 Screw..... Thread Take-up Lever Link Hinge Pin Set 4350 21825 1053D 21809 • Screw..... Arm Shaft (horizontal) Ball Bearing (back) 446C 21825 1065C 21826 Locking Pin Cone Screw..... 1128E 21826 Arm Shaft (horizontal) Flanged Bushing 448C 21825 1133E 21809 (back) Set Screw..... 1133E 21809 Balance Wheel Set Screw for 52178 448C 21825 1143C 21809 Feed and Feed Lifting Eccentric Set Screw 448C 21825 for 52218..... 1148C 21809 Lifting Lever Pin Set Screw for 16510..... 448C 21825 Thread Take-up Spring Regulator Set Screw. 448C 21825 1253C 21809 Presser Bar Guide Bracket Set Screw for 453C 5936 21.809 1259C 52338..... Bobbin Winder Frame Hinge Pin Set Screw 4570 21829 1259C 21809 for 41583 4570 21829 Bobbin Winder Stop Latch Hinge Stud Set 12590 21809 Screw for 41913 Bobbin Winder Tension Stud Set Screw for 4600 21829 12990 21809 150459..... Rotating Hook Bobbin Case Tension Regulat-591F 21808 1367D 21808 ing Screw for 52481..... Rotating Hook Bobbin Case Latch Stop Screw 592E 21808 1380D 21808 for 52473..... 624C 21809 Thread Retainer Set Screw..... 2834 1429D 688.T 21826 Pressure Regulating Thread Screw..... 1430D 2834 689C 5936 Presser Bar Lifter Hinge Screw..... 691F 21829 Throat Plate Screw..... 1430D 2834 704J 21809 Rotating Hook Bobbin Case Holder Position Bracket Screw..... 1513J 21827 Feed Lifting Rock Shaft Screw Center Nut 21827 Bed Slide Spring Screw for 12432..... 725J for 52097..... 766D 21828 Lifting Lever Link Hinge Screw for 52029, 1513J 21827 Feed Rock Shaft Screw Center Nut for 52097 52030 and 52038..... Connecting Link Hinge Screw Nut..... 1518J 21827

4 ÷.,

. .

The second s

Needle Bar Connecting Link Cap Screw for 52217.... Lifting Lever Hinge Screw for 52029,52030 and 52038..... Feed Regulator Thumb Screw..... Needle Set Screw for 52155..... Arm Screw (front)..... Bobbin Winder Screw for 41915..... Feed Lifting Rock Shaft Connecting Rod Cap Screw for 127156..... Bed Frame Thumb Screw for 24108..... Arm Shaft (horizontal) Bevel Gear Set Screw for 127072..... Thread Take-up Crank Set Screw for 52213 ... " Position Screw for 52213..... Rotating Hook Thread Guard Screw for 127096..... Needle Bar Crank Position Screw for 52213. Feed Regulator Hinge Screw..... Needle Bar Bushing (lower) Set Screw..... (upper) Set Screw..... Rotating Hook Shaft Bushing (back) Set Screw..... Rotating Hook Shaft Bushing (front) Set Screw..... Rotating Hook Set Screw for 127095..... Arm Shaft (upright) Bevel Gear (lower) Set Screw for 127073..... Arm Shaft (upright) Bevel Gear (upper) Set Screw for 127074..... Rotating Hook Shaft Bevel Gear Set Screw for 127073..... Feed and Feed Lifting Eccentric Position Screw for 52218..... Rotating Hook Section Screw for 127097 and 127119..... Rotating Hook Bobbin Case Tension Spring Screw for 52481..... Bobbin Winder Frame Hinge Screw for 60456. " Stop Latch Hinge Screw for 60456.... Bobbin Winder Stop Latch Lever Hinge Screw for 60456.....

25

					ç			
26			NUMERICAL LIST OF PARTS	٠.	, e .			NUMERICAL LIST OF PARTS 27
-	No.	Plate	News	•				
	1518J	21827	Name Food Formed Correction Manage Surgery Not Aver		n f	No.	Plate	Name
	10100	STOP /	Feed Forked Connection Hinge Screw Nut for	۴ ا	1	4881	5876	Treadle for 4885
	15101	63 00 7	52085	,	•	4882	5878	" Shaft for 4885
	1518J	21827	Feed Lifting Rock Shaft Connecting Rod			4883	5878	" Spring for 4885
	15101	01 000	Hinge Screw Nut.	;		4884	5876	" Stand for 4885
	1519J	21809	Feed Bar Screw Center Nut for 56813	-		4885	5876	Treadle complete, Nos. 4879,4881 to 4884
	1520J	5936	Presser Bar Lifter Hinge Screw Nut					and two wood screws 1 in. No. 16, for
	1521J ·	4761	Lifting Lever Connecting Rod Lock Nut for	· · · ·				52029
			52029, 52030 and 52038		4 .	5596	5878	Bell Crank for 56848
	1550H	2834	Bobbin Winder Stop Latch Hinge Screw Nut		1	5598	5878	Bell Crank complete, Nos. 5735 and 56848.
			for 60456		•			for 52029,52030 and 52038
	1560C	21809	Tension Regulating Thumb Nut for 52098			5599	5878	Bell Crank Bracket for 56848
	1562J	2834	Bobbin Winder Tension Regulating Thumb Nut	· · · ·		5601	4761	" " Hinge Pin for 56848
			for 27308	'n	2	5670	4/01	Chain, length 26 in. to 35 in. with 56864
1	1813	21827	Feed Lifting Rock Shaft Crank Roller and	"		5575		and 56865, for 52029
			Stud for 12376			5735	4761	Bell Crank Spring for 5598
:	2102	21829	Bobbin Winder Tension Disc for 225462		I	6335	5877	
	2102	21829	Tension Disc for 52092	A	· •	6336		Rock Shaft Knee Arm for 6336
	2106	2834	Bobbin Winder Tension Thread Guide for			0000		Rock Shaft Knee Arm Complete for 19168,
			27308			000-		Nos. 2766, 2767 and 6335
	2455	2834	Bobbin Winder Tension Disc for 27308 and			6337	5876	Rock Shaft Lifting Bracket with two 356C,
-						·		for 2777 and 4880
ʻ.,	2759	5877	150460			7125	5876	Rock Shaft Lifting Bracket Hook for 4880
	2760		Lifting Rod with 2761, for 2760	1		7958	21829	Bobbin Winder Stop Latch Stop Pin for
			Lifting Rod complete, Nos. 2759 and 2762,					60845
	0781	01000	for 19168	, i		8879	5936	Arm Spool Pin Washer (cloth)
. /	2761	21828	Lifting Rod Cap (washer) for 2759		4	8879	5936	Bobbin Winder Tension Bracket Spool Pin
	2762	21828	" Collar with 362C, for 2760					Washer (cloth)
	2763	5876	Rock Shaft for 2777, 4880 and 19168	•		8908	21835	Wrench for 1519 and 1520 (Accessories)
	2765	5877	" " Knee Arm for 2768			8909	21835	" 1513 and 1518 (Accessories)
	2766	5877	" " " Hub with 356C, for		3	9261	4761	Bed Frame Hinge Connection Pin for 24108
			2768 and 6336	.		9331	2834	Bobbin Winder Washer for 41347
2	2767	5877	Rock Shaft Knee Plate with 356C, for 2768			10141	2934	" " Tension Spring for 27308
			and 6336			11170	5936	Presser Bar Spring Washer
2	2768		Rock Shaft Knee Arm complete, for 2777,		1.2	11204	21804	Thread Take-up Lever Link Hinge Pin for
			Nos. 2765 to 2767		13			52215
2	2769	5877	Rock Shaft Lifting Arm with 356C, for			11241	2833	Bobbin Winder Spool Washer (cloth) for
			19168					27308
2	2770	5876	Rock Shaft Stop Dog with 356C, for 2777,			12240	5936	Lifting Lever Pin for 52029, 52030 and
			4880 and 19168					52038
. 2	2777	5877	Rock Shaft complete for 52030, Nos. 2763,			12241	5936	Lifting Lever Link for 52029, 52030 and
			2768,2770,2778,6337 and two 12242			100.1	0000	
2	2778	5877	Rock Shaft Lifting Bracket Hook for 2777			12242	5876	52038 Rock Shaft Hanger with two wood screws 1
	2974	21808	Rotating Hook Bobbin Case Latch Lever Ful-			166/36	0070	
			emin Pin for 40303	1		12243	5000	in. No. 10, for 2777, 4880 and 19168
. 2	975	21808	crum Pin fer 40393 Rotating Hook Bobbin Case Latch Spring for			12327	5876 5936	Rock Shaft Lifting Bracket Hook for 4880.
-		~~~~				10001	0900	Presser Bar Lifting and Releasing Lever
	307	21803	52473	i		10700	6090	Bracket
	1879		Bed Slide Spring for 12432.			12329	5936	Tension Releasing Lever Spring
	1880	5878	Chain Connecting Link for 4885	· •	4	12361	4761	Machine Hinge Connection for 44140 (Ac-
4	000	5876	Rock Shaft complete, Nos. 2763,2770,7125,		1			cessories)
			12243 and two each 6337 and 12242, for		·	12376	21826	Feed Lifting Rock Shaft Crank with 157J
			52029	- <u>-</u>	: 1			and 1813, for 52066
				-	2	-		
				· · · ·				
					1			

· · ·

				۱. ·			
		•		•			
			٠				NUMERICAL LIST OF PARTS 29
3		NUMERIGAL LIST OF PARTS					
No.	Plate	Name			No.	Plate	Name Direct Owend Entetien Western for 191307
12391	21831	Presser Bar (hollow)	•		36819	21816	Finger Guard Friction Washer for 121327 Holder with 196J, for 121327
12398	5936	Tension Releasing Lever Hinge Pin			36820	21816 21808	Rotating Hook Bobbin
12403	21803	Bobbin Winder Tension Bracket Spool Pin			40264 40274	21808	" " Section for 127097 and
		and Thread Eyelet for 150460		i	400/4	21000	127119
12403	21803	Arm Spool Pin and Thread Eyelet for 127193			40392	21808	Rotating Hook Bobbin Case Latch for 40393
12405	4761	Machine Rest (felt) (Accessories)		1	40393		" " " Hinge, Nos.2974
12416	4761	Lifting Lever Connecting Rod Joint for		N N			40392 and 125320, for 52473
		52029, 52030 and 52038		- <u>Y</u> .	40394	21808	Rotating Hook Bobbin Case Tension Spring
12431		Bed Slide for 12432		4			for 52481
12432	21806	Bed Slide complete, Nos. 4307, 12431 and			41339	2833	Bobbin Winder Base for 60456
		two 725J			41340	2833	" Frame for 60456
13710		Tension Spring for 52092			41341	2833	" " Spring for 60456
15404		Trade Mark for 52228			41342	2833	" " Pulley with 200F, for 60456
15405		" Rivet for 52228			41343	2834	" " Spindle for 60456
16510	- 30/0	Lifting Lever with 448C, for 52029, 52030	*		41344	2834	" Stop Latch for 60456
16532	21824	Arm Dowel Pin			41345	2834	Finger for 60436
19168		Rock Shaft complete, for 52038, Nos. 2760.		1	41346	2834	" " Lever for 60456.
13100		2763, 2769, 6336 and two each 2770 and		15	41347	2833	" Nos. 60456 and two each 9331
		12242		1. *			and wood screws 1 in. No. 10 R.H.B.for
24037	21832	Feed Forked Connection for 52085		1	41348		41348 Bobbin Winder (swinging automatic, right
24041		Needle Bar Connecting Stud with 207E, for			41340		hand) complete, Nos. 27308 and 41347
	• ·	52206			41583	21834	Bobbin Winder Frame with 457C, for 60845.
24079	5877	Drip Pan			41585	21834	" " Pulley with 171D, for 60845
24106	4761	Bed Frame Cushion (felt) for 24108		4,	41586	21834	" " Spindle for 60845
24107	4761	" " Hinge Connection for 24108		3	41587	21834	" " Stop Latch for 60845
24108	5876	Bed Frame complete, Nos. 970D, two each		1	41588	, 21834	" " " Tripping Arm
		9261, 24107, four each 158E, 24106 and		i i			with 165H, for 60845
		six wood screws 1 1/4 in. No. 12	٠.	· ••	41593	5936	Bobbin Winder Tension Spring for 150460
24544		Presser Foot Plate for 24983			41594	5936	" " Stud for 150460
24982		" Shank for 24983			41595	5936	Thread Guide for
24983	5867	Presser Foot (spring hinged) complete, Nos.					150460
		24544, 24982, 26231 and 62527	-	•	41913	21834	Bobbin Winder Bracket with 457C, for 60845
25446		Bobbin Winder Screw Washer for 41915		1.	41914	21834	" Frame Spring for 60845
25878 26026	21832	GuideScrew Driver (large) (Accessories)		11	41915	21834	" " 60845 with 880E and 25 446 , for 150461
26231					42367	21824	Arm Oil Tube Packing (braided cotton) for
26231	21835	Presser Foot Spring for 24983 Screw Driver (small) (Accessories)		4	46007	01004	52185 and 127187
27306	2834	Bobbin Winder Spool Pin for 27308		1.	42614	21834	Bobbin Winder Stop Latch Hinge Stud for
27307		" " Stand for 27308		ų.	10011	~_001	60845
27308		Bobbin Winder Spool Stand complete, Nos.		e *	43944	5936	Tension Releasing Lever
2.000		418E,1562J,2106,10141,11241,27306,27307		1	44139	4761	Machine Hinge Plate for 44140
		and two each 2455 and wood screws 1 in.		1	44140		Machine Hinge complete, Nos. 12361, 44139
		No. 10, for 41348					and merlized wood screw 1 1/4 in. No.
27739	7234	Thread Unwinder Thread Cone (wood) for					14 (Accessories)
		large cones	*		50053J	21827	Arm Side Cover Thumb Screw
29633		Feed Rock Shaft Crank with 157J, for 52069		s	500830	21827	Feed Connecting Link Hinge Stud Set Screw
32572		Tension Releasing Disc for 52092		- J			for 52074
32574		" "Pin for 52092	al.				
34105	21834	Bobbin Winder Frame Hinge Pin for 60845		1.1			

· · · · · ·

and a second property and a second second

......

			•	· •				NUMERICAL LIST OF PARTS 31	
3	0		NUMERICAL LIST OF PARTS						
						No.	Plate	Name	
	No.	Plate	Name			52068	21831	Feed Rock Shaft for 52069	
	50117E	21827	Feed Dog Screw	~		52069		Feed Rock Shaft complete, Nos.29633 and	
	50190J	21827	Face Plate Thread Screw		İ			52068	
	50190J	21827	Guide Thumb Screw			52073	21827	Feed Connecting Link Hinge Stud for 52118.	
	50191C	21827	Feed Lifting Rock Shaft Screw Center for			52074	21828	" Regulator with 50083C, for 52118	
			50007			52082	21829	Thread Take-up Spring for 52092	
1	50191C	21827	52097.		1	52083	21829	Regulator with	
	50234D	21826	Feed Rock Shaft Screw Center for 52097		¥.	02000	2000		
	002040	03013	Rotating Hook Shaft Bevel Gear Case Plug		ĩ	52085		50305C, for 52092 Feed Forked Connection 24037 with 375C.	
	50302J	21816	Screw for 127007.		1.	02060			
	503020 50304C	21819	Finger Guard Holder Screw for 120858		· ·	52092		1518J and 52165	
			Tension Stud for 52098			25085		Tension complete, Nos. 13710, 32572, 32574	4
	503050	21826	" Set Screw for 52083					52082, 52083, 52098 and 2102	
	50316J	21816	Finger Guard Set Screw for 121327			52097		Feed Lifting Rock Shaft Screw Center	
1	52014	21803	Needle Bar Bushing (upper)	-	5			50191C with 1513J	
2	52016	5936	Presser Bar Lifter			52097		Feed Rock Shaft Screw Center 50191C with	
	52018	21808	Rotating Hook Bobbin Case Holder Position					1513J	
			Bracket	<i>*</i>	1 mil 1	52098		Tension Stud 50304C with 1560C, for 52092.	
	52022	21807	Thread Take-up Lever with 52130, for 52025		ļ	52118		Feed Regulator 52074 with 52073	
	52023	21809	" " Hinge Pin for 52025.			52130	21807	Thread Take-up Lever Thread Eyelet Bushing	
	52024	21804	Link for 52025				v	for 52022	
	52025		Thread Take-up Lever complete, Nos. 52022			52146	21824	Arm Shaft (horizontal) Back Bearing Oil	
'			to 52024, for 52215		1			Pad (braided cotton)	
	52027	21807	Thread Guard (side of arm)		i	52146	21824	Arm Shaft (horizontal) Front Bearing Oil	
	52028	5878	Lifting Lever Connecting Rod for 52029,		1			Pad (braided cotton)	
•			52030 and 52038.		1	52148	21824	Arm Oil Tube for 52149.	
	52029		Foot Lifter complete, Nos. 76D, 766D, 802D,			52149		" " 52148 with 52150, for oiling	
			1521 I 4890 4995 5000 5000 3000, 802D,					127072 and 127074	
		÷ .	1521J,4880,4885,5598,5670,12240,12241,		i	52150	21824	Arm Oil Tube Packing (braided cotton) for	
	52030		12416,16510,52028 and two 178E					52149	
			Knee Lifter complete (power table) Nos. 76D			*52154		Bed	
	· · ·		766D,802D,1521J,2777,5598,12240,12241,	·	4 9 - 1	52155	21803	Needle Bar (hollow) with 857H, for 52085.	
	52031	21829	12416,16510,52028 and two 178E			52156	21831	Rotating Hock Shaft	
	02001	61069	Feed Dog, 19 teeth (24 teeth to the inch)			52165	21827	Feed Connecting Link for 52085	
	52032		for 52032 and 52033.	4	1	52167	21832		
	52032	21829	Throat Plate, large needle hole, for 52031	~	5	02107	21002	Oil Tube Bracket 127091 with 127133, for	
	52038		small needle hole, for 52031			52170	21807	oiling Feed Connecting Link	
	52036		Knee Lifter complete (bench stand) Nos.76D					Face Plate Thread Guard (upper) for 52052.	
			766D,802D,1521J,5598,12240,12241,12416,			52171	21807	Thread Eyelet for 52199	
			16510,19168,52028 and two 178E			52173	21831	Arm Shaft (horizontal) with 127067, for	
	52045		Oil Tube Packing (wick) for 127133					52204	
	52045		Rotating Hook Shaft Bushing (back) Packing			52174		Arm Shaft (horizontal) 52204 with 52218	
			(wick) for 127043		1			and 127152	
	52045		Rotating Hook Shaft Bushing (front) Pack-			52176	21833	Balance Wheel (power) 2 3/16 in. pulley	
			ing (wick) for 127044		1	×		with two 448C	
	52051		Face Plate for 52052			52180	21824	Arm Oil Tube (long) with 52184, for oiling	
-	52052	21832	Face Plate complete, Nos. 52051, 52053, 52170		1 .			52022	
			and two 226J		1	52182	21824	Arm Oil Tube with 52184, for oiling 52205.	
	52053	21807	Face Plate Thread Guard (lower) for 52052.	۰.		52183	21824	" " 52184, for oiling 52024.	
	52065	21831	Feed Lifting Rock Shaft for 52066			521.84		" " Packing (wick) for 52180,	
1	52066		Feed Lifting Rock Shaft complete, Nos.				· .	52182, 52183 and 52186	
			12376 and 52065		1 .				
				140	-				
					1.		`		

· • • • • • • • • • • • •

.

~

5

				9					
									•
32		NUMERICAL LIST OF PARTS						NUMERICAL LIST OF PARTS	33
No.	Plate	Name		1		No.	Plate	Name	
52185	21824	Arm 011 Tube (short) with 42367, for 011- ing 52022	4			52486	21825	Arm Shaft (horizontal) Ball Bearin Locking Pin	g (back)
52186	21824	Arm 011 Tube with 52184, for oiling 127156 for 127193, 150460				52487	21825	Arm Shaft (horizontal) Ball Bearin Locking Pin Cone	g (back)
52199	21803	Needle Bar Bushing (lower)				52490	21825	Arm Shaft (horizontal) Flanged 1	
*52201		011 Absorbent (wick) for 52202		1.		0.0100	21000	(beek)	susning
52202	21807	" " 52201 with 52203, for				52492	21804	(back)	*******
		lower cavity in head of arm		- {		52492	21804	Arm Shaft (upright) Bushing (lower	
*52203		Oil Absorbent (wick) Wire for 52202						(upper)
52204		Arm Shaft (horizontal) 52173 with 52214,		Ň		54897	21809	" (horizontal) Back Bear:	ing 011
000002				1				Cup (ball type)	
52205	21804	for 52174 Needle Bar Connecting Link with 52207, for		2		54897	21809	Arm Shaft (horizontal) Front Bear	
02200	21004			4 .			•	Cup (ball type)	
50000		52206	· • *	(Č		54897	21809	Rotating Hook Shaft Bushing (fro	nt) 011
52206		Needle Bar Connecting Link 52205 with						Cup	
		24041, for 52217				56015	21824	Arm Oil Tube for oiling 127058, for	r 52228.
52207	21807	Needle Bar Connecting Link Lubricating Pad	•			56813		Feed Bar Screw Center 313C with 15	19J
		(wood) for 52205	~			56848		Bell Crank 5596 with 5599 and 56	01. for
52210	21827	Feed and Feed Lifting Eccentric Lubricat-		1.1				5598	
		ing Pad (long) wood for 52218	•	4 (f. 17)		56864	21828	Chain Hook (large) for 5670	
52211	21827	Feed and Feed Lifting Eccentric Lubricat-		j		56865	21828	" (small) for 5670,	
,		ing Pad (short) wood for 52218		l.		60456		Bobbin Winder, Nos.152F,207D,1429D	
52213	21831	Needle Bar Crank with 1036C, 1037C and 1065C, for 52214				0.5100		41339 to 41346 and three 1430	DD, for
52214		Needle Bar Crank 52213 with 401E and					-		
		127009, for 52204				60845		Bobbin Winder, Nos.7958,34105,4158	
52215		Thread Take-up complete, Nos. 11204, 52025		,				to 41588,41913,41914 and 426	
		and 52217		1				41915	
52216	21804	Thread Take-up Crank for 52217		1		62527	21809	Presser Foot Hinge Pin for 24983	
52217		" 52216 with 775E and		. 1		120342	21835	Oiler (copper plated) with 12034	
,		52206, for 52215		, Î				cessories)	
52218	21831	Feed and Feed Lifting Eccentric with 448C,		6		120343	21835	Oiler Spout 3 1/2 in. long, for	
		12990, 52210 and 52211, for 52174						(Accessories)	
-52228		Arm with 15404 and two each 15405 and		i.		120858	21816	Finger Guard Holder with 50302J	
		56015		1.		121326	21816	" for 121327	
52337	5936	Slack Thread Regulator		1		121327	21816	Finger Guard complete, Nos.36819	
52338	5936	Presser Bar Guide Bracket with 223C and		9	-			50316J and 121326	
				3		121345	21816	Finger Guard	
52452	21833	453C		2		121346	21816	Finger Guard complete, Nos.120858,	
52454	21804	Thread Retainer		Ì				and two 236J	
52472		Retoting Week Babbin Gaza for 50401	· •			125320	21808	Rotating Hook Bobbin Case Latch Le	ver for
52473	21808	Rotating Hook Bobbin Case for 52481		ć				40393	
00470	21000	Rotating Hook Bobbin Case complete, Nos. 592E,2975,40393 and 52481, for 127098,) }(127004	21804	Rotating Hook Shaft Bushing (bad 127043	
		and 127099				127005	21804	Rotating Hook Shaft Bushing (fro	
52475		Rotating Hook Bobbin Case Locating Plate for 127100						127044	
52476		Rotating Hook Bobbin Case Locating Plate		1		127007	21833	Rotating Hook Shaft Bevel Gear Ca pieces) with 121E and 50234D	
52481		Rivet for 127100		•. i,•*		127009	21825	Arm Shaft (horizontal) Ball H	
02401		Rotating Hook Bobbin Case 52472 with 591F,		.l				(front) Cover for 52214	
		1380D and 40394, for 52473		Ý.,		127011	21825	Arm Shaft (horizontal) Ball Bearing	
·									
`									
				5					
				- 24					

34		NUMERICAL LIST OF PARTS		•				
		•						NUMERICAL LIST OF PARTS
No.	Plate	Name			<u>.</u>			
127043		Rotating Hook Shaft Bushing (back) 127004			, in the second s	No.	Plate	- Name
		with 52045			*	127192	21833	Arm Top Cover for 127193
127044		Rotating Hook Shaft Bushing (front) 127005				127193	21833	" " 127192 with 12403, 52186
127058	21803	with 52045 Arm Shaft (upright)			1	150203	20335	127187 Thread Unwinder Spool Rest Cushion (f
127066	21825	" " (horizontal) Ball Bearing (front)				*******	20000	for 225258
		" " " " " " " " "				150450	01074	
127067	21825					150459	21834	Bobbin Winder Tension Bracket with 4
		Key for 52173						for 150460
127070	21833	Arm Shaft (horizontal) Bevel Gear Case			1	150460		Letter allact renered bracket compr
		(two pieces) with 121E						Nos. 12403,41593 to 41595,52186,127
127072	21827	Arm Shaft (horizontal) Bevel Gear with two						150459 and two 2455, for 150461
		1036C				150461		Bobbin Winder (swinging automatic,]
127073	21827	Arm Shaft (upright) Bevel Gear (lower)						hand) complete, Nos.41915 and 15046
		with two 1259C		5 9 - 1	, e	200056E	21830	Bobbin Winder Stop Latch Screw for 225
127073	21827	Rotating Hook Shaft Bevel Gear with two				200082D	21830	" Tension Bracket Screw
201010	2102/				2			225382
100044	01007	1259C			1	200299H	21830	
127074	21827	Arm Shaft (upright) Bevel Gear (upper)			1	2002390	£1000	Bobbin Winder Stop Latch Trip Lever H:
100000	61 000	with two 1259C				0007000	01.070	Screw for 225382
127079	21833	Arm Side Cover				2003800	21830	Bobbin Winder Pulley Set Screw for 202
127091	21826	011 Tube Bracket for 52167				2003830	21830	Thread Unwinder Spool Rest Rod Set Se
127095		Rotating Hook with three 1253C, for 127096			!			for 202490
127096		" 127095 with 127102 and four				201018C	21830	Thread Unwinder Spool Rest Set Screw
		1053D, for 127097 and 127119						225257
127097	21308	Rotating Hook 127096 with 40274 and three				201499B	21830	Bobbin Winder Tension Stud for 225461.
1		1367D				201572B	21830	""" "Thumb Nut
127098		Rotating Hook 127119 with 52473						225462
127099		" " Bobbin Case 52473 with				201696J	21828	Thread Unwinder Thread Guide Lock Nut
		127100	•		:			225258
127100	21808	Rotating Hook Bobbin Case Holder with			·.	202277		Bobbin Winder Frame Gil Packing (wick)
		59475 and two 59476 for 307090 and			· · · ·			225453
		52475 and two 52476, for 127099 and		¥0. 1	194	202407	21830	Bobbin Winder Tension Spring for 22546
127102	03.000	127119				202473	3470	" " Pulley with 200380C.
	21608	Rotating Hook Thread Guard for 127096						225382
127108	21807	Presser Bar Spring		1.	5 c.	202478	21830	Bobbin Winder Stop Latch Trip Lever
*127119	,	Rotating Hook 127096 with 40274, 127100		-		2022.0	01000	
		and three 1367D, for 127098				202490	20335	225382
1271.33	21826	011 Tube with 52045, for 52167			1 - E	202490	20000	Thread Unwinder Spool Stand with 2003
127143		Arm Shaft (horizontal) Ball Bearing (back)						for 225258
		Cover for 127144			5	225257	20335	Thread Unwinder Spool Rest with 2010
127144	21833	Arm Shaft (horizontal) Ball Bearing (back)			ļ.			for 225258
		Cover 127143 with 127145			Ê.	225258	20335	Thread Unwinder complete, Nos.20169
*12714 5		Arm Shaft (horizontal) Ball Bearing (back)			ŝ.			202490,225257,225324,225326,225388,
10/140								each 150203,225391 and three w
127146	21806	Cover Oil Lead for 127144			1.00			screws 7/8 in. No. 12
		Arm Side Cap			i,	225322	21830	Thread Unwinder Thread Guide Rod Was
127152	21826	Feed and Feed Lifting Eccentric Sleeve for			i			for 225324
		52174			9	225324	20335	Thread Unwinder Thread Guide Rod with
127158	21832	Feed Lifting Rock Shaft Connecting Rod			1.11			and 225322, for 225258
		with two 966E	1	3 0-	ો	225326	21828	Thread Unwinder Thread Guide Position
127187	21824	Arm Oil Tube (bent) with 42367, for oiling			1.	220000	. 1020	
		127152, for 127193 and 150460			1	225381	3470	for 225258 Bobbin Winder Spindle for 225382
					1.1	KADOOO1	OT IO	poppin winder spindle for 220062
				* .	1 4-			
		•						and the second
		· · · · · · · · · · · · · · · · · · ·						

مى مىلىيىتىن مىلىغى يەردىكى مەردەن بىلەرمەر ،

~ .

• 34

			ń.
		and the second	
		· · · · · · · · · · · · · · · · · · ·	
36		NUMERICAL LIST OF PARTS	2 Å
00			
No.	Plate	Name	1
225382	3469	Bobbin Winder complete, Nos. 200056E,	
		2000820,200299H,202473,202478,225381,	
		225433,225444,225453 to 225456,225458,	
		225462,228026, two each 225459 and wood	. ¹¹ b
		screws 3/4 in. No. 12 R.H.B	
225388	20335	Thread Unwinder Spool Rest Rod for 225258.	
225390	7234	" " Thread Cone Holder for in-	٩
200000	1001	verted cones	
225391	20335	Thread Unwinder Thread Guide for 225258	1 - Carlos -
225433	3469	Bobbin Winder and Tension Bracket Base for	•
N.0100	0.00	225382	
225438	21830	Bobbin Winder Frame Oil Well Cap for	2
220400	21000	225453	.
225444	21830	Bobbin Winder Stop Latch for 225382	
225453	3470	" " Frame with 202277 and 225438,	9
LOUICO		for 225382	a. 1
 225454	21830	Bobbin Winder Frame Hinge Pin for 225382	
225455	21830	" " " Spring for 225382	
225456	21830	" " " Plunger for	
000100	21000	225382	· 1
225458	21830	Bobbin Winder Stop Latch Thumb Lever for	1
220100	21000	225382	×
225459	21830	Bobbin Winder Stop Latch Thumb Lever Hinge	
000100	21000	Stud for 225382	
225459	21830	Bobbin Winder Stop Latch Thumb Lever Joint	
00000	21000	Stud for 225382	
225461	21830	Bobbin Winder Tension Bracket with 201499B	ì
ALCT OF	22000	for 225462	i,
225462		Bobbin Winder Tension Bracket complete,	_ 1
		Nos. 2015728, 202407, 225461 and two 2102,	• ,
		for 225382	
228026		Bobbin Winder Tension Bracket Screw Washer	
		for 225382	.
· · ·			

.

1

÷.

. M

1.

ء 1

