# Singer 114-36

#### INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, "TYPE B" or "TYPE D" OIL, sold by Singer Sewing Machine Company, should be applied at least twice each day to all oil holes marked "OIL", as instructed in Form 8428.

"TYPE D" OIL should be used when an oil is desired which will produce a minimum of stain on fabrics, even after a long period of storage.

Copyright, U. S. A., 1917, 1932, 1935 and 1937 by The Singer Manufacturing Company All Rights Reserved for all Countries

#### INDEX

Attachments and Accessories	Page 17
Foot Lifter Parts	17
Foot Lifter Chain Guide	18
Machine No. 114-36	ε
Numerical List of Parts	31
Starting Lever	18
Table Belt Guide	18
Thread Unwinder	19

#### INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A-Hardened, Polished, Nickel Plated and Buffed

B-Polished, Nickel Plated and Buffed

C-Hardened Only

D-Polished Only

E-Soft, Not Polished

F-Hardened and Polished

F.J-Hardened, Polished and Nickel Plated

G-Bright Rumbled and Nickel Plated

H-Blued

J-Nickel Plated Only

K-Hardened and Nickel Plated

L-Brass Plated

M-Oxidized

N-Japanned, Dull

P-Japanned, Bright

R-Merlized

S-Cadmium Plating

T-Copper Plated

T.A-Hardened, Polished, Copper and Nickel Plated and Buffed

T.B-Copper and Nickel Plated and Polished

T.J-Copper and Nickel Plated Only

T.K-Hardened, Copper and Nickel Plated

T.M-Copper Plated and Oxidized

T.L-Copper and Brass Plated

U-Zinc Plated

V-Silver Plated

W-Polished and Nickel Plated

Y-Black Nickel Plated Only

Z-Chromium Plated

Z.B-Polished, Nickel Plated, Buffed and Chromium Plated

Z.J-Nickel and Chromium Plated

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.

In this series:

1 to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers


1501 to 1800 and 51501 to 51800 are Nut Numbers 1801 to 2000 and 51901 to 52000 are Roller Numbers

2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED in ordering.

Parts marked with an asterisk (\*) are furnished only when repairs are made at factory.

## LIST OF PARTS COMPLETE FOR

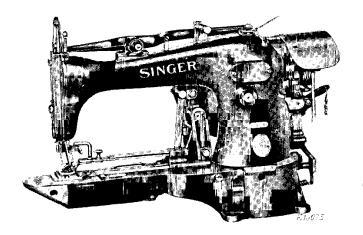

#### MACHINE No. 114-36

For Covering the Ends of Insulated Electric Conductor Wire. Makes thirty-two stitches, including the fastening stitches. The machine is fitted with a special mechanism located on the top of the arm and which is actuated by a special tripping point attached to the feed cam. The purpose of this mechanism is to retard the movement of the needle thread on the last two strokes of the needle so as to draw the last stitch taut. For convenience in changing for the different sizes, the wire holder is made to slide into the feed plate. The machine will tack wire up to and including 1/4 inch in diameter. The machine is fitted with improved thread controlling mechanism and thread nipping device to hold the end of thread until the first stitch is made. Stop motion and mechanism to cut the thread at the completion of the operation. Speed 1000 R. P. M.

No.	Plate	Name
· 124989		Arm
*124990		" 124989 with 4449,15404,124839 and two each 164E and 15405
16532	6976	Arm Dowel Pin
4448	6976	" Oil Tube for intermediate bearing

No.	Plate	Ne.me
56015	6976	Arm Oil Tube, for oiling 59705 and 59706
880E	9555	" Screw
59702	9575	" Shaft (horizontal)
•136541		" " 59702 with 59774,
		62235 and 68717
17703	9553	Arm Shaft (horizontal) Bushing (back)
<b>50333</b> C	9555	_ " " Ad-
		justing Screw
15 <b>2</b> 0J	9555	Arm Shaft (horizontal) Bushing (back)
		Adjusting Screw Nut
•4449		Arm Shaft (horizontal) Bushing (front)
59703	6976	" " Gear with two
		1036C
1036C	6976	Arm Shaft (horizontal) Gear Set Screw
59704	6976	" (upright)
59705	6976	" " Bushing (lower)
446C	9555	" " " Set
		Screw
59706	6976	Arm Shaft (upright) Bushing (upper)
446C	9555	" " " Set
		Screw
59707	6976	Arm Shaft (upright) Gear (lower) with
		two 1253C
12530	6976	Arm Shaft (upright) Gear (lower) Set
		Screw
59708	6976	Arm Shaft (upright) Gear (upper) with
		two 1253C
1253C	6976	Arm Shaft (upright) Gear (upper) Set
		Screw
124674	9574	Arm Side Cover
190J	9555	DCTeW
18498	9575	Belt Cover
59804		" 18498 with 59795 and two 217J
59795	9574	" Bracket with 184E and 59796
184E	9555	" Screw Stud
59798	9585	" " Stud
217J	9555	" Screw
39222	9573	" Shifter
63976	9565	" Clamp
1255J	6976	" " Screw
124991	9565	Clamp with 1220E and 17928
124993	9570	" Arm
124994		Clamp Arm complete, Nos. 1664J,17714,
10010	0545	124993 and 124995
17710	9565	Clamp Arm Hinge Plate
1176J	955 <b>5</b>	" " Screw
124995	9565	" " Hook" " " Nut
1664J	9555	
124996	9565	" Packing" Lifter
62261	9565	
1905	9555 9565	" Screw" " Locking Device Latch with two 1057J
124711	2000	POCKING DEATOR PRICE MICH CAG 10949

No.	Plate	Na.me
1057J	9555	Clamp Locking Device Latch Clamping
		Screw
124678	9570	Clamp Locking Device Latch Shaft
124696		" " " 124678
		with 124679 and 124823
124679	9565	Clamp Locking Device Latch Shaft Crank
124680	9553	н н и и и
		Connection
1282C	9555	Clamp Locking Device Latch Shaft Crank
		Connection Hinge Screw (lower)
12820	9555	Clamp Locking Device Latch Shaft Crank
		Connection Hinge Screw (upper)
124623	9553	Clamp Locking Device Latch Shaft Crank
		Pin
17928	9553	Clamp Position Stud
17712	9570	* Pressure Spring
17713	9553	" " Bracket
11770	9555	" " " Screw
17714	9553	" " Guide Block
1178D	9555	" " Screw
20437	9553	" " Washer
1220E	9555	" Screw Stud
1656J	9558	* Thumb Nut
124998		Clamp complete, Nos. 1656J, 124991 and
		124994
•124800		Cylinder
62189	9570	Bottom Cover
124742	9570	" End Cover
124743		" " 124742 with 1034J,
101.10		62111,62113,62185, 62189,124744 and
		four 1477J
62185	9553	Cylinder End Cover Bracket
62111	9553	" Hinge Pin
1477J	9555	" " Screw
124744	9553	" " Hinge
14770	9555	" " " Screw
62113	9553	" " Spring
1034J	9555	" " Screw
124745	9553	" Oil Well Cover
236E	9555	" " Screw
59711	9570	Face Plate
59712		Face Plate complete, Nos. 208J,9544,9545
		59711 and two each 229J,2107 and
		9543
16 <b>4</b> J	9555	Face Plate Screw
2107	9553	" Thread Guard
229J	9555	" " Screw
9543	9553	" " Nipper Disc
9544	9553	" " Cover
208J	9555	" " " " Screw
9545	9553	" " " " Spring
20-20	3000	(light)
		/ Dr. n

No.	Plate	Name
63940	9554	Feed Across Connection (lever end) with
		two 896E
63941		Feed Across Connection (lever end) 63940
		with 55381
55381	9554	Feed Across Connection (lever end) Ball
		Stud
641C	9555	Feed Across Connection (lever end) Ball
47046	0554	Stud Set Screw
63942	9554	Feed Across Connection (regulator end)
63943		with two 896E
00040		63942 with 63944
63944	9554	Feed Across Connection (regulator end)
00011	000-1	Ball Stud
62115	9554	Feed Across Connection Adjusting Stud
1649C	9558	" " " Nut
		(left)
1650C	9558	Feed Across Connection Adjusting Stud
		Nut (right)
896E	9555	Feed Across Connection Cap Screw
124999	9571	" Lever with 641C and 1952
125000		134999 Mith 130001
136501	9554	utuka acng
690J	9555	Clamping
40110	OEE 4	Screw
62118 124660	955 <b>4</b> 95 <b>54</b>	Feed Across Lever Plate with 17741
1094F	9555	" " " Screw
55300	9556	" " " Steady Pin
1952	9556	" " Roller and Stud
124847	9571	" Regulator
124848		" " 124847 with 1188D.
		1655E, 14017 and 50324E
50599D	9555	Feed Across Regulator Adjusting Screw
		Stud
1676C	9558	Feed Across Regulator Adjusting Screw
		Stud Nut
48244	9556	Feed Across Regulator Adjusting Screw
		Stud Nut Washer (fibre)
17738	9556	Feed Across Regulator Adjusting Screw
11000		Stud Nut Washer (steel)
11880	9555	Feed Across Regulator Hinge Screw
62152 50324E	9556 9558	" " Link " " Screw Stud
1655E	9558	" " " " Nut
14017	9556	a p n n n r
1-1011	0000	Washer
1 <b>774</b> 1	9556	Feed Across Regulator Link Stud
136502	9575	" Cam with 190J, 17874, 136514, two each
		11920,124973 and six 335J
136503	9572	Feed Cam Driving Worm with 1441C and
		1442C

No.	Plate	Name
1442C	9558	Feed Cam Driving Worm Position Screw
1441C	9558	" " Set Screw
136504	9572	WINGEL WICH 4000
3012	9556	Pillererere
453C	9558	Set Screw
18384	9556	PHB.D
1192C	9558	Set Screw
62155	9571	Shart
136505		62155 with 1653C and
		136504
1653C	9558	Feed Cam Shaft Nut
136506	9572	" Plate
• 18445	9571	" Carrier Bar
136507		Feed Plate Carrier Bar 18445 with 934J,
		1094F,1195E,17743,18368,62118,124660
		two 55300 and four 17806
59730	9556	Feed Plate Carrier Bar Pivot Block
50306D	9558	" " " " " Screw.
18368	9556	" " Plate
9 <b>34</b> J	9558	" " Screw
1654C	9558	" " Nut
17806	9556	" " Position Stud
1195E	9558	" Screw Stud
136508	9571	" Regulator with 1953
136537		" " 136508 with 39313 and
		136509
136509	9571	Feed Regulator Bracket with 690J and two
		160J
160J	9558	Feed Regulator Bracket Cap Screw
8589	9556	" " Dowel Pin
1177J	9555	" " Screw
17744	9556	" " Hinge Stud
17743	9556	" Post
1953	9556	" Roller and Screw Stud
1000	0000	with 1655C and 14017
1655C	9558	Feed Regulator Roller and Screw Stud Nut
14017	9556	a a was to story the first and
14017	••••	Washer
1190C	9558	Feed Regulator Stop Screw
39313	9556	" " Swivel
1191W	9558	" Thumb Screw
136511	9557	Knife
665J	9558	
136512	9557	" Screw
62124	9537 957 <b>5</b>	" Thread Puller Bar with 62130 and
4a1a0	9070	***********************************
124933	9557	two 3021 Knife Thread Puller Bar Check
124933	9557 9557	
124934		" " Plunger
	9557 9558	Case
1186J	ಕಾರಿಡ	
1500	0550	Screw
1722J	9558	Knife Thread Puller Bar Check Plunger
		Lock Nut

124938   9557   Knife Thread Puller Bar Check Plunger   1900   9555   " " " " " Set Spring	er
Nut.   S9747   9572   " " Cower   Company	er
124938   9557   Knife Thread Puller Bar Check Plunger   1900   9555   " " " " " Set Spring	
Spring	Screw
Size   Set   Set	Screw
Screw	
Step	
Screw Lock Nut	
Sol52J   9558   Knife Thread Puller Bar Check Screw   124765   9559   "   Coupling with four layers   Sol500   9562   " "   Set Screw   Sol500   Sol500   Sol500   Sol500   Sol500   Set Screw   Sol500   Sol500   Sol500   Sol500   Sol500   Sol500   Sol500   Set Screw   Sol500   Sol50	
124936	
Nos. 51120J,51591J,124933 to 124935,   124935   124935   124938 and two 1722J   124935 and two 1722J   124935 and two 1722J   12930   9560   " " Connecting Link   17917   377C,1516E and 2052   377C   9558   Needle Bar Connecting Link Hir Block   1518E   9558   " " " " " " " " " " " " " " " " " "	ew
124938 and two 1722J	
17916   9557   Knife Thread Puller Bar Connection with 17917   17915   9557   Stife Thread Puller Bar Connection Slide Block   1518E 9558   1518E and 2052	
17917	39203 with
17915   9557   Knife Thread Puller Bar Connection Slide   1516E   9558     17917     17917     1516E   9558     17918     17916     1516E   9558     17918     17916     1516E   9558     17918     17916     1516E   9558     17918     17916     1516E   9558     1791	
Block	
17917   Knife Thread Puller Bar Connection Slide   2052   9560   " " " Stud with Block 17915 with 17916	" "Nut
Block 17915 with 17916	th 155C
17916   9557   Knife Thread Puller Bar Connection Slide   82235   9572   "   Crank Wheel with   1293C   1293	t Screw
Block Stud	
59734       9572       Knife Thread Puller Bar Driving Lever with 223F and 59735	
## With 223F and 59735	
*59805 Knife Thread Puller Bar Driving Lever 59734 with 1382F	rew
124795   Needle Bar Thread Retainer con	
1382F   9558   Knife Thread Puller Bar Driving Lever   1449H, 124794, 124796 and 12   124796   9560   Needle Bar Thread Retainer Brown   1681C   9558   Knife Thread Puller Bar Driving Lever   853C   9562   Needle Bar Thread Retainer Brown   1681C   9557   Screw Nut.	
Hinge Screw	•
1681C   9558   Knife Thread Puller Bar Driving Lever   853C and two 42639   853C   9562   Needle Bar Thread Retainer Bit   Screw	
# Hinge Screw Nut	
59735         9557         Knife Thread Puller Bar Driving Lever         Screw	racket Set
Lock Stud	
230F 9558 Aniie Thread Puller Bar Driving Lever 1449H 9562 5c1  Lock Stud Screw 124821 9560 " " " Spr	sition Pin.
Lock Stud Screw	rew
	ring
124787 9557 Knife Thread Puller Bar Guide 124766 9560 " Gward	
1235F 9558 " " " " " Screw 124601 9560 " " Cam with two 4650	C
124908 9559 " " Holder with 59739 465C 9562 " " " Set Screw	
62129 9559 " " " Cap with 2273 9560 " " Pin	
59739	
50018F 9567 Knife Thread Puller Holder Cap Screw 124792 " " 124767 with	h 2273 and
1547J 9558 " " " " Nut 124766	
59739 9559 " " " " Stud 59761 9560 Needle Guard Shaft Collar with	h two 4650.
	Screw
	124974 and
59739 9559 " " " " Stud two 1253C two	
236F 9555 " " " Screw 51857 9560 Needle Guard Shaft Crank Roll	.er
124849 9559 Loop Guard 124974 Needle Guard Shaft Crank Roll	er complete
208J 9555 " " Screw Nos.51857,124698 and 1246	99
136513 9559 Looper	
124761 9559 " Driving Shaft 124699 9560 " " " " "	" Stud
	Screw
1148C 9558 Looper Driving Shaft Bushing Set Screw 624C	ollar with

i

						11(15) (1)(11(15) (14.55)
No.	Plate	Name		No.	Plate	Name
624C	9562	Needle Guard Shaft Spring Collar Set		50 <b>372</b> J	9562	Stop Cam Interlocking Rod Case Bracket
		Screw	٠			Screw
233J	9562	Needle Guard Shaft Spring Screw		1204E	9562	Stop Cam Interlocking Rod Case Hinge
124768	9560	" "Spreader				Screw
233J	9562	" " Screw		17859	9561	Stop Cam Interlocking Rod Case Socket
1072F	9562	" Set Screw				Joint
2058	9572	Presser Bar		898J	9562	Stop Cam Interlocking Rod Case Socket
17841	9561	" Collar with two 196C				Joint Cap Screw
196C	9562	" Set Screw	1	11622	9561	Stop Cam Interlocking Rod Case Spring
17842	9561	" Guide Bracket with 453C	}	19694	9563	" " Hook
453C	9558	" " Set Screw	•	1695E	9562	
124790	9575	" Lifting Lever				Lock Nut
124839	9572	" " Bracket		17861	9563	Stop Cam Interlocking Rod Case Stop Stud
164E	9555	" " " Screw		1254C	9562	H H H H H H H H
12010	9562	" " " Hinge Screw	- ,			Screw Bushing
17845	9572			1508J	9562	Stop Cam Interlocking Rod Case Stop Stud
39408		" " " Rod" " " " 17845 with		20000		Screw Bushing Lock Nut
33400				17862	9563	Stop Cam Interlocking Rod Case Stop Stud
17846		17846		11000	5000	Spring
		Presser Bar Lifting Lever Rod Chain		124774	9563	Stop Cam Interlocking Rod Case Wearing
32675	9561	" Spring		TORITE	2000	
68712	20337	Pulley (loose) 2 3/4 in. diam. with		19 <b>3</b> J	9562	Stop Com Interlocking Red Come Magning
200: 0		200584D		1900	9000	Stop Cam Interlocking Rod Case Wearing
68713		Pulley (loose) 68712 with 68714		17067	05.67	Block Screw
68714	20337	Ball Bearing		17863 17864	9563 9563	Stop Cam Interlocking Rod Spring
68715	9561	Bushing		=		" " Stop
51387R	9562	" Cap Screw		13180	9562	" " " Screw
200584D	9562	" 011 Plug Screw		3012	9556	" Pin
68716	20337	" (tight) 2 7/8 in. diam	1	12060	9562	" Screw
68720		" 68716 with 12060 and		2102	9563	Tension Disc
		17854	'	1560C	9562	Regulating Thumb Nut
2022	9561	Pulley (tight) Pin		12740	9567	" Screw Stud
68717		Pulleys (ball bearing ) complete, Nos.	~ •	62506		" " 1274C with 1560C
		51387R,68713,68715 and 68720		13710	9563	" Spring
17853	9561	Starting Lever		10145	9563	Thread Guide
12620	9562	" Hinge Screw		50370J	9562	" " Set Screw
1662C	9562	" " " Nut		124609	9563	Thread Controller Sleeve
17854	9561	Stop Cam		124607	9563	" Spring
17855	9561	" Interlocking Rod		124608	9563	" Collar with
124784	9573	" " " Case				1477F
124985		" " " 124784		1477F	9555	Thread Controller Spring Collar Set
		with 124774 and two 193J				Screw
124986		Stop Cam Interlocking Rod Case 124985		124610	9563	Thread Controller Stud with 56549 and
		with 1318D,17855,17863,17864,39222,				124631
		63976 and two 1255J		• 124631	9563	Thread Controller Stud Collar
124772	9573	Stop Cam Interlocking Rod Case Bracket		56549	9563	" " " Pin
124987		Stop Cam Interlocking Rod Case Bracket		457C	9562	" " Set Screw
10-100		complete, Nos. 1182E,1196C,1204E,		124611		Thread Controller complete, Nos. 124807
		12540,12620,1508J,16620,17853,17859,				to 124610
				•124612		Thread Nipper (lower) Blade
		17861, 17862, 17872, 17873,124772,		•124613		" " Carrier with
21828	6976	124986 and two 898J				124819
E TOEO	O# / Q	Stop Cam Interlocking Rod Case Bracket	÷	124614	9563	Thread Nipper (lower) Blade Carrier
		Dowel Pin				124613 with 124812 and two 6037

No.	Plate	Name		No.	Plate	Name
665J	9558	Thread Nipper (lower) Blade Carrier Cap		1057E	9555	Thread Nipper (upper) Retainer Holder
		Screw	- 1			Driving Arm Clamping Screw
124615	9564	Thread Nipper (lower) Blade Carrier	ļ	452C	9567	Thread Nipper (upper) Retainer Set Screw
		Hinge Stud	j.	59776	9566	" " Stud with 13538
6037	9564	Thread Nipper (lower) Blade Rivet	1			" " Position Pin.
-	9573		1	13538	9566	
136514		Cam	<u>}</u> .	13539	9566	Roller
<b>33</b> 5J	9562	" " " Screw	ì	13540	9566	"rın
124653	9573	" Connection	į	2026	9566	Spring
124618	9564	" " Extension	ļ!	59777		Thread Nipper (upper) Stud complete, Nos.
99K	9562	PT 18 91 91 92	1			13539,13540 and 59776
		Hinge Screw	1	59778		Thread Nipper (upper) complete.Nos.1527J
206J	9562	Thread Nipper (lower) Connection Exten-	ļ.	00770		17430,2026,59773,59775,59777,62169
2000	2002		į.			
		sion Screw	,			and two 2921
124619	9564	Thread Nipper (lower) Connection Hinge	~ <sub>1</sub> , 3	136525	9566	Thread Puller and Wiper Body
		Stud	!	136526		" " " 136525 with
124620	9573	Thread Nipper (lower) Driving Arm	1			707J,2273,9309,49241,50303K,136529,
8554	9564	" " " " Pin	ŀ			136530 and 136535
124621	9564	" " Lever with 237K	- i -	1175K	9567	Thread Puller and Wiper Hinge Screw
124973	9573	" " Guide	ĺ	132527	9566	" " Holder
335J	9562	" " " " Screw.	1	136528		" " " 136527
8554	9564	" " " Pin		100000		with 234K, 136531 to 136534 and two
	9567					·
237K		" Set Screw				68313
124623	9564	" " Shaft		136529	9566	Thread Puller and Wiper Jaw (movable)
124957	9573	Bracket		50303K	9567	" " " " Hinge
511 <b>88J</b>	9567	я н и н н				Screw
		Screw		49241	9566	Thread Puller and Wiper Jaw (movable)
17738	9556	Thread Nipper (lower) Lever Shaft Brack-	}			Releasing Pin
		et Screw Washer (steel)	1	136530	9566	Thread Puller and Wiper Jaw (movable)
1743D	9567	Thread Nipper (upper) Adjusting Thumb	i⊢ ji			Spring
2.202		Nut		707J	9567	Thread Puller and Wiper Jaw (movable)
59773	9564	Thread Nipper (upper) Body		7070	0007	Spring Screw
447C	9567	" " Set Screw		176575	0500	
		and the second s		136535	9566	Thread Puller and Wiper Releasing Lever
59774	9564	Can with two				with 68313
		50150C		9309	9566	Thread Puller and Wiper Releasing Lever
50150C	9562	Thread Nipper (upper) Cam Set Screw				Spring
2921	9564	" " Disc		68313	9566	Thread Puller and Wiper Releasing Lever
12162	9564	" " " Guide Pin	•			Spring Position Pin
62169	9564	" " " Spring	I .	2273	9560	Thread Puller and Wiper Releasing Lever
59775	9564	" " Eyelet				Hinge Pin
1527J	9567	" " Lock Nut		136531	9566	Thread Puller and Wiper Switch Plate
136515	9564	" " Retainer		68313	9566	
		" " " Holder				" " " " Pin.
136516	9564			136532	9566	" " " " " Shank
		with 452C		136533	9566	
<b>136</b> 517	9573	Thread Nipper (upper) Retainer Holder				Collar with 239K
		Bracket		239K	9567	Thread Puller and Wiper Switch Plate
13 <b>4</b> J	9567	Thread Nipper (upper) Retainer Holder				Shank Collar Set Screw
		Bracket Screw		136534	9566	Thread Puller and Wiper Switch Plate
136518	9573	Thread Nipper (upper) Retainer Holder	p= 10			Spring
		Driving Arm with 1057E		234K	9567	Thread Puller and Wiper Switch Plate
136519	9566	Thread Nipper (upper) Retainer Holder		APC A	2007	<del>-</del>
190019	9000			100500		Spring Screw
100-	0555	Driving Arm Cam	· • •	136536		Thread Puller and Wiper complete, Nos.
190J	9555	Thread Nipper (upper) Retainer Holder	•			1175K, 136526 and 136528
		Driving Arm Cam Screw		124625		Thread Take-up Body with 62172

No.	Plate	Name
42808	9566	Thread Take-up Roller
62171	9566	" " Cap
337J	9567	" " " Screw
62172	9566	" " Pin
124626	9566	Thread Take-up complete, Nos. 337J,42808
		82171 and 124825
691F	9568	Thread Take-up Screw
7335	9566	" " Spring
32576	. 9566	" Regulator
453C	9558	" " " Set Screw
124844	9568	" " " Thread Guide
50370J	9562	" " " " " " " Set
		Screw
136520	9568	Throat Plate with 124615
124778	9568	" Needle Guard
<b>2</b> 06J	9562	" " " Screw
136521		Throat Plate complete, Nos. 206J,208J,
		1547J,50018F,62129,124778,124849,
		124908,136511,136512,136520 and two
		each 236F and 665J
69 lF	9568	Throat Plate Screw
• 15404		Trade Mark
15405		" Rivet
17872	9556	Trip Lever
1196C	9567	" Hinge Screw
17873	9568	" Spring
1182E	9567	" " Screw
17874	9568	Tripping Point
190J	9555	" Screw
136522	9569	Wire Holder (medium groove)
136523	9569	" (narrow groove)
138524	9569	" (wide groove)
51224W	9567	" Thumb Screw

SINGER Needles should be used in SINGER Machines These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO.\*\*"

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

#### ATTACHMENTS AND ACCESSORIES

No.	Plate	Ne.me
124958	9576	Cylinder Base Plate with two 453C
18420	9576	" " Hinge Connection
18423	9576	" " " " Hinge
		Pin
453C	9558	Cylinder Base Plate Hinge Connection
		Hinge Pin Set Screw
134E	9567	Cylinder Base Plate Screw
124959		Cylinder Base Plate (hinged) complete,
		Nos. 124958, two each 18420, 18423,
		three wood screws 1 1/4 in. No. 12
		and four 134E
124975		Cylinder Base Plate 124959 with 124968
124960	9576	Machine Supporting Bracket (lower)
178J	9569	" " " Screw.
124961	9576	" (upper)
1396J	9569	" " " Screw.
124962	9576	" Link (lower)
124963	9576	" (upper)
124964	9569	" " Hinge Rivet
124965	9576	" Lock Plate
190333	9569	" " " Lock
		Stud
124964	9569	Machine Supporting Link Lock Plate Rivet
124966	9576	Machine Support complete, Nos. 178J, 1396J
		124960 to 124963, 124965, 190333 and
		four 124964
120346	7007	Oiler (copper plated) with 120347
120347	7007	" Spout, 8 1/2 in. long
11831	7007	Screw Driver (machine)
26026	7007	" (shuttle tension)
4822	7007	Wrench for 1547
10875	7007	" 1518,1520,1649,1650 and 1662.
1.7905	7007	" 1176,1178,1654,1655 and 1676.
25200	7007	" " 1527
27662	7007	" 1254 and 1508

#### **FOOT LIFTER PARTS**

No.	Plate	Name
17876	9575	Treadle with 443C
17877	9575	" Pitman Rod (lower)
17878	9575	" " (upper)
17879	9575	" " Clamp with two 161D
161D	9567	" " Screw
17880	9575	Treadle Pitman complete, Nos. 17877 to
		17879
17881	9574	Treadle Shaft
443C	9567	" Set Screw

17885

## and 17884.....

FOOT LIFTER CHAIN GUIDE

Treadle and Pitman complete Nos. 17890

No.	Plate	Name
65883	9574	Chain Guide Bracket
2461	9569	" Pulley
65884	9569	" " Pin
65885		Foot Lifter Chain Guide complete, Nos.
		2481, 65883, 65884 and four wood

#### STARTING LEVER

No.	Plate	Na.me
13351		Chain, 46 in. to 55 in. long, with 56864
		and 56865
No	te: Who	en ordering No. 13351, give length re-
	quire	<b>1.</b>
56864	7007	Chain Hook (large)
56865	9569	" (small)
17876	9575	Treadle with 443C
17881	9574	" Shaft
443C	9567	" Set Screw
17882	9574	" Spring
17883	9575	" Stand
17884	9575	Treadle complete, Nos. 17876,17881 to
		17883 and two wood screws 1 in. No.
		10

#### TABLE BELT GUIDE


No.	Plate	Name
39218	9574	Belt Guide with two 168E
168E	9567	" Set Screw
17892	9575	Bracket with two 153E
17893	9574	Pulley
39219	9574	" Shaft (long) with 17896 and 63973
63973	9574	" " Wick (braided cotton)
39220	9574	" (short) with 17896 and 63974
63974	9574	" " Wick (braided cotton)


No.	Plate	Name
17896	9569	Pulley Shaft Plug
153E	9567	" Set Screw
39221		Table Belt Guide complete, Nos. 17892,
		39219,39220, two each 17893,39218 and
		three wood screws 1 1/4 in. No. 12


#### THREAD UNWINDER


#### FOR ONE LARGE SPOOL OR ONE LARGE CONE OF THREAD


No.	Plate	Name		
225259	8405	Spool Rest with 201018C		
150203	8405	" Cushion (felt)		
225388	8405	" Rod		
200383C	9567 -	" " Set Screw		
201018C	9567	" " Set Screw		
202490	8405	" Stand with 200383C		
225391	8405	Thread Guide		
60771	9569	" Guide		
60772		" . " 60771 with 41635		
41635	9569	" Bracket with 175E		
175E	9569	" " Set Screw		
201696J	9567	" Lock Nut		
225326	9589	" Position Cup		
225324	8405	" Rod with 208E and 225322		
208E	9555	"		
225322	9567	" " Washer		
225260	8405	Thread Unwinder complete, Nos. 150203		
		201696J, 202490, 225259, 225324, 225326,		
		225388,225391 and three wood screws		
		7/8 in. No. 12		
27739	20337	Thread Cone (wood) for large cones		
225390	20337	" Holder for inverted cones		
Note: Nos. 27739 and 225390 are used with, but not				
included in 225260.				
60773		Thread Unwinder with Thread Guide com-		
		plete, Nos. 60772 and 225260		

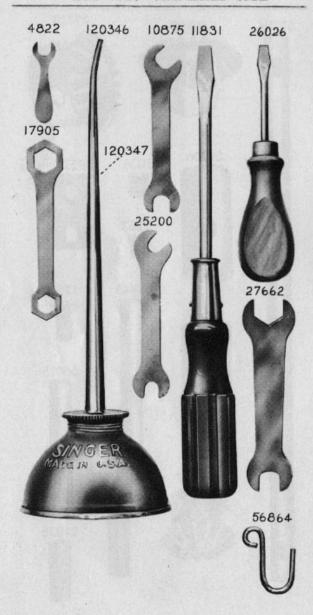

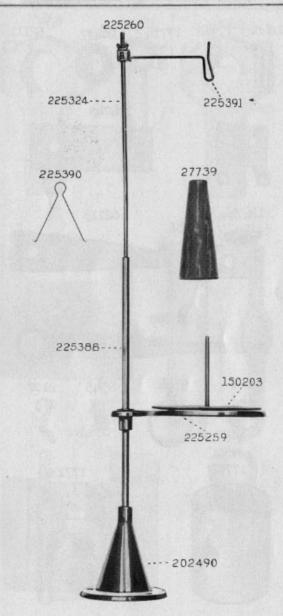


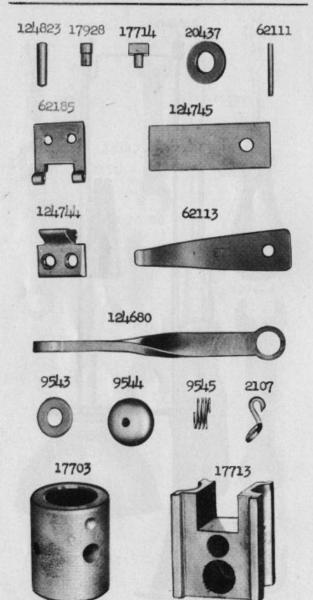


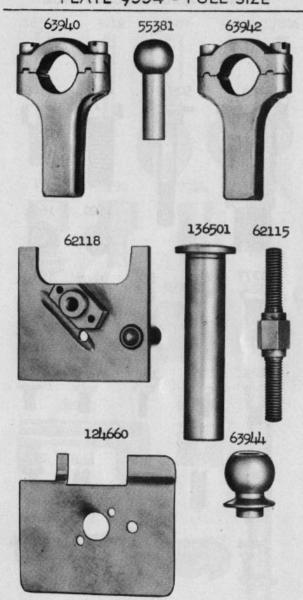


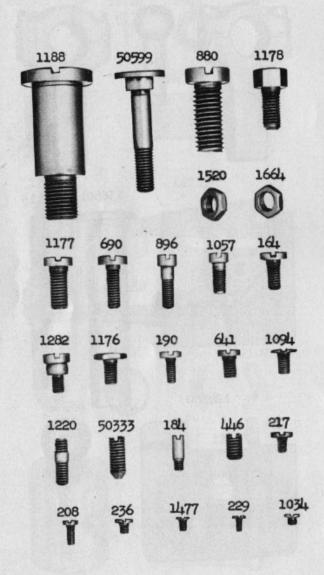


## PLATE 9556 - FULL SIZE 55300 17806 17738 14017

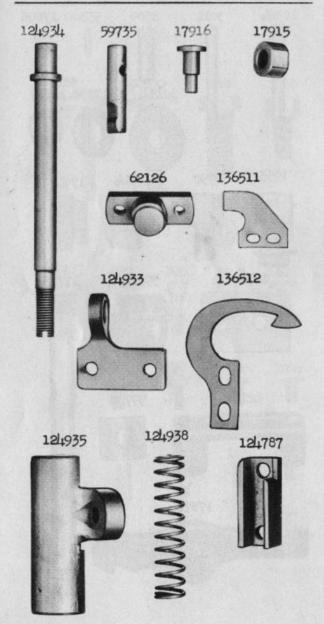


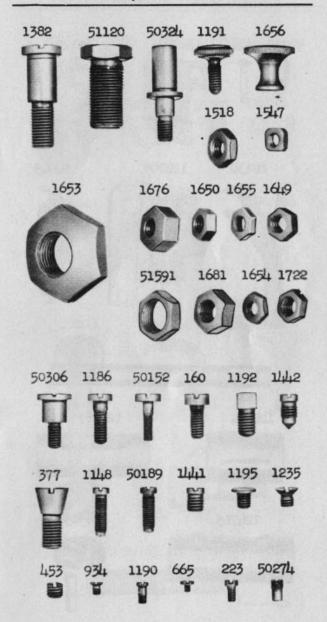

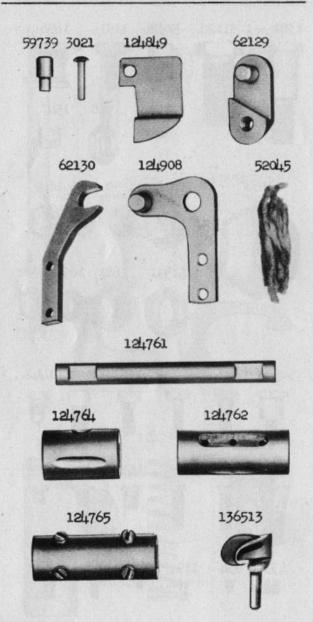


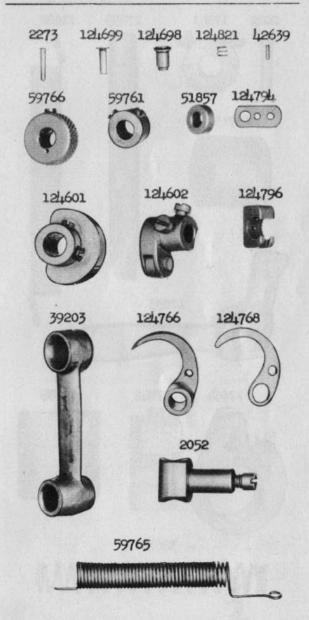



## PLATE 9561 - FULL SIZE

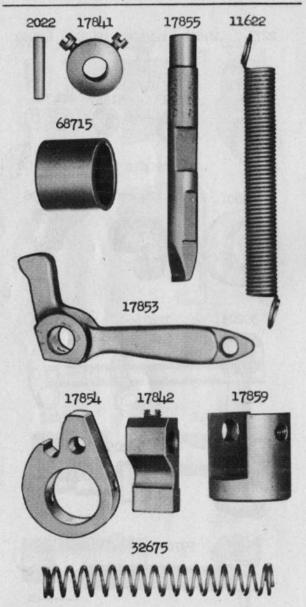


### PLATE 9562 - FULL SIZE

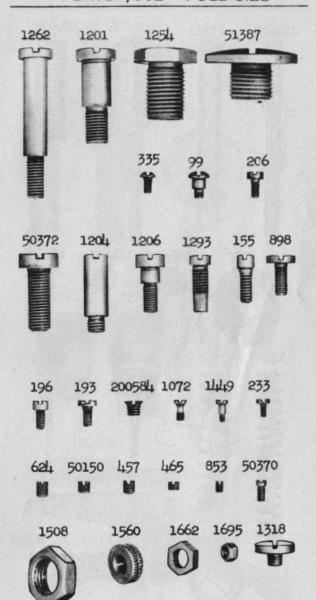

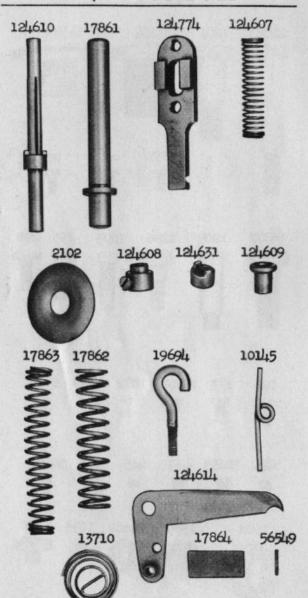


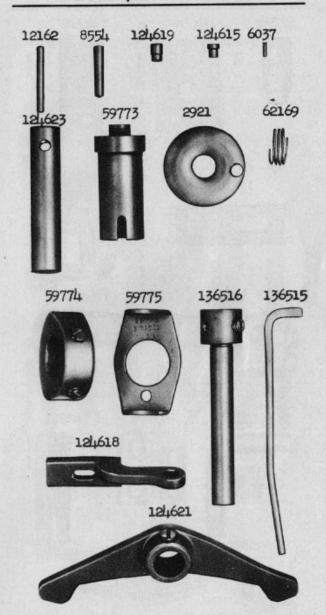


### PLATE 9565 - FULL SIZE

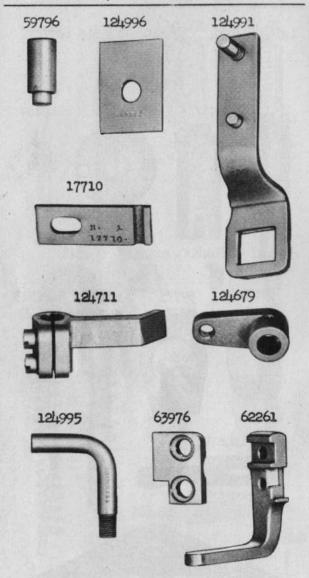


### PLATE 9566 - FULL SIZE

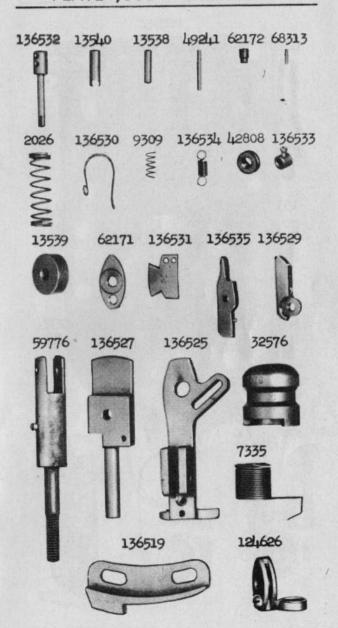



136520

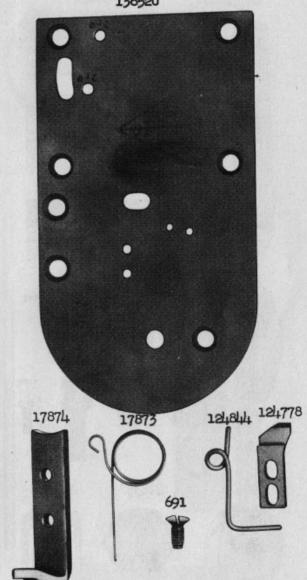

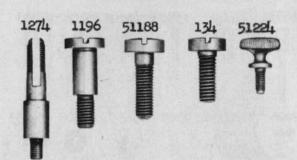



 

 


1743




201696




## PLATE 9569 - FULL SIZE

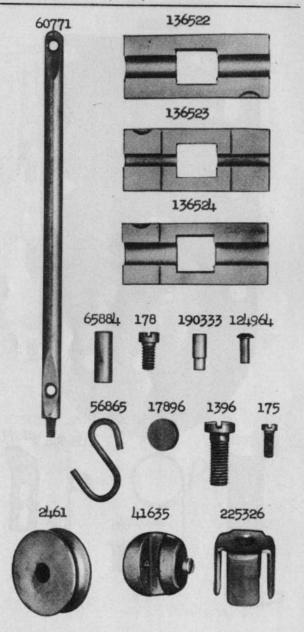

## PLATE 9570 - ONE-HALF SIZE

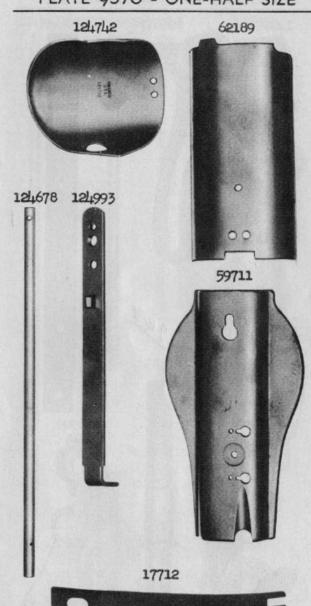

# PLATE 9571 - ONE-HALF SIZE PLATE 9572 - ONE-HALF SIZE 124763 62299 2058 17845

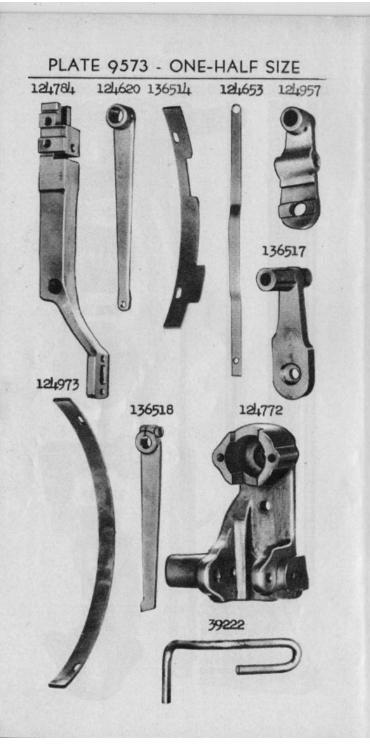

# PLATE 9574 - ONE-HALF SIZE 39219 63973 63974 124674 17881

