Singer 44-76

DO NOT REMOVE DEPARTMENT APPLICATION OF THE PROPERTY OF THE PR

LIST OF PARTS
COMPLETE



Machine No. 44-76

THE SINGER MANUFACTURING COMPANY

HISTORICAL COPY DO NOT REMOVE APRIL 6, 1912

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 44-76

Upper feed. For stitching cloth uppers to the soles of Japanese Tabls. Has special mechanism for gathering in the upper at the toe while stitching.

(SUPERSEDES MACHINE NO. 44=73)

20	rm with 11104	24753
~~	" Dowel Pin	8582
j	" Oil Tube for intermediate bearing	12453
1	" " with 29599, for oiling 12408	11119
1		12454
1	" " Packing (felt). per/ 1.0.0	29599
1	" Screw (back)	748e
	" " (front)	868E
1	" Shaft	16511
	" Bushing (front)	*11104
	" "Flanged Bushing (back)	12357
1	" " Set Screw	448c
1	" " Screw	144D
1	" Spool Pin and Thread Eyelet	12403
1	" " Washer (cloth)	11241
	alance Wheel and Feed Lifting Cam with two 423c	24754
3	Small Parts Dep't	
i	alance Wheel and Feed Lifting Cam Set Screw	
7	ed	24755
1 /	lamp Arm (lower) Oil Milling Dep't.	
1	Adjusting Berew	624c
1 /	Guide. On mining Dep t.	24757
İ	Sciew	1443b 208b
	. Berew	400D 24758
/	(upper)	24158 24759
j	" " Extension Oil Milling Dep't. " " Adjusting Screw	24739 1029f
į	" " Lifting Bracket with	1029F 24760
1	two 145c Small Parts Dep't.	24100
1	lamp Arm (upper) Extension Lifting Bracket Set	1/150
	Screw	1400
i	lamp Arm (upper) Extension Screw	1423n
ļţ	" " " Spring. Spring	24761

24762	Clamp	Arm (upper) Hinge Block Small Parts		50	
0.4.000	<i>α</i> 1	Dep't			i .
24620 620c	Clamp	Arm (upper) Hinge Block Pin		02	i i
0200 24763	Claren	Det Delew		02	
24/63	Clamp	Arm (upper) Pitman complete, Nos. 1698c,	١, ١	إسرر	
£001.00	C1	24764 and 38446 Assembling Dep't.	/	65	
*42524	Ciamp	Arm (upper) Pitman Ball Screw Stud		15	
	"	Сар	Ī		
187D	"	berew	1	02	í
*38444	"	" End bearing			
38446		11eau, 110s. 50444,	, [50	
	633	42524, 50016c and two 187D	/	50	
24764	_	Arm (upper) Pitman Rod Screw Dep't.		10	
1698c	**	" " " Nut		03	!
24765	"	" Retaining Lever with 1996.			
		Small Parts Dep't	1	50	
1996	Clamp	Arm (upper) Retaining Lever Roller and			1
		Screw Stud with 1655c Screw Dep't.		50	
1655c	Clamp	Arm (upper) Retaining Lever Roller and			
	-	Screw Stud Nut.		04	
77p	Clamp	Arm (upper) Screw		06	
23821	"	" " Spring		02	
1002c	64	" " Guide Screw Stud		03	
24766	"	Body with 620c and 624c.Small Parts Dep't.	1		
24624	4	" Shaft	[']	25	ľ
24739	61	" Collar with two 155c		25	
155c	**	" " Set Screw		03	}
1701E	**	" " Nut		10	•
24767	4	Carrier Small Parts Dep't.	,		
24768	4	" Connecting Link with two 580D.	'	20	1
		Small Parts Dep't		30	
580n	Clamp	Carrier Connecting Link Adjusting Screw		04	ł
50042c	« «	" " " Hinge Screw		10	
24769	"	" Latch Small Parts Dep't.		50	•
96D	"	" " Screw		05	
24770		" " Spring Spring Dep't.		1	Į.
24629	"	Disengaging Lever		02	}
24023 81D		" " Hinge Screw		10	₿ i
24630	и	Feed Cam with two 435c		05	ļ
435c	41		1		4
24631	"	Set Sciew	١,	04	İ
		Driving Clank (forked)	1	25	İ
24632	"	" Lever Hingo Sarow	1	50	-
729c		Tinge Screw.	1	20	1
24633	Clamp	Feed Lever Pitman complete, Nos. 1697c,			1
		1698c, 24634, 24636 and 38446	3	25	(
		Feed Lever Pitman Ball Screw Stud (back).		12	1
50016c	"	" " " (front).	i	15	
*42525	ii .	" " " Cap (back)	í		{

					-1	- 1	
	Clamp	Feed	Lever	Pitmar	n Cap (back) Screw		02
*42524	44	**	44	10	" (front)		_ _
187р	u	"	"	41	" " Screw		02
*38443	61	24	6	**	End Bearing (back)		
*38444	**	"	44	**	" " (front)	į	
24634	"	44	· .	"	Head (back) Nos. 679c,	i	
		38443	3, 4252	5 and t	wo 187D	- /	50
38446	Clamp	Feed	Lever	Pitman	i Head (front) Nos. 38444, 🖐		i i
		42524	4, 5001	6c and	two 187D.	1	50
24636		Feed		Pitmar	n Rod		25
1697c	**	и	**	44	" Nut (back)		03
1698c	u	44	**	46	" " (front)		03
24637	**	**	Pitma	n			50
24638	**	44		Cranl	k		75
_ 24639	41	**	**	11	Hinge Pin		02
460c	"	44	66	44	" " Set Screw		02
24640	41	"	11	"	Lever with 460c	- 7	00
24641	4.	**	44	41	" Collar with 1185c.		20
1185c	44	41	41	и	" " Set Screw.		03
50042c	16	**	"	Hing	e Screw (lower)		10
50074c	44	••	**	6	" (upper)		12.
24642	и	"	Regula	ator wi	th 454c		75
24643	**	**	44	Le	ever with 158p		75
158D	**	**	u		" Clamping Screw		03
939D	46	4.6	**		" Thumb Screw		10
1229c	**	41	41	Sc	rew		04
454c	и	a	4.		t Screw		02.
24644	41	4.6	46		aft		15
24645	**	**	46	Sli	ide Block		40
1131c	41	46	41		" Screw		10
24771	**	Rock	Shaft		Small Parts Dep't.	1	25
24772	Clamp	Rock	Shaf	t Pitm:	an complete, Nos. 24650,	′	7.5
	•				8cAssembling Dep't.	1	75
<i>50158</i> c	Clamp				n Ball Screw Stud. Screw		1
	•				• • • • • • • • • • • • • • • • • • • •		20
1636E	Clamp				n Ball Screw Stud Nut		03
*42524	"	u	ti		Cap		
187p	. "	44	"	44	" Screw		02
*38444	44	44	**	44	End Bearing.		
24773	ć.	44	46	"	Head. Nos. 38444, 42524		
		5015	8c and	two 18	87p	1	55
24774	Clamp	Rock	Shaft	t Pitma	an Crank with two 159b.		1
	•	Smal	l Parts	Dep't.	••••••••••		75
159D	Clamp	Rock	Shaft	Pitmai	n Crank Clamping Screw.		03
24649	u	41	"	45	" Stud		25
27659	41	а	44	44	" " Collar with		
		237F				ļ	10
237F	Clamp				an Crank Stud Collar Set	ĺ	20
		Screv	v		· · · · · · · · · · · · · · · · · · ·	j	102

24650	Clamp Rock Shaft Pitman Rod		10
1698c	" " " Lock Nut		03
1698c	" " " " Nut	1 1	03
24744	" " " Spring		05
1702 D	" " " " Thumb Nut		06
20197	Crank Connecting Rod with 20198 and two 896E	1	35
*20198	" " Cap	1 1	
896E	" " Screw		04
908c	" " " Hinge Screw		12:
1619E	" " " " Nut		05
24653	Face Plate		75
24654	Face Plate complete, Nos. 2827, 12150 and 24653.	1	00
190Đ	" " Screw		03
12150	" "Thread Guard (lower) with 12152		20.
12152	" " " " Rivet. per 1.00.		10:
2827	" " " (upper) with 8505		02
8505	" " " Rivet. pev. J. O.O.	ļ	10
24775	Feed Bar with 24657 Oil Milling Dep't.	1 /	00
19367	" " Cap	1	05
219F	" " Screw		02
24776	" " ExtensionOil Milling Dep't.		50
201D	" " Screw		03
24657	" " Hinge Stud		10
24658	" " Lifting Bracket with 1816		35
1816	" " " Roller and Stud		20
178F	" " " Screw		03
24659	" " Spring		05
24660	" " Collar with 624c	į	25
624c	" " Set Screw		03
24661	" Connecting Link		20
375c	" " " Hinge Screw		12
1518E	" " " " Nut.,		04
24662	" Forked Connection		
375c	" " Hinge Screw		12
1518E	" " " Nut		04
24663	" Lifting Lever	2	00
24664	" " Bracket with two 453c		50
453c	" " " Set Screw		0214
24665	" " " Hinge Pin		05
624c	" " " Set Screw		03
24666	" " Link with two 624c	!	25
24667	" " " Hinge Stud		15
624c	" " " Set Screw		03
24745	" " Rock Shaft	1	25
		ľ	1. 1
24746	Conai with two 443C		20
449c	" " " Set Screw		02
24777	" " " Crank (back) with 1997	i	
	and two 159D Small Parts Dep't.	1 /	10

159D	Feed	Lifting Rock Shaft Crank (back) Clamping	i	
		Screw.	ŀ	03
1997	Feed	Lifting Rock Shaft Crank (back) Roller and	į	•
		Screw Stud with 1517EScrew Dep't		50
1517E	Feed	Lifting Rock Shaft Crank (back) Roller and		. ,
0.4050		Screw Stud Nut		04
24670	reed	Lifting Rock Shaft Crank (front) with 456c,		4 5 25
1299c	Food	1293c and two each 1636E and 24717 Lifting Rock Shaft Crank (front) Position	2	00
12000	recu	Screw	ĺ	10
456c	Feed	Lifting Rock Shaft Crank (front) Set Screw		02
19448	"	" " " Slide Block		35
50065c	"		1	20
		Screw Stud		10
- 1636E	Fe∈d	Lifting Rock Shaft Crank (front) Slide Block	1	
		Screw Stud Nut.		03
24717	Feed	Lifting Rock Shaft Crank (front) Slide Block		
0.4071		complete, Nos. 19448 and 50065c		50
24671	Feed "	Regulator		25
1128E	4	" Hinge Screw		12
818D 24672		I numb Screw.		10
24673		Rock Shaft.		30
24015 145D	"	Crank (back) with two 145b	i	75
24674	u	" " Clamping Screw" " " (front) with 208p, 1519E.		04
24074		1902 and two 141D	1	2.5
141p	Feed	Rock Shaft Crank (front) Clamping Screw	1 /	04
1904	#	" " " Roller (roller only)		
229D	"	" " " Cap Screw		12
12424	"	cap screw		02
		Washer		02
988c	Feed	Rock Shaft Crank (front) Roller Screw Stud.	1	15
1902	41	" " " and Screw		10
		Stud, Nos. 229D, 988C, 1904 and 12424		35
1519E	Feed	Rock Shaft Crank (front) Roller and Screw	1	
		Stud Nut		03
		ng Foot.	1	50
24779	"	" Plate	1 /	50
228D	"	" Adjusting Screw	ļ	02
228D 24780		ociew	į	02
24/00	r eegi	ng Foot complete, Nos. 24778, 24779 and two 228bOil Milling Dep't.	1	
201n	Feedi	ng Foot Screw	3	00
		ring Cam Small Parts Dep't.	6	
24677	· aune	- · · · · · · · · · · · · · · · · · · ·	2	30
61c	и		[75
24678	**	" Lever	1	
423c		n Dever	il Li	75
420U	-	" " " Adjusting Screw	Į)	05

PARTS FOR MACHINE NO. 44-76

PARTS FOR MACHINE NO. 44-76

10 PARTS FOR MACHINE NO. 44-76	PARTS FOR MACHINE NO. 44-76 11
24738 Thread Take-up Spring 0 7336 " " Regulator 2 446c " " Set Screw 0 24713 Toe Retainer 0 208D " Set Screw 0 24079 Drip Pan with four 1 in. wire nails 2	418D Screw Stud 08 3 10141 Spring 07 3 2106 Thread Guide. 07 41596 Bobbin Winder Nos. 32D, 35D, 27302, 27303, 27540. 07
ACCESSORIES	complete, for 19131, Nos. 27308 and 41596.
12362 " " Plate	(DOCKING TOPADIE)
26026 Screw Driver (machine). / 26485 " (shuttle tension). 0 10875 Wrench for 1517, 1518, 1519, 1520 and 1701. / 19221 " 936 and 1619 /	2117 " " Pin 0/ 297c " " Screw Centre 1/0 5
BOBBIN WINDER (SWINGING AUTOMATIC, RIGHT HAND)	three 506E
32D " Hinge Screw/	1507E.
27610 Spindle with 15072. 2846 " for spool. 27611 " 27610 with 2846. 27306 Spool Pin. 27307 " Stand. 27308 Spool Stand complete, Nos. 418D, 1562, 2106, 10141, 11241, 27306, 27307 and two each 2455 and	1570E " " Nut 32 32 35075 " " Washer 37 37 37 37 37 37 37
27587 Stop Latch	25086 Wrench for 1507 and 1510 / 0 25226 Stand (iron work) complete, Nos. 7958, 11742, 25074 25082, 25086, 25133, 25166, two 25064 and four 506E. / -