Singer 71-42

LIST OF PARTS COMPLETE

DAIDAL ...



NO. 71=42 MACHINE

The Singer Manufacturing Co.

LIST OF PARTS COMPLETE

FOR

NO. 71-42 MACHINE

Makes whip stitch, has no barring device, knives from in. to 1 in. long, cuts both threads and the hole automatically after stitching

*39644	Arm	with 2	4081							٠.,		
8582	u	Dowel	Pin		<i>.</i>		 .					
748E	u	Screw	(back).									
868E	"	u	(front).		. .						٠,٠	
23352	u	Shaft.				<i></i> .						
*24081	u	и	Bushing	(fro	nt)						. •	
12357	···	и	Flanged	Bus	hing	(back	r)					
446c	"	44	u	•	"	"	Set	Scr	ew.			
4784	u	и	Oil Pad.							٠.		
1069D	u	14	Screw					.				
12193	u	Side C	over									٠
286D	и	и	" Th	umb	Scre	w	<u>.</u>					
23671	"	Top C	over									
808	"	44	" Scr	ew								
*39603	\mathbf{Bed}	with t	wo 23372	2						٠.		
39538	u	Oil Gu	ard									
. 1235	u		" Scre	w						٠.		
23372	"	Suppor	rt Stud									
23373	Belt	Cover.										
39582	"	u	Bracket									
183	u	и	u	Scr	ew	<i></i>						
23375	"	u	Hinge B	lock	with	1 4 600	J					-
23376	"	и	u	ш								
460c	и	.44	u	46	. "	Set S	crew.		·			
217	"	и	$\mathbf{Screw} \dots$									
23567	Clan	np Arn	1					·				
625	**	u	Adjusti	ng S	Screw							
1547	. "	u	u		и	Nut						
39584	44	"	Bracke	t wi	th 19	6				٠.,		
40003	"	"	и	Gu	iide (
217	"	"	"		" '		Screw					
40004	. "	u	и		" (right)					

217	Clamp	Arm I	racket Guid	de (right) Screw
191c	и	".		w
39541	u	"	u u	Washer
23379	, u	" I	inge Block	
23380	u	"	-	Pin
196	. "	u	и и	" Set Screw
1231	<i>u</i> .	" 0	orony	
40005	"			
40006	u	« «		
	"	 		1 40007 and four 404D
40007	-	"	I Iat	te
404D		==		Screw
23384	"	"	Connecting	g Rod
52	"	u	."	" Hinge Screw
39591	u.	u	Guide (left	t)
756D	u	u	u u	Screw (long)
1345D	44	u	u u	" (short)
40008	"	и	" (rigl	ht)
1230	-44	"	" "	
39604		"	Plate	
1231	и	"		w (back)
404p	·	"	# # #	
. 40010	"	"		
	u	"		with 240D, 1960 and 39583
1232c	"		"	Hinge Screw
1960	**			Roller and Screw Stud with
				$Roller \ and \ Screw \ Stud \ Nut$
39544	ш	"		Slide
1347c	44	"	u .	Stud (to regulate length of
		butto	n hole)	
1671c	Clamp			Stud Nut
39532	" -	. "		" Sleeve
39583	u	u	u	" Stop
240p	и	"	и	" " Screw
39605	и	u	Slide with	1345D, 39591 and two 756D
23392	····	и		e (left)
914	"	"	" "	" Screw
23393	u	. "		belew
		"		(right)
914	"	"		" Screw
23394	**	-		r with 1960
23395	u	u	" -"	Regulator
23396	и	u	" "	" Cap
223D		. ".		" " Screw
67D	"	"	u u	" Screw
1960	"	u ·	u u	Roller and Screw Stud
		with	1520E	******
1520E	Clamp			ver Roller and Screw Stud
	P			
7278	Clamn			r Socket Joint
, 5		Julia		* ~~~~~ * OTH (

1234c	Clamp	Carrier	Slide	Regulatir	ig Stud.		
23397	. "	"	"	"		Bushing	
1658c	u	4,	"	. "	u	Thumb l	Nut
1256D	и	ш	"	Screw			
39606	"	Check	with	39607 ar	nd two	each 23	37 and
		1348c,	for $\frac{3}{2}$	8 in. to 3/2	in. but	tton hole	
39639	Clamp	Check v	vith 39	607 and t	wo each	237 and	1348c,
		for 3/8	in. to	1 in. but	ton hole	s	
39607	Clamp	Check	Section	n and Cut	ting Pla	ate	
237	" .	"	и	"	u i	Screw	·
1348c	ee	и	"	u		Sup	port
		Stud.					
1297	Clamp			. 			
40014	"						
40015	"	"		Connectio			
41D	u	и	и	"		e Screw	
1520p	"	и	и	u			Jut
1901	u	. "	"	"	Rolle	r and	
2002		Study	with 29	29D and 1			
40016.	Clamn			Connect			
10010.	Ciamp	-	-	et			
157	Clamp			Connec			
101	Clamp	•	-	et Screw			
39541	Clamp			Connec			
09041	Clamp	Turning	5	a Connec	mon in	mer and	DCLCW
		Ctural 1	Dunalea	+ Canon T	Mahan		
. 9905	¥'lla mam			et Screw			
	Clamp		g Arm	Connec	tion Ro	oller Cap	
229D 12424	Clamp	Lifting "	g Arm	Connec	tion Ro	oller Cap	Screw "
12424	• " •	Lifting " Wash	g Arm	Connect	tion Ro	oller Cap	Screw "
12424 199	" Clamp	Lifting " Wash Lifting	g Arm	Connect	tion Ro	oller Cap	Screw
12424 199 40017	Clamp	Lifting Washe Lifting	er	Connect Screw	tion Ro	oller Cap	Screw "
12424 199 40017 40018	Clamp "	Lifting Wash Lifting "	er	Screw	tion Ro	oller Cap	Screw "
12424 199 40017 40018 162D	Clamp	Lifting Washe Lifting " " "	er Arm	Screw Stop	tion Ro	oller Cap	Screw "
12424 199 40017 40018 162D 38	Clamp	Lifting Washe Lifting " " " " "	er	Screw Stop " Brad	cket.	oller Cap	Screw "
12424 199 40017 40018 162D 38 1611E	Clamp	Lifting Washe Lifting " " " " "	er	ScrewStop	cket	oller Cap " " cew Nut	Screw "
12424 199 40017 40018 162D 38 1611E 40019	Clamp	Lifting Washe Lifting " " " " " " "	er	ScrewStop	cket	oller Cap " " rew Nut	Screw "
12424 199 40017 40018 162D 38 1611E 40019 59D	Clamp	Lifting "Washe Lifting " " " " " " "	g Arm	Screw Stop " Brad" " Hing" " Pite"	cket. Scr ge Screv nan.	ew	Screw "
12424 199 40017 40018 162D 38 1611E 40019 59D 40020	Clamp	Lifting Wash Lifting " " " " " Plate	g Arm	Screw Stop	cket. Screy Ge Screy Hin	ew	Screw "
12424 199 40017 40018 162D 38 1611E 40019 59D 40020 1235	Clamp	Lifting Wash Lifting " " " " " " Plate " S	erArm	Screw Stop	cket. Screye Screy nan	ew	Screw "
12424 199 40017 40018 162D 38 1611E 40019 59D 40020 1235 23573	Clamp	Lifting "Wash Lifting " " " " " " " " " " Plate " " S	erArm	ScrewStop	cket. Screye Screy Hin	oller Cap " " " " " " " " " " " " " " " " " "	Screw
12424 199 40017 40018 162D 38 1611E 40019 59D 40020 1235 23573 402D	Clamp	Lifting Wash Lifting " " " " Plate S " " S	er	Screw Stop " Brad" " Hing" " Pite" " "	cket. Screy nan Hin	oller Cap " " " " " " " " " " " " " " " " " "	Screw "
199 40017 40018 162D 38 1611E 40019 59D 40020 1235 23573 402D 23574	Clamp	Lifting Wash Lifting " " " " Plate " Post	erArm " " " " " " " " " " " " " " " " " " "	ScrewStop	cket. Screge Screw	oller Cap " " " " " " " " " " " " "	Screw "
12424 199 40017 40018 162D 38 1611E 40019 59D 40020 1235 23573 402D 23574 1659c	Clamp	Lifting Wash Lifting " " " " " Plate " S " Post. Pressur	erArm " " " " " " " " " " " " " " " " " " "	Screw Stop Hing " Hing " Pite " Screw Screw Strew Tulating T	cket. Screge Screw han Hin	oller Cap " " wew Nut Suge Screw	Screw "
199 40017 40018 162D 38 1611E 40019 59D 40020 1235 23573 402D 23574 1659c 23404	Clamp a a a a a a a a a	Lifting Washe Lifting " " " " Plate " S " Post. Pressur	y Arm arm arm arm arm arm arm arm	Screw Stop " Brad" " Hing" " Pite" " Screw	cket. Scr ge Scre nan Hin	oller Cap " ew. Nut. Sige Screw	Screw
199 40017 40018 162D 38 1611E 40019 59D 40020 1235 23573 4002D 23574 1659c 23404 23693	Clamp a a a a a a a a a a a a a	Lifting Washe Lifting " " " " " Plate S " Post. Pressur Spring "	y Arm arm arm arm arm arm arm arm	Screw Stop " Brad" " Hing" " Pitm" " Screw	cket. Screge Screw Hin	oller Cap " " " " " " " " " " " " " " " " " "	Screw
199 40017 40018 162D 38 1611E 40019 59D 40020 1235 23573 402D 23574 1659c 23404 23693 1294	Clamp a a a a a a a a a a a a a	Lifting " Washe Lifting " " " " Plate " " Post. Pressur Spring "	g Arm er. Arm " " " " " " " " " " " " "	Screw Stop	cket. Screge Screw nan. Hin	oller Cap " " " " " " " " " " " " " " " " " "	Screw
12424 199 40017 40018 162D 38 1611E 40019 59D 40020 1235 23573 402D 23574 16592 23404 23693 1294 1550	Clamp a a a a a a a a a a a a a	Lifting Washe Lifting " " " " Plate " " Post. Pressur Spring " "	g Arm er. Arm " " " " " " " " " " " " "	Screw Stop	cket. Screw nan. Hin	oller Cap " " " " " " " " " " " " " " " " " "	Screw
12424 199 40017 40018 162D 38 1611E 40019 59D 40020 1235 23573 402D 23574 16550 23404 23693 1294 1550 24028	Clamp a a a a a a a a a a a a a	Lifting Washe Lifting " " " " Plate " " Post. Pressur Spring " "	g Arm er. Arm " " " " " " " " " " " " "	Screw Stop	cket. Screw nan. Hin	oller Cap " " " " " " " " " " " " " " " " " "	Screw
12424 199 40017 40018 162D 38 1611E 40019 59D 40020 1235 23573 402D 23574 16592 23404 23693 1294 1550	Clamp a a a a a a a a a a a a a	Lifting Washe Lifting " " " " Plate " " Post. Pressur Spring " "	g Arm er. Arm " " " " " " " " " " " " "	Screw Stop	cket. Screw Screw Hin Humb N	oller Cap " " " " " " " " " " " " " " " " " "	Screw

.896E	Cranl	k Conne	cting Re	od Cap	Scre	w.i
908c		44	- 4	' Hir	ige So	rew
1619E	44	"			Č .	" Nut
23406	Face	Plate			· · · · ·	
217	u					
23672	Feed					
*12204		· "	. "			, , , . ,
145E	u	u	и	_		7
375c		44	"			ew
1518E	"	4.	"		4	
23412	"	Eccent	ric with	448c		
448c	ш	"				
23413	44	Hand 1				214D and 1049
23414	и	manu i	ratenet			r with two 453C
25414 453c		u			Cona.	
39567	"	"	"	"		Set Screw
						Body with 214D
39522	reed					complete, Nos. 207c.
						049c
						Hinge Screw
39523	**	u	и	. "	·u	Point
1049c	. " .	u	u	и	"	" Position
207c						Point Screw
13218	"	"	u	и	44	Spring
214D	"	"	"	u	u	" Screw)
1049	"	u	u	"	44	Stop Screw
23416	"	u	"	Wheel	l with	460c
3012	u	"	44	ii .	Pin.	
460c	u	u	u	u	Set 8	Screw
23418	ш	Rock S	haft			
23419	Feed					23418 and 23420
23420	ш	и		•		n 23421
23421	44	"	"			g (leather)
446c	44	и	u t			Screw
39552	"	Wheel	with 234	132 an		.220D
150p	44					
23424	и					
39597	u		e "			k with 602D and
99991		3959	8			k with over and
769c	Feed					ck Adjusting Screw
39594	"	" "	"DilAirie	,	71 DIG	
09094						and 39504
185	Food					
109	reeu					ck Adjusting Screw
900-	Trans					-1- A 3141 G
898C	reed		_	-		ck Adjusting Screw
00504	T2					
39504	reed					ck Adjusting Screw
		Clan	iping Sc	rew W	asher	

39598	Trood	Wheel	Driving	Loszon	Block Lock Spring
602D	i eeu	w neer	Dirving "	me v ei	" " Screw
23427	44	"	и	и	T1
404D	44	u	"	"	" Screw
23428	"	"	"	"	Pitman
23428 777	44	"	"		" Ball Joint Screw
*23429	."	"	"	 4	
		u .	u'	"	Оар
196		"	· u	"	DCI CW
1236c	u	".	"	"	Regulating Stud
7070	"	4 .	и.	u	Diceve
1658c	24			u	" "Thumb
		Nut			
1237c	7. 1			. ()	Screw
1520e	"	и.	u.	и	" Nut
14017	44	и	"	. "	" Washer
23552	**	·	u	. "	Section (long)
23553	46	· u	. • 4	ű	" (short)
23554	44	4	u	"	Spring
23555	Feed	Wheel	Friction	Ring	complete, Nos. 23552 to
		2355	i4		
2117	Feed	Wheel	Pin		
2254	u	"	Retainir	ig Clut	t ch
39595	"	и,		"	Cap
898	44	u	"	. 41	" Screw
39504	4	· "	"	и	" " Washer
2256	"	u	u		Spring
233D	, 40		"	"	" Screw
721	и	u		u	" Stop Screw
39596	4	u	u	"	Stud
23431	.,	и	Shaft		Doud
457c			DHALL		
23432		u	" O	l Hala	
20402	u	u			Plug Screw
9905	u	. "	Tripping	Point	Plug Screw
220D	4	. "	Tripping	Point	Plug Screw
23433	"	u	Tripping " "	Point	Plug ScrewScrew.
23433 1257c	u	и и	Tripping " " "	Point " Lever	Plug Screw. Screw. r. Hinge Screw.
23433 1257c 23587		п п п	Tripping " " " "	Point Lever	Plug Screw. Screw. r. Hinge Screw. Point.
23433 1257c 23587 203c	u 	и и и	Tripping " " " " "	Point Lever	Plug Screw. Screw. r. Hinge Screw. Point. " Screw.
23433 1257c 23587 203c 23435	и и и	и и и	Tripping " " " " " " "	Point Lever " " " "	Plug Screw Screw Hinge Screw Point Screw Spring
23433 1257c 23587 203c 28435 190D	и и и и	и и и и	Tripping " " " " " " " "	Point Lever " " " " " "	Plug Screw Screw Hinge Screw Point " Screw Spring. " Screw
23433 1257c 23587 203c 23435 190D 179E		и и и и	Tripping " " " " " " "	Point Lever " " " "	Plug Screw Screw Hinge Screw Point Screw Spring
23433 1257c 23587 203c 23435 190D 179E 23443	" " " " " " " Knife	. 14 i	Tripping " " " " " " " " " " " "	Point Level	Plug Screw Screw Hinge Screw Point " Screw Spring. " Screw
23433 1257c 23587 203c 23435 190D 179E 23443 23444	" " " " " " " " Knife	" " " " " " " " " " " " " " " " " " "	Tripping " " " " " " " " " " "	Point Lever " " " " " " " " " " " " "	Plug Screw. Screw. Hinge Screw. Point. " Screw. Spring. " Screw. Stop Screw.
23433 1257c 23587 203c 23435 190D 179E 23443 23444 23445	" " " " " Knife		Tripping " " " " " " " " " " "	Lever	Plug Screw Screw Hinge Screw Point " Screw Spring. " Screw Stop Screw
23433 1257c 23587 203c 23435 190D 179E 23443 23444	" " " " " " " " Knife	" " " " " " " " " " " " " " " " " " "	Tripping " " " " " " " " " "	Lever	Plug Screw Screw Hinge Screw Point Screw Spring Screw Stop Screw
23433 1257c 23587 203c 23435 190D 179E 23443 23444 23445	" " " " " Knife		Tripping	Levey	Plug Screw Screw Hinge Screw Point " Screw Spring " Screw Stop Screw
23433 1257c 23587 203c 23435 190D 179£ 23443 23444 23445 23446	" " " " " " Knife " "	" " " " " " " " " " " " " " " " " " "	Tripping " " " " " " " " " " " " " " "	Levey	Plug Screw Screw Hinge Screw Point " Screw Spring " Screw Stop Screw
23433 1257c 23587 203c 23435 190D 179£ 23443 23444 23445 23446 23447	u u u u u u u u u u u u u u u u u u u	" " " " " " " " " " " " " " " " " " "	Tripping " " " " " " " " " " " " " " "	Leve	Plug Screw Screw Hinge Screw Point " Screw Spring " Screw Stop Screw
28433 1257c 23587 203c 28435 190D 179E 23443 23444 23445 23446 23447 23448	u u u u u u u u u u u u u u u u u u u	" " " " " " " " " " " " " " " " " " "	Tripping " " " " " " " " " " " " " " " " " "	Lever	Plug Screw Screw Hinge Screw Point " Screw Spring " Screw Stop Screw

23451	Knife	, ¾					5524
23452	"	13/16	"		<i></i>		
23453	u	7/8	"	 			
23454	и	1546					
23455	"	1	4				
23460	u	_					
23461		Dai "					
	u	"	Connecti "	ıng ı.			
1239	"	"	"		" п	_	Cap Screw
1240c							Screw
23462	u	"	ű	S			19c
1319c	".	44	u			-	ng Screw
23463	"	"		ging l			
23464		и	"				with 1963
23465	"	"	u		"	u	Bracket
157	"	44	44		u	u	" Screw
90c	"	44	и		·u	"	Hinge Screw
1963	. "	"	"		u	. 14	Roller and Stud
23468	. "	"	. и		44	. "	Spring
1241E	u	24		•	u	" .	" Screw
			ud	<u>.</u>			. <u></u>
23466			Disengag	ging I			Tripping Point
23467	"	"			"	. "	" "
			llar with				
448c	Knife						Tripping Point
175D	Knife						Tripping Point
			rew				
				ng L		_	Screw
23606	«	и	u u		" ;	Sprin _i	g
1242E	-	"	"				Screw
240D	. "	"				-	Screw
23469		"	Driving :	Lever "			
1290c		"	u u	"		,	ew
598c		"	"	"	Scre	w stu	d Nut
1520E	"	"	. "	"	On win		
23681		"	"	u	Sprii	_	
805c		. "	"	"	···		'ew
23470	. .	. "	"	"	(inte	rmea.	iate)
23471				••		•	Connecting
F4.00	77		nk	T	- /int		liate) Connecting
540	Kniie		-		•		
1000	V-:						ate) Hinge Screw
	Kniie	e Bar	Talland 1	uever "	(mtel	meul	Roller and
1959	••	••		 mith	9905	ond.	12424
000-	T/nif						liate) Roller Cap
ZZ9L	KIMI		_				
			TCM				

NO. 71-42 MACHINE PARTS

12424 Knife Bar Driving Lever (intermediate) Roller Cap
Screw Washer
1287E Knife Bar Plug Screw
12495 " " " Rivet
23682 " " Spring
39566 " " Stop
39565 Knife Bar Stop complete, Nos. 1673c, 23548 and
39566.
1673c Knife Bar Stop Lock Nut
23548 " " " Plug (fibre)
23473 " Holder
1243c " " Guide Stud
1608E " " " Nut
157c " Screw
19410
1010 Dolewin
20000 Transport
39600 Needle Bar (hollow) with 904
23476 "Connecting Link with 794E
794E " " Adjusting Screw
1021E " " " Cap Screw
39601 " " Stud with 1341c
1341c " " " Set Screw
23477 " " Crank with 858c, 1036c, 1065c and 1258c
1065c " " Position Screw
858c " " Set Screw
23478 " " Frame with 4784
23674 _ " " Cam and Bevel Gear
1244c " " " " " " " " " " " " " " " " " "
23486 " " " Driving Bevel Pinion with two
453c
453c Needle Bar Frame Driving Bevel Pinion Set Screw
23675 " " Pitman (regulator end)
23610 " " " (hinge screw end)
190c " " " Adjusting Screw
7071 " " " " " Washer
23676 Needle Bar Frame Pitman (adjustable) complete,
Nos. 23610, 23675 and two each 190c and
7071
1042c Needle Bar Frame Pitman Hinge Screw
1547D " " " " " Nut
23677 " " Regulator with 1956
1038c " " " Adjusting Screw
7070 " " " " " Sloovo
1589c " " " " " Thumb
Nut
1956 Needle Bar Frame Regulator Roller and Screw Stud
with 229D, 1655E and 23389
WILL 223D, 1000E RIIQ 20009

1.

1655E	Needle	Bar F Nut	rame R	egulator F	Roller	and So	erew Stud
229D	Needle		Frame	Regulato	r Ro	ller (ap Screw
23389	" .	"	"	«	. 140	4	#
200,00		Wash	ner .				; 9
23667	Needle	Bar F	rame R	egulator S	hud		
673	"-			rew Centi			
1517p	u	u		" Cellu			
39608	. "	•			1441	, Si	
404	u						
904	u	Set S	row		570		
24043	Oscillat			ft			
23493							84, 23494
		and 2	4043				
23494		ing R		ft Hinge l			
23421	и						de Plug
878D	Oscillat			aft Hing			Hole Stop
12459	Oscillat	ing F	lock Sh	aft Hing	Pin	01.1	Hole Stop
448c	Oscillat	ing R	ock Sha	ft Hinge 1	in Se	t Scre	w
4784	. "			Oil Pad			
23417	"	S	aft				
24046	и			hing (bac			
24047	. "						
23495			" Cra	nk			
23496	Oscillat	ing S					lc, 1636E,
		2349	5 and 24	050			
2269	Oscillat	ing Sl	naft Crai	nk Pin			
231c	ш	•	u "u	Set Sci	ew		
19448	"		u u	Slide E	Block.		
229D	u ·		u u	u			Screw
12424	"		u u	"	"	"	· "
		Wash	er			, , . <i></i> .	. , ,
1035c	Oscillat						Stud
1636E	ű	Ü	u u	"	a	"	" Nut
24050	Oscillat	ing S	haft Cra	nk 'Slide	Block	comp	lete, Nos.
		229D	1035c,	12424 and	1944	8	<i></i>
23497	Pulley	(loose)	100.00	W		
40024	u - i	(tight). <i></i>				
23499	u ·	"		rbalance.			
28034	u.	"					
40025	u	· u	Pin	· · · · · · · · · ·			
23500	Shuttle	Bobb					
15140	а	"	Case	Latch			
2973	и	и	и				
2974	и	. "	. , 4				Pin

2975 Shuttle Bobbin Case Latch Spring.
592E " " Stop Screw
15141 " " Hinge, Nos. 2973, 2974 and
15140
40026 Shuttle Bobbin Case Position Finger
2523 " " " Rivet
40027 Shuttle Bobbin Case complete, Nos. 591, 592E, 2523,
2975, 15141, 23680 and 40026
40028 Shuttle Body
591 " Tension Regulating Screw
23680 " " Spring
40029 Shuttle, 111/16 in. diam., Nos. 23500, 40027 and 40028
23505 " Driver with 462c
2269 " " Pin
462c " Set Screw
14049 " Race Back
2532 " " Position Pin
2533 " " " Spring
648p " " " Screw
23506 " " Body
7326 " " Cap
662D " " " Screw
23621 Shuttle Race complete, Nos. 648D, 2533, 7326, 14049,
23506 and two each 662D and 2532
145 Shuttle Race Screw
39627 Starting Lever
39627 Starting Lever
717c " " Adjusting Screw
717c " " Adjusting Screw. 1520e " " " " Nut 21643 " " Belt Shifter. 159 " " " Screw. 23510 " " Bracket.
717c " " Adjusting Screw. 1520e. " " " " Nut 21643 " " Belt Shifter. 159 " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin.
717c " " Adjusting Screw. 1520e. " " " " Nut 21643 " " Belt Shifter. 159 " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin 123E " " Screw.
717c " " Adjusting Screw. 1520e. " " " " Nut 21643 " " Belt Shifter. 159 " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin 123E " " Screw. 23511 " Rod.
717c " " Adjusting Screw. 1520e. " " " " Nut 21643 " " Belt Shifter. 159 " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin 123E " " Screw. 23511 " Rod. 61c " " Hinge Screw.
717c " " Adjusting Screw. 1520e. " " " " Nut 21643 " " Belt Shifter 159 " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin. 123E " " Screw. 23511 " Rod. 61c " " Hinge Screw. 564c " Screw Centre.
717c " " Adjusting Screw. 1520e. " " " " Nut 21643 " Belt Shifter. 159 " " " Screw. 23510 " Bracket. 8582 " " Dowel Pin. 123E " " Screw. 23511 " Rod. 61c " " Hinge Screw. 564c " Screw Centre. 1508e " " " Nut 14174 " Spring. 124 " Stop Screw.
717c " " Adjusting Screw. 1520e. " " " " Nut 21643 " " Belt Shifter. 159 " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin. 123E " " Screw. 23511 " " Rod. 61C " " Hinge Screw. 564c " " Screw Centre. 1508e " " " Nut. 14174 " " Spring.
717c " " Adjusting Screw. 1520e. " " " " " Nut 21643 " " Belt Shifter. 159 " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin 123e " " Screw. 23511 " Rod. 61c " " Hinge Screw. 564c " " Screw Centre. 1508e " " " Nut 14174 " Spring. 124 " " Stop Screw. 1518e " " " Nut. 39628 Stop Cam with 39629
717c " " Adjusting Screw. 1520e. " " " " " Nut 21643 " " Belt Shifter. 159 " " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin 123E " " " Screw. 23511 " " Rod. 61c " " " Hinge Screw. 564c " " Screw Centre. 1508E " " " Nut 14174 " " Spring. 124 " " Stop Screw. 1518E " " " Nut 39628 Stop Cam with 39629. 39580 " Interlocking Rod.
717c " " Adjusting Screw. 1520e. " " " " " Nut 21643 " " Belt Shifter. 159 " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin 123e " " Screw. 23511 " Rod. 61c " " Hinge Screw. 564c " " Screw Centre. 1508e " " " Nut 14174 " Spring. 124 " " Stop Screw. 1518e " " " Nut. 39628 Stop Cam with 39629
717c " " Adjusting Screw. 1520e. " " " " Nut. 21643 " " Belt Shifter
717c " " Adjusting Screw. 1520e. " " " " Nut. 21643 " " Belt Shifter. 159 " " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin. 123E " " Screw. 23511 " " Rod. 61c " " " Hinge Screw. 564c " " Screw Centre. 1508E " " " Nut. 14174 " " Spring. 124 " " Stop Screw. 1518E " " " Nut. 39628 Stop Cam with 39629. 39580 " Interlocking Rod. 23514 " " " Guide with 1070c and
717c " " Adjusting Screw. 1520e. " " " " Nut. 21643 " " Belt Shifter. 159 " " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin. 123E " " Screw. 23511 " " Rod. 61c " " " Hinge Screw. 564c " " Screw Centre. 1508E " " " Nut. 14174 " " Spring. 124 " " Stop Screw. 1518E " " " Nut. 39628 Stop Cam with 39629. 39580 " Interlocking Rod. 23514 " " " Guide with 1070c and 1959. 1070c Stop Cam Interlocking Rod Guide Set Screw. 21650 " " " Washer (raw
717c " " Adjusting Screw. 1520e. " " " " Nut. 21643 " " Belt Shifter. 159 " " " " Screw. 23510 " " Bracket. 8582 " " Dowel Pin. 123E " " Screw. 23511 " " Rod. 61c " " " Hinge Screw. 564c " " Screw Centre. 1508E " " " Nut. 14174 " " Spring. 124 " " Stop Screw. 1518E " " " Nut. 39628 Stop Cam with 39629. 39580 " Interlocking Rod. 23514 " " " Guide with 1070c and

1

19

913c	Stop C					Regulating
1638E	Stop C	am In	terlocking	Rod	Spring	Regulating
	•					
39629	Stop Ca	ım Pin				
23515	u ·	" Sprin				
23516	" ' v					
23517	"		Cover	with 2	3499 an	d two each
9780	Stop Ca	ım Sprin	g Cover I	ositio	n Pin	
997£	4		. " §	crew.		
39637	- 44	u · u ·	Stop B	lock	v	
1349c	44 1	u u	" Sc	rew		
39638	u .	и .и	. "	" B	lock	
457c	46 , 4	u. u	u	" Se	t Screw.	
23518	4 Le	ver		<i></i> .		
78D	4					
9540	ш		ng			
2102	Tension					
1560c	"		ting Thur			
23519	и	_	r with 20			
40033	"	. "			C	
12538	44	и				
641c	и	. "	4.4			
200	"	и			• • • • • • • • •	
23520	u					
40034	 "	"				
679c	- u	· <i>u</i>	, 0			Stud
		u .		"	" "	" Nut
1520E		"	a			Nuc
2269	"			_		
413	"					
8238	4					
23669	"	Inread "				
460c						
40035	Thread.	(lower)	Cutting E	ilade		
40036						th 40038
40037	u	44	u	u	116	ver
3 2 D	"	"	-			IIIngo
		Screw		<u></u>		
15514				Blade	Carrier L	ever Spring
12 41 E	"		"			·u
	rm -					Star
435c	Inread					Lever Stop
1520e	Thread					Lever Stop
		Screw N	lut			
40038				Blade C	arrier Stı	ıd
240D	u	и	u	" S	crew	

40040	Thurs J	(1,000,000)	Cutting	Torrow		
	. Thread	(lower).	Cutting.		l Screw	
1351c		"	"	" . Da.		
1520E	. ", "	. "				
40039		"	Pull-on			
106D	u				ide Screw	
1350c	"	".	-		nge Screw	
40048	. "					
39609	46	. "	Cutting			
39610	· u	u	. "	", Co	nnecting Rod	
40043	" .	"	"	"		Collar
237	Thread	(upper)	Cutting	Blade Cor	mecting Rod	Collar
40044	Thread	(upper)	Cutting	Blade Con	necting Rod	Collar
		(front)	with 237	.		
2273	Thread	(upper)	Cutting	Blade Cor	necting Rod	Collar
•						
237	Thread	(upper)	Cutting	Blade Cor	necting Rod	Collar
40045	Thread	(upper)	Cutting	Blade Cor	necting Rod	Collar
10010	1111000	(front)	Washer	(raw hide)	
106	Thread	(unner)	Cutting 1	Blade Con	necting Rod	Hinge
100	1 m ca u					
23606	Thread	(uppor) Cutti	na Blada	Connecting	Rod
20000	Imeau	Coming) . Outur	ng Diade		1000
90211	mua) Cutti		Connecting	
39611	Thread			ng Diaue	Connecting	Itou
200	rm	Spring	bracket		Commonting	
203	Thread	(upper) Cutta	ng Biade	Connecting	Tod
	rm 1			Screw		Dod
7071	Thread				Connecting	
		Spring	Bracket	Screw Wa	sher	70.1
40047	Thread				Connecting	
		Spring	Collar w	i th 646		
646	Thread				e Connecting	
		Spring	Collar S	et Screw		
21699	Thread	(upper)	Cutting		sition Pin	
219	"	. "	u		rew	
40049	"	ш	u		aft with 2169	99
40050	. "	«	. "	Tí	" Crank	with
		906c				
2269	Thread	(upper) Cuttin	g Blade	Shaft Crank	Pin
906c		"	"	u'.	u u	Set
		Screw.				
40051	Thread				th 641c	
40052	"	" (upper)	"		ock Pin	
40053		"	ű.			g
1352c	и.	<i>u</i> .	. " "		"Sc	_
10000	•		or .			"
		DROUIL	5			

2117	Thread	(upper)	Cutting	I ever	Pin		
641c	"	(uppor)	"	,		rew	
40054	u	. u	4	и			
40067	"	u	æ			Bracket.	
966D	. "	·	и	и	"	"	Screw
39612	u	и.	u.			Crank wi	~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~
99012		each 200					
40057		(upper)					
766D	ınreau.	(upper)		g Tev	er onai		Laten . "
מסט	. "						
10050	m	Hinge Se					
40058	Inread	(upper)					
204	6 73 1	Spring.					
.206		(upper)					
		Spring S					
51144	Thread	(upper)					
	::	Spring S					
40059	Thread	(upper)					
- 1		Stop Pir	1				
200		(upper) (
40060	" .	" ,	ш				
1241	."	"u"		. "	и	Screw St	tud
717c	и	u	. "	".		crew	
1520e	α	"	u	"	"		t
12400	u	Retainer	Sleeve			· 	
12401	u	. "				x	
12402	u	и	Stud.	· · · · · · · · ·			
460c	. "	. "	" S	Set Scr	e w		
12399	Thread	Retainer	comple	ete. No	s. 1240	0 to 1246	02
23523	u	Take-up					
1036c		"				w	
1258c	"	4	. 1. 1				
23524	41	" (;					
12166	"	"					
23543	и	u .					
11204	4	, 4 , , , ;				in	
430c	"			"		Set Sc	
4784		и	" "	Oil Par			
23525	• •	Take-up					
40040	, in eac	and 2354					
7335	Three						
7335 23526		Take-up	opring				
	. u	"	"	regul:		t Screw.	
446c							
23527	•	n with tv			. –		
2367 9	. " "	⅓ in. (аеер	• • • • • • •			

IRON BASE FOR MACHINE

23528	Bed	Frame	Clamp	Lifting A	Arm Stop	
162D	u		и	. " .	"	Screw
24106	ű	·	Cushio	n (felt)		
158E	"	"	**	Screw.		
19226	и	<i></i>	Hinge	Connection	on	
19397	· u	. "	"	cc cc		
211	"	**	"	"	" S	crew
19398	\mathbf{Bed}	Frame	Hinge	Connect	ion com	plete, Nos. 211,
			00 1	10000		•
		192	26 and	19397		
16555	Bed					
16555 14010	Bed "	Frame	Hinge	Plate		
	и	Frame "	Hinge "	Plate " Riv	vet	
14010	и	Frame Frame	Hinge " with 28	Plate "Riv 3528, two	vet each 162	
14010	и	Frame Frame four	Hinge " with 28 r each 1	Plate " Riv 3528, two 58E, 2410	vet. each 162 06 and six	D, 16555, 19398,

ATTACHMENTS AND ACCESSORIES

23530	Gauge, for 1/4 in. to 1 in., for setting length of buttor
	hole
23436	Guide (back) for cuffs
23437	" (left) " "
23438	" (right) " "
23439	" (left) " collars
23440	" (right) " "
23441	. " (corner) " "
23549	" for shirt bosoms
23550	" ". ". bands
1238	" Screw
27133	Machine Rest Pin (wood) 6 in. long, with 25070,
25070	" " Cushion Tack (rubber)
25955	Oiler with 25956
25956	" Spout, 8½ in. long
11831	Screw Driver (machine) large
26026	" " small
26485	" " (shuttle tension)
14209	Treadle
39569	" Chain, 45 in. long, with 39575 and 39576
39570	" " Guide Bracket
39571	. " " " Pulley
1064D	" " " Screw
39575	" " Hook (lower)
39576	" " (upper)
39572	Treadle Chain Guide complete, Nos. 39570 and two
	each 1064D, 39571 and wood screws 11/4 in
	No. 12 R H R

23551	Treadle Chain Screw Eye
7585	" Shaft
14210	" Stand
14211	Treadle complete, Nos. 7585, 14209, 14210 and four
	wood screws $1\frac{1}{4}$ in, No. 12
10875	Wrench for 1518 and 1520
21654	" " 1508 and 1638
23535	" 1671, for regulating length of button hole

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND) FOR NO. 23500

.27914	Base with 27916 and two 28084
27915	" Plate
389	" " Screw
389	" Screw
15072	Bobbin Position Pin
27916	Brake (leather)
28084	" Rivet
27302	Frame
32D	" Hinge Screw
27917	" Spring
27918	Pulley
27538	Spindle with 15072
27919	Stop Latch
35D	" " Hinge Screw
27920	Tension Bracket with 452c
27921	Tension Bracket complete, Nos. 5989, 10145, 27920
	and 27922
135D	Tension Bracket Screw
2455	" Disc
· 1562p	
418D	" Screw Stud
10141	" Spring
10145	" Thread Guide
5989	Tension complete, Nos. 418D, 1562D, 10141 and two
	2455
27922	Thread Eyelet Rod
452c	" " Set Screw
27923	Bobbin Winder for 27924, Nos. 32D, 35D, 27302,
	27538, 27914 and 27917 to 27919
27924	Bobbin Winder (swinging automatic, right hand)
	complete for 23500, Nos. 1350, 27915, 27921,
	27923 and four 389

TABLE · BELT GUIDE

23536	Belt Guide with two 168E
168E	" Set Screw
23537	Bracket with 448c
23538	Pulley
23539	" Shaft with 436c
436c	" " Plug Screw
448c	" Set Screw
23540	Table Belt Guide complete, Nos. 23537, 23539, two
	each 23536, 23538 and three wood screws
	11/4 in. No. 12 R. H. B

THREAD UNWINDER

FOR TWO LARGE SPOOLS

27555	Spool	Pin
27583	"	Rest
27556	46	" 27583 with 138B and two 27555
138 _B	u	" Set Screw
27557	"	Stand with 138B
27558	u	Weight, 4 in. diam., with 27592
27592	u	" Centre Pin
27559	Threa	d Guard
27563	- "	" Hub
330в	u	" " Set Screw
27560	и	" Rod, 26 in. long
138в	u	" Set Screw
449c	u	" Set Screw
27561	Threa	d Guard complete, Nos. 330B, 449C, 27559 and
		27563
27562	Threa	d Unwinder complete, Nos. 27556, 27557,
		27560, 27561, two 27558 and three wood
		screws 11/2 in No. 12