

SINGER
236W124

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 236W124

HIGH SPEED, SINGLE NEEDLE, LOCK STITCH, ROUNDED TOP POST,
HORIZONTAL UNDER TRIMMER MACHINE.

FEED WHEEL (BALL BEARING) AND BELT DRIVEN ROLLER PRESSER
FOR SIMULTANEOUSLY STITCHING EDGES AND UNDER TRIMMING
LININGS OF SHOES, SANDALS, SLIPPERS ETC.

THE MACHINE HAS A ROUNDED TOP HOOK POST, FEED POST, SLIDE COVER
AND THROAT PLATE TO FACILITATE STITCHING OPERATIONS ON SHOES.
THE HOOK TIMING, HOOK POST AND FEED POST ARE ADJUSTABLE FROM
TOP OF THE BED.

VERTICAL AXIS HOOK WITH METERED LUBRICATION AND
IMPROVED MECHANICAL OPENER.

HOOK DRIVING GEARS AND FEED CLUTCH OPERATED IN AN
OIL BATH.

OIL RESERVOIR IN THE BED FROM WHICH THE HOOK AND
HOOK DRIVING MECHANISM ARE AUTOMATICALLY LUBRICATED.

INTERMITTENT FEED WHEEL (BALL BEARING) ADJUSTABLE
FOR WEAR, AND BELT DRIVEN ROLLER PRESSER, BOTH
DRIVEN BY A "HORTON" TYPE CLUTCH.

HORIZONTAL UNDER TRIMMER SUSPENDED FROM THE ARM
IS MECHANICALLY DRIVEN BY A ONE-TO-ONE GEAR DRIVE
THE TRIMMER SPEED VARIES WITH THE MACHINE SPEED.

MACHINE NO. 236w124

*263776 Arm
263402 Arm Base
204235 Arm Base Position Pin (2)
200004E Arm Base Screw (3)
202005 Arm Base Screw Washer (3)

263403 Arm Cover (front)
200576X Arm Cover (front) Screw (2)
263404 Arm Cover Plate (back) (lower)
200112X Arm Cover Plate (back) (lower) Screw (2)
263405 Arm End Cover
200001C Arm End Cover Screw (2)
204235 Arm Position Pin (2)
200004E Arm Screw (3)
202005 Arm Screw Washer (3)
*263406 Arm Shaft
263573 Arm Shaft 263406 with 200333C, 200362C, 200382ALX and
263493
272142 Arm Shaft Ball Bearing (back)
263407 Arm Shaft Bushing (center) with 203100
203100 Arm Shaft Bushing (center) Oil Packing (wick)
200013X Arm Shaft Bushing (center) Set Screw
263782 Arm Shaft Bushing (front) with 203100
203100 Arm Shaft Bushing (front) Oil Packing (wick)
200338C Arm Shaft Bushing (front) Set Screw
263409 Arm Shaft Connection Belt (reinforced neoprene)
263410 Arm Shaft Connection Belt Pulley with 200363ALX,
350492C and two 214206

MACHINE NO. 236w124

350492C Arm Shaft Connection Belt Pulley Position Screw
200363ALX Arm Shaft Connection Belt Pulley Position Screw Check
Screw
200363ALX Arm Shaft Connection Belt Pulley Set Screw
214206 Arm Shaft Connection Belt Pulley Spring Flange
263783 Arm Top Cover
263590 Arm Top Cover Oil Tube with 170168 (2)
170168 Arm Top Cover Oil Tube Oil Metering Insert
200194F Arm Top Cover Screw (3)
*263413 Bed
263414 Bed Cover (bottom) with 263459, 267093 and 350777X
263415 Bed Cover (bottom) Gasket
350777X Bed Cover (bottom) Oil Screw Plug
200040E Bed Cover (bottom) Screw (10)
272154 Bed Cover (bottom) Screw Washer (fibre) (10)
263417 Bed Leg (3)
233939 Bobbin
235769 Bobbin Case Base with 202056, 203211 to 203213 and 203216
203211 Bobbin Case Base Latch
*202056 Bobbin Case Base Latch Pin
203212 Bobbin Case Base Latch Plunger
203213 Bobbin Case Base Latch Spring
241676 Bobbin Case Cap with 200594E, 200984C, 235771, 241674,
241675 and two 350405C
263826 Bobbin Case Lever
*203476 Bobbin Case Lever Eccentric
204243 Bobbin Case Lever Eccentric Position Pin

MACHINE NO. 236w124

203478	Bobbin Case Lever Slide Stud
263421	Bobbin Case Lever Slide Stud Base (adjustable)
263582	Bobbin Case Lever Slide Stud Base Position Pin
140862AL	Bobbin Case Lever Slide Stud Base Set Screw
241674	Bobbin Case Oiling Felt
241675	Bobbin Case Oiling Felt Retainer
350405C	Bobbin Case Oiling Felt Retainer Screw
235771	Bobbin Case Tension Spring
200984C	Bobbin Case Tension Spring Regulating Screw
200594E	Bobbin Case Tension Spring Screw
203216	Bobbin Case Washer (cloth)
241677	Bobbin Case complete, Nos. 235769 and 241676
263727	Edge Guide
263728	Edge Guide Bracket
200093X	Edge Guide Bracket Screw (2)
263729	Edge Guide Position Plate
200166X	Edge Guide Position Plate Screw (2)
263730	Edge Guide Rod
200739F	Edge Guide Rod Lifting Screw
263731	Edge Guide Rod Plunger
201735E	Edge Guide Rod Plunger Nut
263732	Edge Guide Rod Plunger Spring
263733	Edge Guide Rod Spring
263734	Edge Guide Rod Spring Plate
200166X	Edge Guide Rod Spring Plate Screw
200132X	Edge Guide Screw

MACHINE NO. 236w124

144262 Feed Clutch (brake)
263578 Feed Clutch (brake) 144262 with three 263574
1255C Feed Clutch (brake) Screw (3)
263424 Feed Clutch (brake) Supporting Plate
200911X Feed Clutch (brake) Supporting Plate Screw (3)
263422 Feed Clutch (drive)
263423 Feed Clutch (drive) 263422 with three 263574
144261 Feed Clutch (drive) Washer
131717 Feed Clutch Roller
68152 Feed Clutch Roller Plunger
131718 Feed Clutch Roller Spring
263579 Feed Clutch Sleeve with two 140409AL
140409AL Feed Clutch Sleeve Set Screw
263591 Feed Clutch Thrust Washer
263574 Feed Clutch Wear Plate
263425 Feed Clutch complete, Nos. 144261, 263423, 263458, 263578,
263579, 263591, six each 68152, 131717 and 131718
263426 Feed Driving Connection with four 200274E
200274E Feed Driving Connection Cap Screw
263427 Feed Driving Connection Tension Spring
263428 Feed Driving Crank with 350175E
140300C Feed Driving Crank Ball Screw
201616E Feed Driving Crank Ball Screw Nut
350175E Feed Driving Crank Pinch Screw
231836 Feed Driving Crank Thrust Washer
263429 Feed Driving Eccentric with 215057

MACHINE NO. 236w124

263430 Feed Driving Eccentric Adjusting Eccentric
263431 Feed Driving Eccentric Adjusting Eccentric Latch with
200351C
263432 Feed Driving Eccentric Adjusting Eccentric Latch Hinge
Pin
200605C Feed Driving Eccentric Adjusting Eccentric Latch Hinge
Pin Position Screw
263433 Feed Driving Eccentric Adjusting Eccentric Latch
Operating Lever with 200394C
200394C Feed Driving Eccentric Adjusting Eccentric Latch
Operating Lever Set Screw
263434 Feed Driving Eccentric Adjusting Eccentric Latch
Operating Lever Spring
200351C Feed Driving Eccentric Adjusting Eccentric Latch Set
Screw
215057 Feed Driving Eccentric Adjusting Eccentric Pin
263435 Feed Driving Eccentric Adjusting Eccentric Spring
263436 Feed Driving Eccentric Adjusting Eccentric Spring
Adjusting Collar with two 200394C
200394C Feed Driving Eccentric Adjusting Eccentric Spring
Adjusting Collar Set Screw
263567 Feed Driving Eccentric Friction Plate
350548C Feed Driving Eccentric Friction Plate Adjusting Screw
350477C Feed Driving Eccentric Friction Plate Adjusting Screw
Set Screw
263437 Feed Driving Flange with 200333C, 200346C, 263567, two
each 350477C and 350548C
200333C Feed Driving Flange Position Screw
200346C Feed Driving Flange Set Screw
263827 Feed Post with 448ALX and two 140321AL
263828 Feed Post 263827 with 249019, 249092, 263453, 263460,
263461, 263662, 263692, 263814, 263829, 350411C and two 237D

MACHINE NO. 236w124

263440 Feed Post Adjusting Eccentric Stud with 263441
263441 Feed Post Adjusting Eccentric Stud Retaining Ring
263801 Feed Post Base Cover
200181X Feed Post Base Cover Screw
263829 Feed Post Cover (side)
237D Feed Post Cover (side) Screw
201110X Feed Post Screw (2)
263804 Feed and Hook Post Base Cover Support (back)
263803 Feed and Hook Post Base Cover Support (front)
50559X Feed and Hook Post Base Cover Support Screw (2)
263830 Feed and Hook Post Cover (back)
263845 Feed and Hook Post Cover (front)
141672F Feed and Hook Post Cover (back or front) Clamp Screw (6)
51023B Feed and Hook Post Cover (back or front) Screw (8)
263832 Feed and Hook Post Cover Gasket (back or front)
(vellumoid) (2) (17-1-146)
263812 Feed and Hook Post Gasket (bottom) (vellumoid)
263592 Feed and Hook Post Screw washer (fibre) (4)
263660 Feed Wheel
263662 Feed Wheel 263660 with 263450 to 263452, three 200587D
and sixty 206417
249092 Feed wheel Adjusting Stud (eccentric)
140321AL Feed Wheel Adjusting Stud Set Screw
206417 Feed Wheel Ball, 1/16 in. diameter
263450 Feed Wheel Ball Cone (inside)
263451 Feed Wheel Ball Cone (outside)

MACHINE NO. 236w124

263452 Feed Wheel Bevel Gear

263453 Feed Wheel Bevel Gear Driving Pinion

*263454 Feed Wheel Bevel Gear Driving Pinion Coupling (lower)
with two 200382ALX

*263455 Feed Wheel Bevel Gear Driving Pinion Coupling (upper)
with two 200382ALX

*263456 Feed Wheel Bevel Gear Driving Pinion Coupling Ball
Connection with two 201052ALX

200133C Feed Wheel Bevel Gear Driving Pinion Coupling Ball
Connection Retaining Screw

263457 Feed Wheel Bevel Gear Driving Pinion Coupling Ball
Connection Stud

201052ALX Feed Wheel Bevel Gear Driving Pinion Coupling Ball
Connection Stud Set Screw

200382ALX Feed Wheel Bevel Gear Driving Pinion Coupling Set Screw

263692 Feed Wheel Bevel Gear Driving Pinion Coupling complete,
Nos. 200133C, 263454 to 263456 and two 263457

263458 Feed Wheel Bevel Gear Driving Pinion Shaft (lower)

267093 Feed Wheel Bevel Gear Driving Pinion Shaft (lower)
Needle Bearing

263459 Feed Wheel Bevel Gear Driving Pinion Shaft (lower)
Needle Bearing Oil Seal

200587D Feed Wheel Bevel Gear Screw

263460 Feed Wheel Bracket with 200041C

263461 Feed Wheel Bracket Extension

448ALX Feed Wheel Bracket Extension Set Screw

249019 Feed Wheel Bracket Friction Plug

140321AL Feed Wheel Bracket Friction Plug Set Screw

200041C Feed Wheel Bracket Pinch Screw

350411C Feed Wheel Cap Screw

MACHINE NO. 236w124

*263462 Hook (sewing)

263463 Hook 263462 with 201253F,201376C,241604,263563 and two 201409F

263464 Hook and Bobbin Case complete,Nos. 241677 and 263463

263465 Hook and Feed Driving Shaft

276045 Hook and Feed Driving Shaft Bushing (back) with 276046

276046 Hook and Feed Driving Shaft Bushing (back) Oil Packing (wick)

200958C Hook and Feed Driving Shaft Bushing (back) Set Screw

263467 Hook and Feed Driving Shaft Bushing (front) with 272115

272115 Hook and Feed Driving Shaft Bushing (front) Oil Packing (wick)

200958C Hook and Feed Driving Shaft Bushing (front) Set Screw

263468 Hook and Feed Driving Shaft Connection Belt Pulley with 201254C,201421C,214206 and 228842

228842 Hook and Feed Driving Shaft Connection Belt Pulley Needle Bearing

263569 Hook and Feed Driving Shaft Connection Belt Pulley Needle Bearing Sleeve

201007C Hook and Feed Driving Shaft Connection Belt Pulley Needle Bearing Sleeve Set Screw

201254C Hook and Feed Driving Shaft Connection Belt Pulley Position Screw

201421C Hook and Feed Driving Shaft Connection Belt Pulley Set Screw

214206 Hook and Feed Driving Shaft Connection Belt Pulley Spring Flange

263469 Hook and Feed Driving Shaft Thrust and Timing Collar with 200378C

MACHINE NO. 236w124

200378C Hook and Feed Driving Shaft Thrust and Timing Collar Set Screw

263470 Hook Driving Gear (spiral) with two 797C

263471 Hook Driving Gear (spiral) Retaining Ring

797C Hook Driving Gear (spiral) Set Screw

263472 Hook Driving Gear (spiral) Sleeve with 200378C and 201220ALX

201220ALX Hook Driving Gear (spiral) Sleeve Position Screw

200378C Hook Driving Gear (spiral) Sleeve Set Screw

265522 Hook Driving Pinion with two 200382ALX

200382ALX Hook Driving Pinion Set Screw

241604 Hook Gib

201376C Hook Gib Hinge Screw

201253F Hook Gib Screw

263563 Hook Needle Guard

201409F Hook Needle Guard Screw

141580ALX Hook Oil Regulating Screw

234426 Hook Oil Regulating Spring

263833 Hook Post with two 263582

263834 Hook Post 263833 with 202X, 212D, 141580ALX, 200121E, 203478, 234426, 263421, 263464, 263476, 263478 to 263482, 263568, 263593, 263594, 263826, 265522, 350611X, two each 1448AL and 140862AL

263440 Hook Post Adjusting Eccentric Stud with 263441

263441 Hook Post Adjusting Eccentric Stud Retaining Ring

263802 Hook Post Base Cover

200181X Hook Post Base Cover Screw

263476 Hook Post Oil Inlet Strainer

MACHINE NO. 236w124

212D Hook Post Oil Inlet Strainer Screw
202X Hook Post Oil Stop Screw
141581E Hook Post Oil Stop Screw
244746 Hook Post Oil Stop Screw Seal
201110X Hook Post Screw (2)
263846 Hook Post Slide
263478 Hook Shaft (vertical)
263479 Hook Shaft (vertical) Bearing (lower)
1448AL Hook Shaft (vertical) Bearing (lower) Set Screw
263480 Hook Shaft (vertical) Bearing (upper) with 263561
263561 Hook Shaft (vertical) Bearing (upper) Oil Wick
1448AL Hook Shaft (vertical) Bearing (upper) Set Screw
263593 Hook Shaft (vertical) Oil Packing (wick)
263594 Hook Shaft (vertical) Oil Packing (wick) Spring
350611X Hook Shaft (vertical) Screw
263568 Hook Shaft (vertical) Sleeve (center) with 200387C
200387C Hook Shaft (vertical) Sleeve (center) Set Screw
263481 Hook Shaft (vertical) Thrust Washer
200121E Hook Shaft (vertical) Thrust Washer Screw
263482 Hook Washer with 203476 and three 204243
263735 Knife
249162 Knife Adjusting Plate
201256C Knife Adjusting Plate Screw
249163 Knife Bracket
201042E Knife Bracket Adjusting Screw
201574D Knife Bracket Adjusting Screw Nut

MACHINE NO. 236w124

202101	Knife Bracket Adjusting Screw Washer
249164	Knife Bracket Arm
200065C	Knife Bracket Arm Screw
249165	Knife Bracket Hinge Pin
249166	Knife Bracket Spring
263736	Knife Driving Arm with 200048C
263737	Knife Driving Arm Locking Plunger
350624C	Knife Driving Arm Locking Plunger Position Screw
263738	Knife Driving Arm Locking Plunger Spring
200048C	Knife Driving Arm Pinch Screw
263739	Knife Driving Arm Retainer
200054E	Knife Driving Arm Retainer and Knife Guard Screw (2)
249171	Knife Driving Arm Unlocking Lever
200934D	Knife Driving Arm Unlocking Lever Hinge Screw
263740	Knife Driving Bell Crank
263741	Knife Driving Bell Crank Bracket
350614C	Knife Driving Bell Crank Bracket Screw (2)
263742	Knife Driving Bell Crank Shaft
268072	Knife Driving Bell Crank Shaft Collar with two 200386C
200386C	Knife Driving Bell Crank Shaft Collar Set Screw
263753	Knife Driving Bell Crank Shaft Retaining Ring
263744	Knife Driving Connection
*263746	Knife Driving Connection Bearing (lower) (small)
263747	Knife Driving Connection Bearing (upper) (large)
263748	Knife Driving Connection Guide Plate
200160X	Knife Driving Connection Guide Plate Screw
350633C	Knife Driving Connection Hinge Screw

MACHINE NO. 236w124

51699X Knife Driving Connection Hinge Screw Nut
263745 Knife Driving Connection complete, Nos. 263744, 263746,
263747, 263748, 263749, 350633 and two 200160X
263749 Knife Driving Eccentric with 200365C and 201052ALX
200365C Knife Driving Eccentric Position Screw
201052ALX Knife Driving Eccentric Set Screw
263626 Knife Driving Eccentric Thrust Washer
263784 Knife Driving Mechanism Guard
200007C Knife Driving Mechanism Guard Screw (2)
263777 Knife Driving Shaft with 223847
263751 Knife Driving Shaft Bracket
263646 Knife Driving Shaft Bracket Oil Tube
263647 Knife Driving Shaft Bracket Oil Tube Packing (wick)
232154 Knife Driving Shaft Bracket Position Pin (2)
200050C Knife Driving Shaft Bracket Screw (2)
263631 Knife Driving Shaft Bushing
200364C Knife Driving Shaft Bushing Set Screw
263779 Knife Driving Shaft Driving Gear with two 200382ALX
263781 Knife Driving Shaft Driving Gear Lubrication Reservoir
Cover
200084XC Knife Driving Shaft Driving Gear Lubrication Reservoir
Cover Screw (2)
200382ALX Knife Driving Shaft Driving Gear Set Screw
223847 Knife Driving Shaft Oil Pecking (wick)
250405 Knife Driving Shaft Thrust Washer
263750 Knife Guard
350625F Knife Screw
263433 Lifting Lever
263484 Lifting Lever Extension
200092C Lifting Lever Extension Screw
201101C Lifting Lever Hinge Screw
263485 Lifting Lever Spring
201051C Lifting Lever Spring Stop Screw (on Lever)
201231C Lifting Lever Stop Screw
263486 Lifting Lever complete, Nos. 200092C, 201051C, 263483
and 263484

MACHINE NO. 236w124

263487 Machine Pulley (aluminum alloy casting) for "V" belt
(outside diam. of belt groove 2.9 in.) (rim diam. 5 1/4
in.) with 200327C and 200328C

263488 Machine Pulley 263487 with 272142

200328C Machine Pulley Position Screw

200327C Machine Pulley Set Screw

263489 Needle Bar with 200125ALX, 200175D and 249270

263560 Needle Bar and Take-up Oiling Wick

228485 Needle Bar and Take-up Oiling Wick Retaining Screw (3)

263490 Needle Bar Bushing (lower)

263491 Needle Bar Bushing (upper)

200398C Needle Bar Bushing (upper) Set Screw

263492 Needle Bar Connecting Link

1130E Needle Bar Connecting Link Cap Screw

263570 Needle Bar Connecting Link Oil Packing (wick)

263571 Needle Bar Connecting Link Oil Packing (wick) Spring
Clamp (2)

143057 Needle Bar Connecting Stud with 207E

207E Needle Bar Connecting Stud Pinch Screw

143058 Needle Bar Connecting Stud Slide Block

*263493 Needle Bar Crank

203172 Needle Bar Crank Friction Washer

200333C Needle Bar Crank Position Screw

249270 Needle Bar Thread Guide

200175D Needle Bar Thread Guide Screw

200125ALX Needle Set Screw

263815 Oil Reservoir Oil Gauge

263814 Oil Reservoir Oil Gauge Plug

MACHINE NO. 236w124

263495 Presser Bar Bushing (lower)
263496 Presser Bar Bushing (upper)
200398C Presser Bar Bushing (upper) Set Screw
202671 Presser Bar Lifter
200666C Presser Bar Lifter Hinge Screw
263497 Presser Bar Lifting Releasing Lever Bracket
206608 Presser Bar Lifting Releasing Lever Bracket Spring
263498 Presser Bar Position Guide
202338 Presser Bar Position Guide Lever with 200086ALX
200086ALX Presser Bar Position Guide Lever Pinch Screw
200055C Presser Bar Position Guide Lever Stop Screw
201671E Presser Bar Position Guide Lever Stop Screw Nut
200398C Presser Bar Position Guide Set Screw
350612C Presser Bar Screw (pressure regulating)
236089 Presser Bar Spring
263499 Presser Bar Spring Stop Rod
351883 Roller Presser, 1 in. diam., 9/64 in. face (fine) with
1528X, 201699C, 350104C and twenty-eight 206417
263500 Roller Presser Arm
263501 Roller Presser Arm 263500 with 351883
235087 Roller Presser Arm Bracket
235088 Roller Presser Arm Bracket Position Collar with 200362C
228740 Roller Presser Arm Bracket Position Collar Lock Ring
200362C Roller Presser Arm Bracket Position Collar Set Screw
202558 Roller Presser Arm Bracket Spring
202559 Roller Presser Arm Bracket Spring Stop

MACHINE NO. 236w124

200141F Roller Presser Arm Bracket Spring Stop Screw
200096D Roller Presser Arm Screw
206417 Roller Presser Ball, 1/16 in. diameter
201699C Roller Presser Ball Cone
263504 Roller Presser Bar
350104C Roller Presser Hinge Screw
1528X Roller Presser Hinge Screw Nut
263505 Roller Presser and Bar complete, Nos. 200096D, 202558,
202559, 228740, 235087, 235088, 263501, 263504 and two 200141F
263506 Roller Presser Driving Belt (lower)
263507 Roller Presser Driving Belt (lower) Driven Pulley with
two 200403C
200403C Roller Presser Driving Belt (lower) Driven Pulley Set
Screw
263508 Roller Presser Driving Belt (lower) Driving Pulley with
two 200958C
200958C Roller Presser Driving Belt (lower) Driving Pulley Set
Screw
*263509 Roller Presser Driving Belt (lower) Idler Pulley
263510 Roller Presser Driving Belt (lower) Idler Pulley 263509
with 263513
263511 Roller Presser Driving Belt (lower) Idler Pulley Arm
660C Roller Presser Driving Belt (lower) Idler Pulley Arm
Hinge Screw
263512 **Roller** Presser Driving Belt (lower) Idler Pulley Arm
Spring
200948C **Roller** Presser Driving Belt (lower) Idler Pulley
Hinge Screw
263513 Roller Presser Driving Belt (lower) Idler Pulley Needle
Bearing

MACHINE NO. 236w124

263514 Roller Presser Driving Belt (lower) Idler Pulley and
Arm complete, Nos. 200948C, 263510 and 263511

263515 Roller Presser Driving Belt (upper)

263517 Roller Presser Driving Belt (upper) Idler Pulley

263566 Roller Presser Driving Belt (upper) Idler Pulley 263517
with 263565 (2)

263518 Roller Presser Driving Belt (upper) Idler Pulley Bracket

263519 Roller Presser Driving Belt (upper) Idler Pulley Bracket
Adjusting Rod with two 201525E

201525E Roller Presser Driving Belt (upper) Idler Pulley Bracket
Adjusting Rod Nut

201525E Roller Presser Driving Belt (upper) Idler Pulley Bracket
Adjusting Rod Nut Lock Nut

263521 Roller Presser Driving Belt (upper) Idler Pulley Bracket
Adjusting Rod Spring

263522 Roller Presser Driving Belt (upper) Idler Pulley Bracket
Extension with two 263523

263523 Roller Presser Driving Belt (upper) Idler Pulley Bracket
Extension Center

1094D Roller Presser Driving Belt (upper) Idler Pulley Bracket
Extension Screw (3)

208636 Roller Presser Driving Belt (upper) Idler Pulley Bracket
Extension Screw Washer (3)

263524 Roller Presser Driving Belt (upper) Idler Pulley Bracket
Extension Support (back)

263525 Roller Presser Driving Belt (upper) Idler Pulley Bracket
Extension Support (front)

201387F Roller Presser Driving Belt (upper) Idler Pulley Bracket
Extension Support Screw (4)

263565 Roller Presser Driving Belt (upper) Idler Pulley Needle
Bearing

263526 Roller Presser Driving Belt (upper) Idler Pulley Spindle

MACHINE NO. 236w124

263564 Roller Presser Driving Belt (upper) Idler Pulley Spindle Retaining Ring (2)

201748X Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Lock Nut

263527 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment

263528 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment Guide Stud

263529 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment Retaining Ring

263530 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Segment Ring

263531 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Spreader Cone

263532 Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) complete, Nos. 201748X, 263529 to 263531, four each 263527 and 263528

201110E Roller Presser Driving Belt (upper) Pulley (variable diam.) (adjustable) Stop Screw

263533 Roller Presser Driving Belt Shaft

263534 Roller Presser Driving Belt Shaft Collar with two 200111C

200111C Roller Presser Driving Belt Shaft Collar Set Screw

268425 Roller Presser Driving Belt Shaft Needle Bearing (lower)

268425 Roller Presser Driving Belt Shaft Needle Bearing (upper)

263537 Stitch Length Indicator with 200347AL

200347AL Stitch Length Indicator Set Screw

263538 Take-up Lever

263539 Take-up Lever 263538 with 12166, 263543, 263572 and two 263571

263813 Take-up Lever Crank

200362C Take-up Lever Crank Set Screw

MACHINE NO. 236w124

200382ALX Take-up Lever Crank Set Screw
263541 Take-up Lever Guard
200161X Take-up Lever Guard Screw (2)
12166 Take-up Lever Hinge Stud
263543 Take-up Lever Link
263544 Take-up Lever Link Hinge Stud
200347AL Take-up Lever Link Hinge Stud Set Screw
263572 Take-up Lever Link Oil Packing (wick)
263571 Take-up Lever Link Oil Packing (wick) Spring Clamp
263545 Take-up Lever Position Plate
244048 Tension Disc (back)
244049 Tension Disc (front)
263546 Tension Release Plunger
263547 Tension Release Washer
263548 Tension Releasing Pin
223438 Tension Spring
263549 Tension Spring Washer
350613F Tension Stud with 263550
50305C Tension Stud Set Screw
263550 Tension Stud Washer
201572X Tension Thumb Nut
263551 Tension complete, Nos. 201572X, 202410, 223438, 244048,
244049, 263547 to 263549, 263552 and 350613F
202410 Thread Controller Spring
263552 Thread Controller Spring Regulator with 50305C
446ALX Thread Controller Spring Regulator Set Screw
202412 Thread Guide

MACHINE NO. 236w124

210954	Thread Guide (lower)
200582C	Thread Guide (lower) Set Screw
263752	Thread Lubricator and Edge Guide Bracket Mounting Plate
200577AL	Thread Lubricator and Edge Guide Bracket Mounting Plate Screw (2)
241765	Thread Lubricator Oil Pad (felt)
263554	Thread Lubricator Oil Pad Holder
200137X	Thread Lubricator Oil Pad Holder Screw (2)
240034	Thread Retainer
201188C	Thread Retainer Set Screw
263558	Thread Retainer Thread Guide
350559ALX	Thread Retainer Thread Guide Set Screw
263851	Throat Plate Body
263856	Throat Plate Needle Plate, 53 elongated needle hole, for Needle sizes 14 and 15 (minimum trimming margin .060 inch) for 263857
141584X	Throat Plate Needle Plate Screw
263857	Throat Plate complete, 53 elongated needle hole, for needle sizes 14 and 15, Nos. 263851, 263856 and two 141584X
141664X	Throat Plate Screw (2)

FITTINGS

THROAT PLATES

MACHINE NO. 236w124

263851 Throat Plate Body

263852 Throat Plate Needle Plate, 56 elongated needle hole, for needle sizes 12 and 13 (minimum trimming margin .035 inch) for 263853

141584X Throat Plate Needle Plate Screw

263853 Throat Plate complete, 56 Elongated needle hole, for needle sizes 12 and 13 Nos. 263851, 263852 and two 141584X

263851 Throat Plate Body

263854 Throat Plate Needle Plate, 53 elongated needle hole, for needle sizes 14 and 15 (minimum trimming margin .045 inch) for 263855

141584X Throat Plate Needle Plate Screw

263855 Throat Plate complete, 53 Elongated needle hole, for needle sizes 14 and 15 Nos. 263851, 263854 and two 141584X

ACCESSORIES

FOR

MACHINE NO. 236w124

202258	Bed Hinge Connection (2)
200570E	Bed Hinge Connection Screw (4)
233939	Bobbin (2)
259462	Bobbin Winder complete
228884	Drip Pan (plastic) complete
228846	Knee Lifter Rock Shaft complete
263735	Knife
41401	Machine Rest Pin (wood)
128x22y	Needles, six, size 14 Narrow Wedge Point with Supplementary Shoulder
120342	Oiler (copper plated)
263577	Pulley Spreader Cone Adjusting Key
4822	Roller Presser Hinge Screw Nut Wrench
228476	Screw Driver (Bobbin Case)
225498	Screw Driver
144465	Wrench (1/8 in. Hex.)
225554	Wrench