

SINGER
48W & 49W

PRICE LIST

OF

PARTS



MACHINES

OF

CLASSES 48w and 49w

THE SINGER MANUFACTURING COMPANY

INDEX

| | PAGE |
|------------------------------|------|
| ACCESSORIES..... | 37 |
| BINDERS..... | 45 |
| BOBBIN WINDER..... | 37 |
| EDGE GUIDE..... | 16 |
| FEED DOGS..... | 39 |
| FOOT LIFTER PARTS..... | 38 |
| MACHINE No. 48w1..... | 7 |
| " " 48w6..... | 11 |
| " " 48w106..... | 22 |
| " " 49w1..... | 29 |
| NUMERICAL LIST OF PARTS..... | 51 |
| OBSOLETE PARTS..... | 50 |
| PRESSER FEET..... | 10 |
| ROLLER PRESSERS..... | 42 |
| THROAT PLATES..... | 43 |
| UNDER DRIVER..... | 18 |
| WORK PLATE PLATFORMS..... | 47 |

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the **PART** number in the **FIRST** column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above cases) must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.

These letters **MUST BE USED** when they appear in the list and **AFTER** the number, as in the list.

In this series

200001 to 201500 are Screw Numbers.

201501 to 201800 are Nut Numbers.

201801 to 202000 are Roller Numbers.

202001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plate in which the illustration of the part is shown and are **NOT TO BE USED** in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

FOR

MACHINE No. 48w1

DROP FEED. CYLINDER BED.

For Shirts, etc.

| No. | Plate | Name | Each |
|---------|-------|---|-------|
| *213383 | ---- | Arm | \$ -- |
| 213144 | 11150 | " Cap | 25 |
| 200278u | 12311 | " " Screw | 05 |
| 202248u | 11151 | " " " Washer | 05 |
| 200963E | 12311 | " Screw (3) | 06 |
| 202005 | 11151 | " " Washer (3) | 01 |
| 213423 | 11152 | " Shaft | 1 85 |
| 213317 | ---- | " " 213423 with 200244D, 200245D, 213303 to 213305, 213354, 213654, 213655 and two 201528E | 6 20 |
| 204801 | 11150 | Arm Shaft Bushing (back), with 202260 | 35 |
| 202260 | ---- | " " " " Oil Packing (wick) | 01 |
| 200338c | 11151 | Arm Shaft Bushing (back) Set Screw... | 04 |
| 213299 | 11150 | " " " (center) with 202260 | 25 |
| 202260 | ---- | " " " " Oil Packing (wick) | 01 |
| 200341c | 11151 | Arm Shaft Bushing (center) Set Screw... | 04 |
| 213294 | 11058 | " " " (front) with 202126 and 202260 | 40 |
| 202260 | ---- | Arm Shaft Bushing (front) Oil Packing (wick) | 01 |
| 200502B | 11151 | Arm Shaft Bushing (front) Oil Packing Thumb Screw | 25 |
| 202126 | 11151 | Arm Shaft Bushing (front) Position Pin | 01 |
| 200352c | 11151 | " " " " Set Screw... | 03 |
| 204804 | 11152 | " " Connection with four 200054E (2) | 80 |
| 200054E | 11151 | Arm Shaft Connection Screw | 03 |
| 203204 | 11162 | Balance Wheel, 5 $\frac{1}{4}$ in. diam. (belt groove 2 $\frac{3}{4}$ in. diam.), with 200328c and 200335c | 1 00 |
| 200062u | 12311 | Balance Wheel Adjusting Screw | 07 |
| 200328c | 12311 | " " Position Screw | 04 |
| 200335c | 12311 | " " Set Screw | 04 |

| No. | Plate | Name | Each |
|---------|-------|---|-------|
| 202068 | 11162 | Spool Holder Base | \$ 15 |
| 200575H | 12311 | " " " Screw | 05 |
| 204296 | 11162 | " " Wire | 10 |
| 200079H | 12311 | " " " Hinge Screw | 02 |
| 204297 | 11162 | Spool Holder complete, Nos. 200079H, 202068 and 204296 | 25 |
| 213399 | 11061 | Take-up Cam with 200335c, 200380c, 200383c, 200430c and 200698c | 1 50 |
| 203172 | 11153 | Take-up Cam Friction Washer | 05 |
| 200430c | 12311 | " " Position Screw | 08 |
| 200383c | 12311 | " " " " Check Screw | 02 |
| 200335c | 12311 | " " Set Screw | 04 |
| 213400 | 11154 | " Lever with 204407 | 60 |
| 221126 | ---- | " " 213400 with 204263 | 75 |
| 204263 | 11154 | " " Bearing with 204264 | 15 |
| 204264 | 11154 | " " " Position Pin | 01 |
| 200042F | 12311 | " " " Screw | 05 |
| 204407 | ---- | " " Oil Guard | 05 |
| 201816 | 11154 | " " Roller | 12 |
| 213719 | 11154 | Take-up Lever complete, Nos. 200042F, 201816 and 221126 | 90 |
| 202402 | 11154 | Tension Disc | 05 |
| 202090 | 11154 | " " Position Pin | 01 |
| 204267 | 11154 | " Release Lever | 05 |
| 200309E | 11154 | " " " Screw | 04 |
| 202075 | 11154 | " " Plunger | 03 |
| 213325 | 11057 | " " Slide with 204434 (for Presser Bar) | 20 |
| 204434 | 11154 | Tension Release Slide Spring | 02 |
| 202407 | 11154 | " Spring | 05 |
| 200632B | 11154 | " Stud | 20 |
| 200397H | 11151 | " " Set Screw | 02 |
| 201572B | 11154 | " Thumb Nut | 04 |
| 204271 | 11154 | " Washer | 05 |
| 204272 | 11154 | Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402 | 50 |
| 215610 | ---- | Thread Controller Adjusting Collar | 10 |
| 204273 | 11154 | " " " " 215610 with 200684H (for Presser Bar) | 15 |
| 200684H | 11154 | Thread Controller Adjusting Collar Screw | 04 |
| 202082 | 11153 | " " Plate | 12 |
| 200577H | 12311 | " " " Screw | 02 |
| 202098 | 11153 | " " Roller | 05 |
| 213329 | 11056 | " " " Guard | 10 |
| 202084 | 11153 | " " " Washer | 01 |
| 200300H | 11153 | " " " Screw | 04 |
| 213331 | 11056 | " " Spring | 03 |
| 213330 | 11056 | " " " Guard | 08 |

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| 200581H | 11151 | Thread Controller Spring Guard Screw .. | \$ 02 |
| 213326 | 11056 | " " " Stop | 15 |
| 213327 | 11056 | " " " " Driving Gear | 10 |
| 200319c | 11153 | Thread Controller Spring Stop Driving Gear Hinge Screw | 04 |
| 200135c | 11153 | Thread Controller Spring Stop Screw ... | 03 |
| 204279 | 11153 | " " " Stud with 204925 | 10 |
| 200366H | 11153 | " " " " Set Screw | 02 |
| 204925 | 11153 | " " " " Washer .. | 01 |
| 221128 | 11153 | Thread Controller complete, Nos. 200300H, 200581H, 202082, 202084, 202098, 213329 and 213330 | 42 |
| 213332 | 11056 | Thread Controller and Spring complete, Nos. 213331 and 221128 | 45 |
| 202413 | 11154 | Thread Guide | 05 |
| 204281 | 11154 | " Retainer Guide Wire | 01 |
| 202091 | 11153 | " " Sleeve | 05 |
| 202092 | 11153 | " " Spring | 01 |
| 204058B | 11153 | " " Stud | 07 |
| 200368H | 11153 | " " " Set Screw | 02 |
| 204059 | 11153 | Thread Retainer complete, Nos. 202091, 202092 and 204058B | 15 |
| 212256 | 11160 | Throat Plate, 50 needle hole, for needle sizes 3 to 5 | 1 50 |
| 200577H | 12311 | Throat Plate Screw (2) | 02 |

LIST OF PARTS COMPLETE

FOR

MACHINE No. 48w6

DROP FEED. CYLINDER BED. ROLLER PRESSER.

For Leather.

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| *213383 | --- | Arm | \$ -- |
| 213144 | 11150 | " Cap | 25 |
| 200278H | 12311 | " " Screw | 05 |
| 202248H | 11151 | " " " Washer | 05 |
| 200963E | 12311 | " Screw (3) | 06 |
| 202005 | 11151 | " Washer (3) | 01 |
| 213423 | 11152 | " Shaft | 1 85 |
| 213317 | --- | " " 213423 with 200244D, 200245D, 213303 to 213305, 213354, 213654, 213655 and two 201528E | 6 20 |
| 204801 | 11150 | Arm Shaft Bushing (back) with 202260 .. | 35 |
| 202260 | --- | " " " " Oil Packing (wick) | 01 |
| 200338C | 11151 | Arm Shaft Bushing (back) Set Screw... | 04 |
| 213299 | 11150 | " " " (center) with 202260 .. | 25 |
| 202260 | --- | " " " " Oil Packing (wick) | 01 |
| 200341C | 11151 | Arm Shaft Bushing (center) Set Screw... | 04 |
| 213294 | 11058 | " " " (front) with 202126 and 202260 | 40 |
| 202260 | --- | Arm Shaft Bushing (front) Oil Packing (wick) | 01 |
| 200502B | 11151 | Arm Shaft Bushing (front) Oil Packing Thumb Screw | 25 |
| 202126 | 11151 | Arm Shaft Bushing (front) Position Pin .. | 01 |
| 200352C | 11151 | " " " " Set Screw... | 03 |
| 204804 | 11152 | " " Connection with four 200054E (2) | 80 |
| 200054E | 11151 | Arm Shaft Connection Screw | 03 |
| 203204 | 11162 | Balance Wheel, 5½ in. diam. (belt groove 2¼ in. diam.), with 200328C and 200335C | 1 00 |

| No. | Plate | Name | Each |
|--|-------|---|-------|
| 200062H | 12311 | Balance Wheel Adjusting Screw | \$ 07 |
| 200328C | 12311 | " " Position Screw | 04 |
| 200335C | 12311 | " " Set Screw | 04 |
| *213384 | --- | Bed (cylinder) | -- |
| *215699 | --- | " 213384 with 200439C, 213314, 213380 and two 200516E | -- |
| 213641 | 11150 | Bed (cylinder) Cap | 80 |
| 200574D | 11061 | " " " Screw (2) | 05 |
| 213787 | 11150 | " " End Cover | 2 40 |
| 213313 | --- | " Base (high) | 2 50 |
| 213312 | --- | " " (low) | 2 50 |
| Note: High Bed Base 213313 furnished only when ordered. | | | |
| 203184 | 11060 | Bed Clamp | 50 |
| 200262H | 11060 | " " Hinge Screw | 10 |
| 202622 | 11151 | " " Packing Washer | 01 |
| 200728B | 11060 | " " Thumb Screw | 12 |
| 203185 | 11060 | " " Washer | 10 |
| 202618 | 11058 | " Hinge | 1 50 |
| 200030H | 11056 | " " Screw (6) | 05 |
| 213320 | 11150 | " Slide (back) | 50 |
| 213685 | 11061 | " " " Clamp Plate | 15 |
| 213686 | 11061 | " " " " " " | 15 |
| 200582H | 11151 | " " " " " Screw (4) | 02 |
| 203208 | 11228 | Bobbin | 05 |
| 203210 | 11228 | " Case Base with 202056, 203211 to 203213 and 203216 | 55 |
| 203211 | 11151 | Bobbin Case Base Latch | 05 |
| 202056 | 11151 | " " " " Pin | 01 |
| 203212 | 11151 | " " " " Plunger | 02 |
| 203213 | 11151 | " " " " Spring | 01 |
| 203209 | 11228 | " " Cap with 200984E, 203214, 203215 and two 200594F | 25 |
| 203214 | 11228 | Bobbin Case Tension Spring | 10 |
| 200984E | 11151 | " " " " Regulating Screw | 04 |
| 200594F | 11228 | Bobbin Case Tension Spring Screw | 02 |
| 203215 | 11228 | " " Thread Guide | 05 |
| 200594F | 11228 | " " " " Screw | 02 |
| 203216 | 11228 | " " Washer (cloth) ... Per 100 .. | 25 |
| 203217 | 11228 | Bobbin Case complete, Nos. 203209 and 203210 | 80 |
| 213385 | 11162 | Face Plate with 200366H, 200368H, 202090, 204185, 204281 and two 200397H | 1 10 |
| 200053C | 12311 | Face Plate Screw | 04 |
| 204185 | 11151 | " " Thread Guide | 03 |
| 200397H | 11151 | " " " " Set Screw... | 02 |

| No. | Plate | Name | Each |
|---------|-------|--|--------|
| 221125 | 11162 | Face Plate complete, Nos. 200113E, 200135c, 200309E, 200319c, 200577u, 204059, 204267, 204272, 204279, 204330, 213326 213327, 213332 and 213385 | \$3 00 |
| 213295 | 11060 | Feed Bar with 200544E and 213610 | 1 20 |
| 213298 | 11061 | " " Connecting Link with two 200072c | 50 |
| 200072c | 11151 | Feed Bar Connecting Link Pinch Screw | 03 |
| 200935F | 11151 | " " " " Screw Stud | 08 |
| 201532E | 11151 | " " " " " " | |
| | | Nut | 03 |
| 213610 | 11151 | Feed Bar Connecting Link Stud | 03 |
| 212347 | 12187 | " " Dog | 75 |
| 200544E | 11061 | " " Screw | 06 |
| 213303 | 11058 | " Driving Eccentric (adjustable) | 1 00 |
| 213304 | 11058 | " " " Adjusting Disc | 1 40 |
| 213305 | 11058 | " " " Flange with 200382c and 200437c | 60 |
| 200437c | 12311 | Feed Driving Eccentric Flange Position Screw | 06 |
| 200382c | 11151 | Feed Driving Eccentric Flange Set Screw | 02 |
| 213655 | 11151 | Feed Driving Eccentric Friction Spring Washer | 20 |
| 200245D | 11151 | Feed Driving Eccentric Friction Spring Washer Screw | 08 |
| 201528E | 11151 | Feed Driving Eccentric Friction Spring Washer Screw Nut | 04 |
| 200244D | 11151 | Feed Driving Eccentric Fulcrum Screw | 08 |
| 201528E | 11151 | " " " " " " | |
| | | Nut | 04 |
| 213300 | 11152 | Feed Driving Rock Shaft | 1 25 |
| 213302 | --- | " " " " 213300 with 200583H, 200935E, 201532E, 213295, 213296, 213298 and 213748 | 3 80 |
| 203244 | 11151 | Feed Driving Rock Shaft Collar with two 200393c | 20 |
| 200393c | 11151 | Feed Driving Rock Shaft Collar Set Screw | 02 |
| 213354 | 11152 | Feed Driving Rock Shaft Connection with 200054E and 202277 | 75 |
| 213654 | 11151 | Feed Driving Rock Shaft Connection Collar | 15 |
| 200919c | 11060 | Feed Driving Rock Shaft Connection Hinge Screw | 05 |
| 201522E | 11151 | Feed Driving Rock Shaft Connection Hinge Screw Nut | 03 |

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| 202277 | --- | Feed Driving Rock Shaft Connection Oil Packing (wick) | \$ 01 |
| 200054E | 11151 | Feed Driving Rock Shaft Connection Pinch Screw | 03 |
| 213301 | 11060 | Feed Driving Rock Shaft Crank with 200038c | 35 |
| 200038c | 11151 | Feed Driving Rock Shaft Crank Pinch Screw | 05 |
| 213296 | 11057 | Feed Lifting Cam with 200392c and 200447c | 60 |
| 200447c | 11151 | Feed Lifting Cam Position Screw | 04 |
| 213748 | 11056 | " " " Retainer | 10 |
| 200583H | 11151 | " " " " Screw | 02 |
| 200392c | 11061 | " " " Set Screw | 02 |
| 213308 | 11060 | " Regulating Lever with 213657 | 40 |
| 200665c | 11151 | " " " Hinge Screw | 08 |
| 213656 | 11151 | " " " Spring | 03 |
| 213657 | --- | " " " " Pin | 03 |
| 227459 | 11162 | Foot Lifter Lifting Lever | 20 |
| 227534 | --- | " " " " 227459 with 200262H | 30 |
| 227626 | 11155 | Foot Lifter Lifting Lever Chain Spring | 10 |
| 227471 | --- | " " " " " " | |
| | | 227626 with 202784 | 12 |
| 202784 | 11155 | Foot Lifter Lifting Lever Chain Spring Hook | 02 |
| 200062H | 12311 | Foot Lifter Lifting Lever Chain Spring Screw | 07 |
| 200262H | 11060 | Foot Lifter Lifting Lever Hinge Screw | 10 |
| *203463 | --- | Hook (sewing) | --- |
| 203464 | 11241 | " 203463 with 200600E, 200616E and 203251 | 2 20 |
| 203465 | 11241 | Hook and Bobbin Case complete, Nos. 203217 and 203464 | 3 00 |
| 203557 | 11253 | Hook Bevel Gear Socket, 18 teeth | 85 |
| 200559H | 11253 | " " " " Screw | 05 |
| 213319 | 11056 | " " Pinion with two 200386c | 1 00 |
| 200386c | 11151 | " " " Set Screw | 02 |
| 213151 | 11152 | " Driving Shaft | 1 75 |
| 213314 | 11150 | " " " Bearing | 20 |
| 202126 | 11151 | " " " " Position Pin (2) | 01 |
| 200516E | 12311 | Hook Driving Shaft Bearing Screw | 08 |
| 213380 | 11151 | " " " Bushing | 25 |
| 200439c | 12311 | " " " " Position Screw | 05 |
| 204246 | 11056 | Hook Driving Shaft Collar (back), with two 200383c | 20 |

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| 200383c | 12311 | Hook Driving Shaft Collar (back) Set Screw | \$ 02 |
| 203244 | 11151 | Hook Driving Shaft Collar (front) with two 200393c | 20 |
| 200393c | 11151 | Hook Driving Shaft Collar (front) Set Screw | 02 |
| 203251 | 11228 | Hook Gib | 40 |
| 200600F | 11228 | " " Hinge Screw | 02 |
| 200616F | 11228 | " " Screw | 02 |
| 203564 | 11257 | " Saddle (left) with 202299 | 2 00 |
| 202299 | — | " " Oil Packing (wick) | 01 |
| 200541E | 11056 | " " Screw (2) | 09 |
| 225837 | 11151 | " " Washer (2) | 01 |
| 203718 | 11241 | " Washer | 20 |
| 203568 | 11257 | Hook Saddle (left) complete, Nos. 200559u, 203465, 203557, 203564 and 203718 | 6 00 |
| 208613 | — | Needle Bar (hollow) | 75 |
| 204247 | 11152 | " " 208613 with 200125E, 200175E and 204250 | 80 |
| 204248 | 11153 | Needle Bar Connecting Link | 35 |
| 2006980 | 11153 | " " " " Hinge Screw Stud | 10 |
| 200380c | 11153 | Needle Bar Connecting Link Hinge Screw Stud Set Screw | 02 |
| 204249 | 11153 | Needle Bar Connecting Stud with 200072c and 202277 | 40 |
| 202277 | — | Needle Bar Connecting Stud Oil Packing (wick) | 01 |
| 200072c | 11151 | Needle Bar Connecting Stud Pinch Screw | 03 |
| 204326 | — | " " Packing Cord (2) ... Per 100 | 25 |
| 200504E | 11153 | " " Screw Bushing (lower) | 05 |
| 200503R | 11153 | " " " " (upper) | 05 |
| 204250 | 11153 | " " Thread Guide | 03 |
| 200175E | 11153 | " " " " Screw | 02 |
| 200125F | 11153 | " Set Screw | 02 |
| 213322 | 11057 | Presser Bar Lifter | 20 |
| 200550c | 11153 | " " " Hinge Screw | 08 |
| 213321 | 11056 | " " Lifting Bracket with 200086c | 40 |
| 200086c | 11153 | " " " " Pinch Screw | 03 |
| 204254 | 11153 | " " " " Position Guide | 30 |
| 200362c | 12311 | Presser Bar Lifting Bracket Position Guide Set Screw | 03 |
| 204327 | — | Presser Bar Packing Washer (felt)Per 100 | 25 |

| No. | Plate | Name | Each |
|---------|-------|---|-------|
| 200504E | 11153 | Presser Bar Screw Bushing (lower).... | \$ 05 |
| 204258 | 11153 | " " Spring (heavy) | 10 |
| 200491R | 11153 | " " Thumb Screw (pressure regulating) | 25 |
| 201906 | 11155 | Roller Presser, 1 1/2 in. diam., 3/8 in. face (fine), with 200548R and 201534R | 40 |
| 202839 | 11155 | Roller Presser Arm | 20 |
| 204567 | 11155 | " " " 202839 with 201906 | 60 |
| 202560 | 12225 | " " " Bracket (swing)... .. | 60 |
| 202838 | — | " " " " 202560 with 200096D and 204567 | 1 20 |
| 200675c | 12225 | Roller Presser Arm Bracket Position Screw Stud | 05 |
| 202558 | 12225 | Roller Presser Arm Bracket Spring | 02 |
| 202559 | 12225 | " " " " " " Stop | 05 |
| 200141F | 12225 | " " " " " " " Screw | 02 |
| 200096D | 12225 | Roller Presser Arm Screw | 03 |
| 204495 | 12225 | " " Bar | 35 |
| 200548F | 11155 | " " Hinge Screw | 10 |
| 201534R | 12225 | " " " " Nut | 03 |
| 204496 | — | Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 202838, 204495 and two 200141F | 1 70 |
| 202068 | 11162 | Spool Holder Base | 15 |
| 200575R | 12311 | " " " Screw | 05 |
| 204296 | 11162 | " " Wire | 10 |
| 200079R | 12311 | " " " Hinge Screw | 02 |
| 204297 | 11162 | Spool Holder complete, Nos. 200079R, 202068 and 204296 | 25 |
| 213324 | 11057 | Take-up Cam with 200335c, 200380c, 200383c, 200430c and 200698c | 1 50 |
| 203172 | 11153 | Take-up Cam Friction Washer | 05 |
| 200430c | 12311 | " " Position Screw | 08 |
| 200383c | 12311 | " " " " Check Screw | 02 |
| 200335c | 12311 | " " Set Screw | 04 |
| 213402 | 11154 | " Lever with 204407 | 60 |
| 221127 | — | " " 213402 with 204263 | 75 |
| 204263 | 11154 | " " Bearing with 204264 | 15 |
| 204264 | 11154 | " " " Position Pin | 01 |
| 200042F | 12311 | " " " Screw | 05 |
| 204407 | — | " " Oil Guard | 05 |
| 201816 | 11154 | " " Roller | 12 |
| 213793 | 11154 | Take-up Lever complete, Nos. 200042F, 201816 and 221127 | 90 |

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| 202402 | 11154 | Tension Disc | \$ 05 |
| 202090 | 11154 | " " Position Pin | 01 |
| 204267 | 11154 | " Release Lever | 05 |
| 200309E | 11154 | " " " Screw | 04 |
| 202075 | 11154 | " " Plunger | 03 |
| 213325 | 11057 | " " Slide with 204434 (for Presser Bar) | 20 |
| 204434 | 11154 | Tension Release Slide Spring | 02 |
| 202407 | 11154 | " Spring | 05 |
| 200632B | 11154 | " Stud | 20 |
| 200397H | 11151 | " " Set Screw | 02 |
| 201572B | 11154 | " Thumb Nut | 04 |
| 204271 | 11154 | " Washer | 05 |
| 204272 | 11154 | Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402 | 50 |
| 215610 | ---- | Thread Controller Adjusting Collar | 10 |
| 204273 | 11154 | " " " " 215610 with 200684H (for Presser Bar) | 15 |
| 200684H | 11154 | Thread Controller Adjusting Collar Screw | 04 |
| 202082 | 11153 | Thread Controller Plate | 12 |
| 200577H | 12311 | " " " Screw | 02 |
| 202098 | 11153 | " " Roller | 05 |
| 213329 | 11056 | " " " Guard | 10 |
| 202084 | 11153 | " " " Washer | 01 |
| 200300H | 11153 | " " " Screw | 04 |
| 213331 | 11056 | " " Spring | 03 |
| 213330 | 11056 | " " " Guard | 08 |
| 200581H | 11151 | " " " " Screw | 02 |
| 213326 | 11056 | " " " Stop | 15 |
| 213327 | 11056 | " " " " Driving Gear | 10 |
| 200319C | 11153 | Thread Controller Spring Stop Driving Gear Hinge Screw | 04 |
| 200135C | 11153 | Thread Controller Spring Stop Screw | 03 |
| 204279 | 11153 | " " " Stud with 204925 | 10 |
| 200366H | 11153 | " " " " Set Screw | 02 |
| 204925 | 11153 | " " " " Washer | 01 |
| 221128 | 11153 | Thread Controller complete, Nos. 200300H, 200581H, 202082, 202084, 202098, 213329 and 213330 | 42 |
| 213332 | 11056 | Thread Controller and Spring complete, Nos. 213331 and 221128 | 45 |
| 202413 | 11154 | Thread Guide | 05 |
| 204329 | . | " Oiler (felt) | 01 |
| 204330 | 12225 | " " Bracket with 204329 | 25 |
| 200113F | 12225 | " " " Screw | 03 |

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| 204281 | 11154 | Thread Retainer Guide Wire | \$ 01 |
| 202091 | 11153 | " " Sleeve | 05 |
| 202092 | 11153 | " " Spring | 01 |
| 204058B | 11153 | " " Stud | 07 |
| 200368H | 11153 | " " " Set Screw | 02 |
| 204059 | 11153 | Thread Retainer complete, Nos. 202091, 202092 and 204058B | 15 |
| 212345 | 12187 | Throat Plate, 50 needle hole, for needle sizes 3 to 5 | 1 50 |
| 200577H | 12311 | Throat Plate Screw (2) | 02 |

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 48w 106

DROP FEED. CYLINDER BED. ROLLER PRESSER.

For Leather.

| No. | Plate | Name | Each |
|---------|-------|--|------|
| *213403 | — | Arm | \$ — |
| 213144 | 11150 | " Cap | 25 |
| 200278H | 12311 | " " Screw | 05 |
| 202248H | 11151 | " " " Washer | 05 |
| 200963E | 12311 | " Screw (3) | 06 |
| 202005 | 11151 | " " Washer (3) | 01 |
| 213341 | 11152 | " Shaft | 2 00 |
| 213928 | — | " " 213341 with 200244D, 200245D, 213303 to 213305, 213354, 213654, 213655 and two 201528E | 6 35 |
| 204801 | 11150 | Arm Shaft Bushing (back) with 202260 | 35 |
| 202260 | — | " " " " Oil Packing (wick) | 01 |
| 200338c | 11151 | Arm Shaft Bushing (back) Set Screw... | 04 |
| 213299 | 11150 | " " " (center) with 202260 | 25 |
| 202260 | — | " " " " Oil Packing (wick) | 01 |
| 200341c | 11151 | Arm Shaft Bushing (center) Set Screw... | 04 |
| 213294 | 11058 | " " " (front), with 202126 and 202260 | 40 |
| 202260 | — | Arm Shaft Bushing (front) Oil Packing (wick) | 01 |
| 200502B | 11151 | Arm Shaft Bushing (front) Oil Packing Thumb Screw | 25 |
| 202126 | 11151 | Arm Shaft Bushing (front) Position Pin | 01 |
| 200352c | 11151 | " " " " Set Screw... | 03 |
| 204804 | 11152 | " " Connection with four 200054E (2) | 80 |
| 200054E | 11151 | Arm Shaft Connection Screw | 03 |
| 203204 | 11162 | Balance Wheel, 5½ in. diam. (belt groove 2½ in. diam.), with 200328c and 200335c | 1 00 |

| No. | Plate | Name | Each |
|--|-------|---|-------|
| 200062H | 12311 | Balance Wheel Adjusting Screw | \$ 07 |
| 200328c | 12311 | " " Position Screw | 04 |
| 200335c | 12311 | " " Set Screw | 04 |
| *213404 | — | Bed (cylinder) | — |
| *215735 | — | " 213404 with 200439c, 213314, 213380 and two 200516E | — |
| 213641 | 11150 | Bed (cylinder) Cap | 80 |
| 200574D | 11061 | " " " Screw (2) | 05 |
| 213787 | 11150 | " " End Cover | 2 40 |
| 213313 | — | " Base (high) | 2 50 |
| 213312 | — | " " (low) | 2 50 |
| Note: High Bed Base 213313 furnished only when ordered. | | | |
| 203184 | 11060 | Bed Clamp | 50 |
| 200262H | 11060 | " " Hinge Screw | 10 |
| 202622 | 11151 | " " Packing Washer | 01 |
| 200728B | 11060 | " " Thumb Screw | 12 |
| 203185 | 11060 | " " Washer | 10 |
| 202618 | 11058 | " Hinge | 1 50 |
| 200030H | 11056 | " " Screw (6) | 05 |
| 213320 | 11150 | " Slide (back) | 50 |
| 213685 | 11061 | " " " Clamp Plate | 15 |
| 213686 | 11061 | " " " " Plate | 15 |
| 200582H | 11151 | " " " " " Screw (4) | 02 |
| 203208 | 11228 | Bobbin | 05 |
| 203210 | 11228 | " Case Base with 202056, 203211 to 203213 and 203216 | 55 |
| 203211 | 11151 | Bobbin Case Base Latch | 05 |
| 202056 | 11151 | " " " " Pin | 01 |
| 203212 | 11151 | " " " " Plunger | 02 |
| 203213 | 11151 | " " " " Spring | 01 |
| 203209 | 11228 | " " Cap with 200984F, 203214, 203215 and two 200594F | 25 |
| 203214 | 11228 | Bobbin Case Tension Spring | 10 |
| 200984F | 11151 | " " " " Regulating Screw | 04 |
| 200594F | 11228 | Bobbin Case Tension Spring Screw | 02 |
| 203215 | 11228 | " " Thread Guide | 05 |
| 200594F | 11228 | " " " " Screw | 02 |
| 203216 | 11228 | " " Washer (cloth) ... Per 100 | 25 |
| 203217 | 11228 | Bobbin Case complete, Nos. 203209 and 203210 | 80 |
| 213385 | 11162 | Face Plate with 200366H, 200368H, 202090, 204185, 204281 and two 200397H | 1 10 |
| 200053c | 12311 | Face Plate Screw | 04 |
| 204185 | 11151 | " " Thread Guide | 03 |
| 200397H | 11151 | " " " " Set Screw ... | 02 |

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| 203244 | 11151 | Hook Driving Shaft Collar (front), with two 200393c | \$ 20 |
| 200393c | 11151 | Hook Driving Shaft Collar (front) Set Screw | 02 |
| 203251 | 11228 | Hook Gib | 40 |
| 200600F | 11228 | " " Hinge Screw | 02 |
| 200616F | 11228 | " " Screw | 02 |
| 203564 | 11257 | " Saddle (left), with 202299 | 2 00 |
| 202299 | — | " " Oil Packing (wick) | 01 |
| 200541E | 11056 | " " Screw (2) | 09 |
| 225837 | 11151 | " " Washer (2) | 01 |
| 203718 | 11241 | " Washer | 20 |
| 203568 | 11257 | Hook Saddle (left) complete, Nos. 200559H, 203465, 203557, 203564 and 203718 | 6 00 |
| 208613 | — | Needle bar (hollow) | 75 |
| 204247 | 11152 | " " 208613 with 200125F, 200175E and 204250 | 80 |
| 204248 | 11153 | Needle Bar Connecting Link | 35 |
| 200698c | 11153 | " " " " Hinge Screw Stud | 10 |
| 200380c | 11153 | Needle Bar Connecting Link Hinge Screw Stud Set Screw | 02 |
| 204249 | 11153 | Needle Bar Connecting Stud with 200072c and 202277 | 40 |
| 202277 | — | Needle Bar Connecting Stud Oil Packing (wick) | 01 |
| 200072c | 11151 | Needle Bar Connecting Stud Pinch Screw | 03 |
| 204326 | — | " " Packing Cord (2) Per 100 | 25 |
| 200504E | 11153 | " " Screw Bushing (lower) | 05 |
| 200503B | 11153 | " " " " (upper) | 05 |
| 204250 | 11153 | " " Thread Guide | 03 |
| 200175E | 11153 | " " " " Screw | 02 |
| 200125F | 11153 | " Set Screw | 02 |
| 213322 | 11057 | Presser Bar Lifter | 20 |
| 200550c | 11153 | " " " Hinge Screw | 08 |
| 213321 | 11056 | " " Lifting Bracket with 200086c | 40 |
| 200086c | 11153 | " " " " Pinch Screw | 03 |
| 204254 | 11153 | " " " " Position Guide | 30 |
| 200362c | 12311 | Presser Bar Lifting Bracket Position Guide Set Screw | 03 |
| 204327 | — | Presser Bar Packing Washer (felt), Per 100 | 25 |
| 200504E | 11153 | Presser Bar Screw Bushing (lower) | 05 |
| 204258 | 11153 | " " Spring (heavy) | 10 |
| 200491B | 11153 | " " Thumb Screw (pressure regulating) | 25 |

| No. | Plate | Name | Each |
|---------|-------|---|-------|
| 201906 | 11155 | Roller Presser 1½ in. diam., ⅜ in. face (fine), with 200548F and 201534H | \$ 40 |
| 202839 | 11155 | Roller Presser Arm | 20 |
| 204567 | 11155 | " " " 202839 with 201906 | 60 |
| 202560 | 12225 | " " " Bracket (swing) | 60 |
| 202838 | — | " " " 202560 with 200096D and 204567 | 1 20 |
| 200675c | 12225 | Roller Presser Arm Bracket Position Screw Stud | 05 |
| 202558 | 12225 | Roller Presser Arm Bracket Spring | 02 |
| 202559 | 12225 | " " " " " Stop | 05 |
| 200141F | 12225 | " " " " " " Screw | 02 |
| 200096D | 12225 | Roller Presser Arm Screw | 03 |
| 204495 | 12225 | " " Bar | 35 |
| 200548F | 11155 | " " Hinge Screw | 10 |
| 201534H | 12225 | " " " " Nut | 03 |
| 204496 | — | Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 202838, 204495 and two 200141F | 1 70 |
| 202068 | 11162 | Spool Holder Base | 15 |
| 200575H | 12311 | " " " Screw | 05 |
| 204296 | 11162 | " " Wire | 10 |
| 200079H | 12311 | " " " Hinge Screw | 02 |
| 204297 | 11162 | Spool Holder complete, Nos. 200079H, 202068 and 204296 | 25 |
| 213324 | 11057 | Take-up Cam with 200335c, 200380c, 200383c, 200430c and 200698c | 1 50 |
| 203172 | 11153 | Take-up Cam Friction Washer | 05 |
| 200430c | 12311 | " " Position Screw | 08 |
| 200383c | 12311 | " " " " Check Screw | 02 |
| 200335c | 12311 | " " Set Screw | 04 |
| 213402 | 11154 | " Lever with 204407 | 60 |
| 221127 | — | " " 213402 with 204263 | 75 |
| 204263 | 11154 | " " Bearing with 204264 | 15 |
| 204264 | 11154 | " " " Position Pin | 01 |
| 200042F | 12311 | " " " Screw | 05 |
| 204407 | — | " " Oil Guard | 05 |
| 201816 | 11154 | " " Roller | 12 |
| 213793 | 11154 | Take-up Lever complete, Nos. 200042F, 201816 and 221127 | 90 |
| 202402 | 11154 | Tension Disc | 05 |
| 202090 | 11154 | " " Position Pin | 01 |
| 204267 | 11154 | " Release Lever | 05 |
| 200309E | 11154 | " " " Screw | 04 |
| 202075 | 11154 | " " Plunger | 03 |
| 213325 | 11057 | " " Slide with 204434 (for Presser Bar) | 20 |

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| 204434 | 11154 | Tension Release Slide Spring | \$ 02 |
| 202407 | 11154 | " Spring | 05 |
| 200632B | 11154 | " Stud | 20 |
| 200397H | 11151 | " " Set Screw | 02 |
| 201572B | 11154 | " Thumb Nut | 04 |
| 204271 | 11154 | " Washer | 05 |
| 204272 | 11154 | Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402 | 50 |
| 215610 | --- | Thread Controller Adjusting Collar | 10 |
| 204273 | 11154 | " " " " 215610 with 200684H (for Presser Bar) | 15 |
| 200684H | 11154 | Thread Controller Adjusting Collar Screw | 04 |
| 202082 | 11153 | " " Plate | 12 |
| 200577H | 12311 | " " " Screw | 02 |
| 202098 | 11153 | " " Roller | 05 |
| 213329 | 11056 | " " " Guard | 10 |
| 202084 | 11153 | " " " " Washer.. | 01 |
| 200300H | 11153 | " " " Screw | 04 |
| 213331 | 11056 | " " Spring | 03 |
| 213330 | 11056 | " " " Guard | 08 |
| 200581H | 11151 | " " " " Screw.. | 02 |
| 213326 | 11056 | " " " Stop | 15 |
| 213327 | 11056 | " " " " Driving | 10 |
| 200319c | 11153 | Gear | 10 |
| 200135c | 11153 | Thread Controller Spring Stop Driving Gear Hinge Screw | 04 |
| 204279 | 11153 | Thread Controller Spring Stop Screw ... | 03 |
| 200366H | 11153 | " " " Stud with 204925 | 10 |
| 204925 | 11153 | " " " " Set Screw | 02 |
| 221128 | 11153 | " " " " Washer .. | 01 |
| 213332 | 11056 | Thread Controller complete, Nos. 200300H, 200581H, 202082, 202084, 202098, 213329 and 213330 | 42 |
| 202413 | 11154 | Thread Controller and Spring complete, Nos. 213331 and 221128 | 45 |
| 204329 | --- | Thread Guide | 05 |
| 204330 | 12225 | " Oiler (felt) | 01 |
| 200113F | 12225 | " " Bracket with 204329 | 25 |
| 204281 | 11154 | " " " Screw | 03 |
| 202091 | 11151 | " Retainer Guide Wire | 01 |
| 202092 | 11153 | " " Sleeve | 05 |
| 204058B | 11153 | " " Spring | 01 |
| 200368H | 11153 | " " Stud | 07 |
| 204059 | 11153 | " " " Set Screw | 02 |
| 212345 | 12187 | Thread Retainer complete, Nos. 202091, 202092 and 204058B | 15 |
| 200577H | 12311 | Throat Plate, 50 needle hole, for needle sizes 3 to 5 | 1 50 |
| | | Throat Plate Screw (2) | 02 |

LIST OF PARTS COMPLETE

FOR

MACHINE No. 49 w 1

DROP FEED. CYLINDER BED. ROLLER PRESSER.

For Leather.

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| *213383 | ---- | Arm | \$ -- |
| 213114 | 11150 | " Cap | 25 |
| 200278H | 12311 | " " Screw | 05 |
| 202248H | 11151 | " " " Washer | 05 |
| 200963E | 12311 | " Screw (3) | 06 |
| 202005 | 11151 | " " Washer (3) | 01 |
| 213423 | 11152 | " Shaft | 1 85 |
| 213317 | ---- | " " 213423 with 200244B, 200245B, 213303 to 213305, 213354, 213654, 213655 and two 201528E | 6 20 |
| 204801 | 11150 | Arm Shaft Bushing (back), with 202260 | 35 |
| 202260 | ---- | " " " " Oil Packing (wick) | 01 |
| 200338c | 11151 | Arm Shaft Bushing (back) Set Screw ... | 04 |
| 213299 | 11150 | " " " (center), with 202260 | 25 |
| 202260 | ---- | " " " " Oil Packing (wick) | 01 |
| 200341c | 11151 | Arm Shaft Bushing (center) Set Screw.. | 04 |
| 213294 | 11058 | " " " (front), with 202126 and 202260 | 40 |
| 202260 | ---- | Arm Shaft Bushing (front) Oil Packing (wick) | 01 |
| 200502B | 11151 | Arm Shaft Bushing (front) Oil Packing Thumb Screw | 25 |
| 202126 | 11151 | Arm Shaft Bushing (front) Position Pin | 01 |
| 200352c | 11151 | " " " " Set Screw.. | 03 |
| 204804 | 11152 | " " Connection with four 200054E (2) | 80 |
| 200054E | 11151 | Arm Shaft Connection Screw | 03 |
| 204805 | 11162 | Balance Wheel, 5½ in. diam. (belt groove 3 in. diam.), with 200328c and 200335c | 1 00 |

| No. | Plate | Name | Each |
|---|-------|--|-------|
| 200062H | 12311 | Balance Wheel Adjusting Screw | \$ 07 |
| 200328C | 12311 | " " Position Screw | 04 |
| 200335C | 12311 | " " Set Screw | 04 |
| *221116 | — | Bed (cylinder) | — |
| *215736 | — | " 221116 with 213314 and two 200516E | — |
| 213309 | 11058 | " (cylinder) End Cover | 2 40 |
| 213313 | — | " Base (high) | 2 50 |
| 213312 | — | " " (low) | 2 50 |
| Note: High Bed Base 213313 furnished only when ordered. | | | |
| 203184 | 11060 | Bed Clamp | 50 |
| 200262H | 11060 | " " Hinge Screw | 10 |
| 202622 | 11151 | " " Packing Washer | 01 |
| 200728B | 11060 | " " Thumb Screw | 12 |
| 203185 | 11060 | " " Washer | 10 |
| 202618 | 11058 | " Hinge | 1 50 |
| 200030H | 11056 | " " Screw (6) | 05 |
| 213320 | 11150 | " Slide (back) | 50 |
| 213685 | 11061 | " " " " Clamp Plate | 15 |
| 213686 | 11061 | " " " " " " | 15 |
| 200582H | 11151 | " " " " " " Screw (4) | 02 |
| 203208 | 11228 | Bobbin | 05 |
| 203210 | 11228 | " Case Base with 202056, 203211 to 203213 and 203216 | 55 |
| 203211 | 11151 | Bobbin Case Base Latch | 05 |
| 202056 | 11151 | " " " " Pin | 01 |
| 203212 | 11151 | " " " " Plunger | 02 |
| 203213 | 11151 | " " " " Spring | 01 |
| 203209 | 11228 | " " Cap with 200984E, 203214, 203215 and two 200594E | 25 |
| 203214 | 11228 | Bobbin Case Tension Spring | 10 |
| 200984E | 11151 | " " " " " " Regulating Screw | 04 |
| 200594E | 11228 | Bobbin Case Tension Spring Screw | 02 |
| 203215 | 11228 | " " Thread Guide | 05 |
| 200594E | 11228 | " " " " " " Screw | 02 |
| 203216 | 11228 | " " Washer (cloth) ... Per 100 | 25 |
| 203217 | 11228 | Bobbin Case complete, Nos. 203209 and 203210 | 80 |
| 203563 | 11253 | Cylinder End Cover Rest | 25 |
| 200110D | 11253 | " " " " " " Screw | 02 |
| 213385 | 11162 | Face Plate with 200366H, 200368H, 202090, 204185, 204281 and two 200397H | 1 10 |
| 200053C | 12311 | Face Plate Screw | 04 |
| 204185 | 11151 | " " Thread Guide | 03 |
| 200397H | 11151 | " " " " " " Set Screw... .. | 02 |

| No. | Plate | Name | Each |
|---------|-------|--|--------|
| 221125 | 11162 | Face Plate complete, Nos. 200113E, 200135C, 200309E, 200319C, 200577H, 204059, 204267, 204272, 204279, 204330, 213326, 213327, 213332 and 213385 | \$3 00 |
| 213295 | 11060 | Feed Bar with 200544E and 213610 | 1 20 |
| 213298 | 11061 | " " Connecting Link with two 200072C | 50 |
| 200072C | 11151 | Feed Bar Connecting Link Pinch Screw | 03 |
| 200935E | 11151 | " " " " " " " " Screw Stud | 08 |
| 201532E | 11151 | " " " " " " " " " " Nut | 03 |
| 213610 | 11151 | Feed Bar Connecting Link Stud | 03 |
| 212347 | 12187 | " Dog | 75 |
| 200544E | 11061 | " " Screw | 06 |
| 213303 | 11058 | " Driving Eccentric (adjustable) | 1 00 |
| 213304 | 11058 | " " " " Adjusting Disc | 1 40 |
| 213305 | 11058 | " " " " Flange with 200382C and 200437C | 60 |
| 200437C | 12311 | Feed Driving Eccentric Flange Position Screw | 06 |
| 200382C | 11151 | Feed Driving Eccentric Flange Set Screw | 02 |
| 213655 | 11151 | " " " " " " Friction Spring Washer | 20 |
| 200245D | 11151 | Feed Driving Eccentric Friction Spring Washer Screw | 08 |
| 201528E | 11151 | Feed Driving Eccentric Friction Spring Washer Screw Nut | 04 |
| 200244D | 11151 | Feed Driving Eccentric Fulcrum Screw | 08 |
| 201528E | 11151 | " " " " " " " " Nut | 04 |
| 213300 | 11152 | Feed Driving Rock Shaft | 1 25 |
| 213302 | — | " " " " " " 213300 with 200583H, 200935E, 201532E, 213295, 213296, 213298 and 213748 | 3 80 |
| 203244 | 11151 | Feed Driving Rock Shaft Collar with two 200393C | 20 |
| 200393C | 11151 | Feed Driving Rock Shaft Collar Set Screw | 02 |
| 213354 | 11152 | Feed Driving Rock Shaft Connection with 200054E and 202277 | 75 |
| 213654 | 11151 | Feed Driving Rock Shaft Connection Collar | 15 |
| 200919C | 11060 | Feed Driving Rock Shaft Connection Hinge Screw | 05 |
| 201522E | 11151 | Feed Driving Rock Shaft Connection Hinge Screw Nut | 03 |
| 202277 | — | Feed Driving Rock Shaft Connection Oil Packing (wick) | 01 |

| No. | Plate | Name | Each |
|---------|-------|---|-------|
| 200054E | 11151 | Feed Driving Rock Shaft Connection Pinch Screw | \$ 03 |
| 213301 | 11060 | Feed Driving Rock Shaft Crank with 200038c | 35 |
| 200038c | 11151 | Feed Driving Rock Shaft Crank Pinch Screw | 05 |
| 213296 | 11057 | Feed Lifting Cam with 200392c and 200447c | 60 |
| 200447c | 11151 | Feed Lifting Cam Position Screw | 04 |
| 213748 | 11056 | " " " Retainer | 10 |
| 200583H | 11151 | " " " " Screw | 02 |
| 200392c | 11061 | " " " Set Screw | 02 |
| 213308 | 11060 | " Regulating Lever with 213657 | 40 |
| 200665c | 11151 | " " " Hinge Screw | 08 |
| 213656 | 11151 | " " " Spring | 03 |
| 213657 | --- | " " " " Pin | 03 |
| 227459 | 11162 | Foot Lifter Lifting Lever | 20 |
| 227534 | --- | " " " " 2 2 7 4 5 9 with 200262H | 30 |
| 227626 | 11155 | Foot Lifter Lifting Lever Chain Spring | 10 |
| 227471 | --- | " " " " " " 227626 with 202784 | 12 |
| 202784 | 11155 | Foot Lifter Lifting Lever Chain Spring Hook | 02 |
| 200062H | 12311 | Foot Lifter Lifting Lever Chain Spring Screw | 07 |
| 200262H | 11060 | Foot Lifter Lifting Lever Hinge Screw | 10 |
| *203463 | --- | Hook (sewing) | -- |
| 203464 | 11241 | " 203463 with 200600E, 200616E and 203251 | 2 20 |
| 203465 | 11241 | Hook and Bobbin Case complete, Nos. 203217 and 203464 | 3 00 |
| 203557 | 11253 | Hook Bevel Gear Socket, 18 teeth | 85 |
| 203558 | 11253 | " " " " Bushing (left) | 25 |
| 200446c | 11253 | " " " " " Position Screw | 04 |
| 213360 | 11150 | Hook Bevel Gear Socket Oil Guard | 10 |
| 200124H | 11155 | " " " " " " Screw | 02 |
| 200559H | 11253 | " " " " " Screw | 05 |
| 213319 | 11056 | " " Pinion with two 200386c | 1 00 |
| 200386c | 11151 | " " " Set Screw | 02 |
| 213323 | 11152 | " Driving Shaft | 1 75 |
| 213314 | 11150 | " " " Bearing | 20 |
| 202126 | 11151 | " " " " Position Pin (2) | 01 |
| 200516E | 12311 | Hook Driving Shaft Bearing Screw | 08 |
| 204246 | 11056 | " " " Collar (back), with two 200383c | 20 |

| No. | Plate | Name | Each |
|---------|-------|--|------------|
| 200383c | 12311 | Hook Driving Shaft Collar (back) Set Screw | \$ 02 |
| 203244 | 11151 | Hook Driving Shaft Collar (front), with two 200393c | 20 |
| 200393c | 11151 | Hook Driving Shaft Collar (front) Set Screw | 02 |
| 203251 | 11228 | Hook Gib | 40 |
| 200600E | 11228 | " " Hinge Screw | 02 |
| 200616E | 11228 | " " Screw | 02 |
| 203553 | 11257 | " Saddle (right), with 200446c and 202299 | 2 00 |
| 203566 | 11257 | Hook Saddle 203553 with 200446c, 203557, 203558 and 203563 | 3 25 |
| 202299 | --- | Hook Saddle Oil Packing (wick) | 04 |
| 200541E | 11056 | " " Screw (2) | 09 |
| 225837 | 11151 | " " Washer (2) | 04 |
| 203718 | 11241 | " Washer | 20 |
| 203567 | 11257 | Hook Saddle (right) complete, Nos. 200559H, 203465, 203566 and 203718 | 6 25 |
| 208613 | --- | Needle Bar (hollow) | 75 |
| 204247 | 11152 | " " 208613 with 200125E, 200175E and 204250 | 80 |
| 204248 | 11153 | Needle Bar Connecting Link | 35 |
| 200698c | 11153 | " " " " Hinge Screw Stud | 10 |
| 200380c | 11153 | Needle Bar Connecting Link Hinge Screw Stud Set Screw | 02 |
| 204249 | 11153 | Needle Bar Connecting Stud with 200072c and 202277 | 40 |
| 202277 | --- | Needle Bar Connecting Stud Oil Packing (wick) | 04 |
| 200072c | 11151 | Needle Bar Connecting Stud Pinch Screw | 03 |
| 204326 | --- | " " Packing Cord (2) ... Per 100 | 25 |
| 200504E | 11153 | " " Screw Bushing (lower) | 05 |
| 200503B | 11153 | " " " " (upper) | 05 |
| 204250 | 11153 | " " Thread Guide | 03 |
| 200175E | 11153 | " " " " Screw | 02 |
| 200125E | 11153 | " Set Screw | 02 |
| 213322 | 11057 | Presser Bar Lifter | 20 |
| 200550c | 11153 | " " " Hinge Screw | 08 |
| 213321 | 11056 | " " Lifting Bracket with 200086c | 40 |
| 200086c | 11153 | " " " " Pinch Screw | 03 |
| 204254 | 11153 | " " " " Position Guide | 30 |
| 200362c | 12311 | Presser Bar Lifting Bracket Position Guide Set Screw | 03 |
| 204327 | --- | Presser Bar Packing Washer (left) | Per 100 25 |

| No. | Plate | Name | Each |
|---------|-------|---|-------|
| 200504E | 11153 | Presser Bar Screw Bushing (lower).... | \$ 05 |
| 204258 | 11153 | " " Spring (heavy) | 10 |
| 200491B | 11153 | " " Thumb Screw (pressure regulating) | 25 |
| 201906 | 11155 | Roller Presser, 1 1/4 in. diam., 3/8 in. face (fine) with 200548F and 201534U | 40 |
| 202839 | 11155 | Roller Presser Arm | 20 |
| 204567 | 11155 | " " " 202839 with 201906 | 60 |
| 202560 | 12225 | " " " Bracket (swing) ... | 60 |
| 202838 | --- | " " " 202560 with 200096B and 204567 | 1 20 |
| 200675C | 12225 | Roller Presser Arm Bracket. Position Screw Stud | 05 |
| 202558 | 12225 | Roller Presser Arm Bracket Spring | 02 |
| 202559 | 12225 | " " " " " Stop | 05 |
| 200141F | 12225 | " " " " " " " Screw | 02 |
| 200096B | 12225 | Roller Presser Arm Screw | 03 |
| 204495 | 12225 | " " Bar | 35 |
| 200548F | 11155 | " " Hinge Screw | 10 |
| 201534U | 12225 | " " " " Nut | 03 |
| 204496 | --- | Roller Presser and Bar complete, Nos. 200675C, 202558, 202559, 202838, 204495 and two 200141F | 1 70 |
| 202068 | 11162 | Spool Holder Base | 15 |
| 200575B | 12311 | " " " Screw | 05 |
| 204296 | 11162 | " " Wire | 10 |
| 200079B | 12311 | " " " Hinge Screw | 02 |
| 204297 | 11162 | Spool Holder complete, Nos. 200079B, 202068 and 204296 | 25 |
| 213324 | 11057 | Take-up Cam with 200335C, 200380C, 200383C, 200430C and 200698C | 1 50 |
| 203172 | 11153 | Take-up Cam Friction Washer | 05 |
| 200430C | 12311 | " " Position Screw | 08 |
| 200383C | 12311 | " " " " Check Screw | 02 |
| 200335C | 12311 | " " Set Screw | 04 |
| 213402 | 11154 | " Lever with 204407 | 60 |
| 221127 | --- | " " 213402 with 204263 | 75 |
| 204263 | 11154 | " " Bearing with 204264 | 15 |
| 204264 | 11154 | " " " Position Pin ... | 01 |
| 200042F | 12311 | " " " Screw | 05 |
| 204407 | --- | " " Oil Guard | 05 |
| 201816 | 11154 | " " Roller | 12 |
| 213793 | 11154 | Take-up Lever complete, Nos. 200042F, 201816 and 221127 | 90 |
| 202402 | 11154 | Tension Disc | 05 |
| 202090 | 11154 | " " Position Pin | 01 |
| 204267 | 11154 | " Release Lever | 05 |

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| 200309E | 11154 | Tension Release Lever Screw | \$ 04 |
| 202075 | 11154 | " " Plunger | 03 |
| 213325 | 11057 | " " Slide with 204434 (for Presser Bar) | 20 |
| 204434 | 11154 | Tension Release Slide Spring | 02 |
| 202407 | 11154 | " Spring | 05 |
| 200632B | 11154 | " Stud | 20 |
| 200397B | 11154 | " " Set Screw | 02 |
| 201572B | 11154 | " Thumb Nut | 04 |
| 204271 | 11154 | " Washer | 05 |
| 204272 | 11154 | Tension complete, Nos. 200632B, 201572B, 202075, 202407, 204271 and two 202402 | 50 |
| 215610 | --- | Thread Controller Adjusting Collar | 10 |
| 204273 | 11154 | " " " " 215610 with 200684U (for Presser Bar) | 15 |
| 200684U | 11154 | Thread Controller Adjusting Collar Screw | 04 |
| 202082 | 11153 | " " Plate | 12 |
| 200577B | 12311 | " " " Screw | 02 |
| 202098 | 11153 | " " Roller | 05 |
| 213329 | 11056 | " " " Guard | 10 |
| 202084 | 11153 | " " " Washer .. | 01 |
| 200300B | 11153 | " " " Screw | 04 |
| 213331 | 11056 | " " Spring | 03 |
| 213330 | 11056 | " " " Guard | 08 |
| 200581B | 11151 | " " " " Screw .. | 02 |
| 213326 | 11056 | " " " Stop | 15 |
| 213327 | 11056 | " " " " Driving Gear | 10 |
| 200319C | 11153 | Thread Controller Spring Stop Driving Gear Hinge Screw | 04 |
| 200135C | 11153 | Thread Controller Spring Stop Screw... | 03 |
| 204279 | 11153 | " " " Stud with 204925 | 10 |
| 200366B | 11153 | " " " " Set Screw | 02 |
| 204925 | 11153 | " " " " Washer .. | 01 |
| 221128 | 11153 | Thread Controller complete, Nos. 200300B, 200581B, 202082, 202084, 202098, 213329 and 213330 | 42 |
| 213332 | 11056 | Thread Controller and Spring complete, Nos. 213331 and 221128 | 45 |
| 202413 | 11154 | Thread Guide | 05 |
| 204329 | --- | " Oiler (felt) | 01 |
| 204330 | 12225 | " " Bracket with 204329 | 25 |
| 200413F | 12225 | " " " Screw | 03 |
| 204281 | 11154 | " Retainer Guide Wire | 01 |
| 202091 | 11153 | " " Sleeve | 05 |
| 202092 | 11153 | " " Spring | 01 |
| 204058B | 11153 | " " Stud | 07 |
| 200368B | 11153 | " " " Set Screw | 02 |

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| 204059 | 11153 | Thread Retainer complete, Nos. 202091, 202092 and 204058B | \$ 15 |
| 212317 | 11160 | Throat Plate, 50 needle hole, for needle sizes 3 to 5 | 1 50 |
| 200577H | 12311 | Throat Plate Screw (2) | 02 |

ACCESSORIES

FOR MACHINE NO. 48 W 1

| No. | Plate | Name | Each |
|--------|-------|---|-------|
| 203208 | 11228 | Bobbin (5) | \$ 05 |
| 225497 | 11156 | " Case Screw Driver | 10 |
| 12 x 3 | ---- | Needles, three each, sizes 3 and 4,Per doz | 20 |
| 227104 | ---- | Drip Pan (cast iron, square), with one round head wood screw 1½ in. No. 14 | 25 |
| 41401 | 11156 | Machine Rest Pin (wood) | 06 |
| 225500 | 11156 | Oiler with 225499 | 10 |
| 225499 | 11156 | " Spout, 2¾ in. long | 02 |
| 225498 | 11156 | Screw Driver, 7¼ in. long | 15 |
| 225554 | 11156 | Wrench (steel) | 10 |
| 204033 | 11150 | " | 05 |

BOBBIN WINDER

With Long Stop Latch and Large Pulley Swinging Automatic
Left Hand.

| | | | |
|---------|-------|--|----|
| 227149 | 11157 | Bobbin Winder Base (left) | 15 |
| 227209 | 11157 | " " Frame (left) with 200125c | 15 |
| 227152 | 10558 | " " " Hinge Pin | 02 |
| 227153 | 10558 | " " " Spring | 02 |
| 200125c | 11153 | " " " Stop Screw | 02 |
| 227154 | 11157 | " " Pulley (large) with 200380c | 20 |
| 200380c | 11153 | " " " Set Screw | 02 |
| 227156 | 10558 | " " Spindle | 15 |
| 227157 | 11157 | " " Stop Latch (left) | 10 |
| 227159 | 10558 | " " " Hinge Pin | 02 |
| 227160 | 10558 | " " " Spring | 01 |
| 227048 | 11157 | Bobbin Winder complete (large pulley), Nos. 227149, 227152 to 227154, 227156, 227157, 227159, 227160, 227209 and two round head wood screws 1½ in. No. 14 | 85 |
| 202480 | 11157 | Bobbin Winder Spool Holder Base with 200355H and 202481 | 15 |
| 202481 | 11157 | Bobbin Winder Spool Holder Base Spool Pin | 05 |
| 202482 | 11155 | Bobbin Winder Spool Holder Tension Disc (lower or upper) | 02 |
| 200011E | 11155 | Bobbin Winder Spool Holder Tension Disc Screw | 05 |
| 200355H | 11161 | Bobbin Winder Spool Holder Tension Disc Screw Set Screw | 03 |
| 202483 | 11155 | Bobbin Winder Spool Holder Tension Disc Spring (brass) | 01 |

| No. | Plate | Name | Each |
|--------|-------|---|-------|
| 202484 | 11155 | Bobbin Winder Spool Holder Tension Disc Thread Guide | \$ 01 |
| 202485 | 11157 | Bobbin Winder Spool Holder complete, Nos. 200011e, 202480, 202481, 202483, two 202482 and one wood screw 1 in. No. 13n | 35 |
| 227514 | — | Bobbin Winder and Spool Holder complete, Nos. 202485 and 227048 | 1 20 |

FOOT LIFTER.

| | | | |
|--------|-------|--|----|
| 227952 | 11156 | Foot Lifter Lever (left or right) | 25 |
| 227678 | 11156 | " " " Chain, 48 in. long with 202784 | 25 |
| 227954 | 11155 | Foot Lifter Lever Chain Hook (lower) .. | 02 |
| 202784 | 11155 | " " " " " (upper) .. | 02 |
| 225016 | 11155 | " " " Hinge Pin | 01 |
| 227953 | 11156 | " " " Stand with two wood screws 1 in. No. 13 | 10 |
| 227955 | 11156 | Foot Lifter Lever (left or right) complete, Nos. 225016, 227678 and 227952 to 227954 | 60 |

(Other Foot Lifter Parts are listed with parts
of machine head.)

**FOR MACHINES NOS. 48W6, 48W106
AND 49W1**

Same as for No. 48w1 with the following exceptions:

| | | | |
|--------|-------|--|----|
| 12x2 | — | Needles, in place of 12x3.....Per doz. | 20 |
| 202803 | 11158 | Presser Foot | 80 |

FEED DOGS

| No. | Plate | Name | Each |
|--------|-------|--|-------|
| 212347 | 12187 | Feed Dog, for 212347, 212320, 212345 and 212346 | \$ 75 |
| 212259 | 11160 | Feed Dog, for 212256 and 212257 | 1 00 |
| 212336 | 12185 | " " " 212335, 212337, 212341 and 230396 | 75 |
| 212329 | 12184 | Feed Dog, for 212327 and 212328 | 75 |
| 212326 | 12184 | " " " 212324 and 212325 | 75 |
| 212332 | 12185 | " " " 212330 and 212331 | 75 |

No. Plate

Name

Each

PRESSER FEET**FOR MACHINE NO. 48W 1**

| No. | Plate | Name | Each |
|--------|-------|--|-------|
| 229851 | 11158 | Presser Foot | \$ 45 |
| 229856 | 10929 | " " | 50 |
| 229857 | 10929 | " " | 50 |
| 229858 | 10929 | " " | 50 |
| 206785 | 10929 | " " | 60 |
| 206788 | 10929 | " " | 50 |
| 202418 | 10929 | " " | 50 |
| 203040 | 11158 | " " | 60 |
| 206786 | 10929 | " " | 45 |
| 206794 | 10929 | " " | 45 |
| 221131 | 11158 | " " for binding | 70 |
| 206830 | 10929 | " " | 50 |
| 229081 | 14554 | " " for shoe binding | 50 |
| 202090 | 11154 | Presser Foot Hinge Pin | 01 |
| 203009 | — | " " Plate | 65 |
| 203010 | — | " " " | 65 |
| 203011 | — | " " " | 65 |
| 203012 | — | " " " | 65 |
| 203024 | — | " " " | 65 |
| 206986 | — | " " " | 65 |
| 202924 | — | " " Shank | 60 |
| 229863 | 11158 | Presser Foot (hinged) complete, Nos. 202090, 202924 and 203010 | 1 25 |
| 229864 | 11158 | Presser Foot (hinged) complete, Nos. 202090, 202924 and 203009 | 1 25 |
| 229865 | 11158 | Presser Foot (hinged) complete, Nos. 202090, 202924 and 203024 | 1 25 |
| 229867 | 11158 | Presser Foot (hinged) complete, Nos. 202090, 202924 and 203011 | 1 25 |
| 229868 | 11158 | Presser Foot (hinged) complete, Nos. 202090, 202924 and 203012 | 1 25 |
| 206987 | 11158 | Presser Foot (hinged) complete, Nos. 202090, 202924 and 206986, for umbrella hemming | 1 25 |

**FOR MACHINES NOS. 48W6, 48W106
AND 49W 1**

| | | | |
|--------|-------|--|----|
| 202803 | 11158 | Presser Foot, used in place of Roller Presser | 80 |
|--------|-------|--|----|

ROLLER PRESSERS

FOR MACHINES NOS. 48W6, 48W106
AND 49W1

| No. | Plate | Name | Each |
|---------|-------|---|-------|
| 201906 | 11155 | Roller Presser, $1\frac{1}{2}$ in. diam., $\frac{3}{8}$ in. face (fine), with 200548F and 201534U | \$ 40 |
| 201910 | 12225 | Roller Presser, $1\frac{1}{2}$ in. diam., $\frac{1}{2}$ in. face (coarse), with 200551F and 201534U | 25 |
| 201914 | 11155 | Roller Presser, $\frac{5}{8}$ in. diam., $\frac{1}{4}$ in. face (coarse) with 200551F and 201534U | 25 |
| 202839 | 11155 | Roller Presser Arm | 20 |
| 204328 | — | " " " | 20 |
| 204571 | — | " " " | 25 |
| 204567 | 11155 | " " " 202839 with 201906 | 60 |
| 204570 | 12225 | " " " 204328 with 201910 | 45 |
| 204572 | 11155 | " " " 204571 with 201914 | 45 |
| 202560 | 12225 | " " " Bracket (swing) | 60 |
| 202838 | — | " " " " 202560 with 200096n and 204567 | 1 20 |
| 200675c | 12225 | Roller Presser Arm Bracket Position Screw Stud | 05 |
| 202558 | 12225 | Roller Presser Arm Bracket Spring | 02 |
| 202559 | 12225 | " " " " " Stop | 05 |
| 200141F | 12225 | " " " " " " Stop Screw | 02 |
| 200096n | 12225 | Roller Presser Arm Screw | 03 |
| 204495 | 12225 | " " Bar | 35 |
| 200548F | 11155 | " " Hinge Screw | 10 |
| 200551F | 12225 | " " " " " | 10 |
| 201534U | 12225 | " " " " " Nut | 03 |
| 204496 | — | Roller Presser and Bar complete, Nos. 200675c, 202558, 202559, 202838, 204495 and two 200141F | 1 70 |

THROAT PLATES

FOR MACHINE NO. 48W1

Adapted for Hook Saddle complete, No. 203554.

| No. | Plate | Name | Each |
|--------|-------|--|--------|
| 212256 | 11160 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212259 | \$1 50 |
| 212257 | 11160 | Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212259 | 1 50 |
| 212337 | 12186 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212336 | 1 65 |
| 212338 | 12186 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for darning | 1 65 |
| 212327 | 12184 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212329 | 1 50 |
| 212328 | 12184 | Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212329 | 1 50 |
| 212324 | 12184 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212326 | 1 50 |
| 212325 | 12184 | Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212326 | 1 50 |
| 212330 | 12185 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212332 | 1 65 |
| 212331 | 12185 | Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212332 | 1 65 |
| 212341 | 12186 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212336 and 230396 | 1 65 |

FOR MACHINES NOS. 48W6 AND 48W106

Adapted for Hook Saddle complete, No. 203568.

| | | | |
|--------|-------|---|------|
| 212345 | 12187 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212347 | 1 50 |
| 212346 | 12187 | Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212347 | 1 50 |

FOR MACHINE NO. 49W1

Adapted for Hook Saddle complete, No. 203567.

| | | | |
|--------|-------|---|------|
| 212317 | 11160 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212347 | 1 50 |
| 212320 | 11160 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212347 | 1 65 |

BINDER

For Binding Slippers, Sandals, etc.

For Machines of Class 48 w

| No. | Plate | Name | Each |
|---------|-------|--|--------|
| 230391 | --- | Binder Head, for tapes or folded strips of various widths | \$2 00 |
| 200118B | 11161 | Binder Head Screw | 02 |
| 230392 | --- | " Base with six 226015 | 2 75 |
| 226015 | 11161 | " " Tape Tension Pin | 05 |
| 200246R | 11161 | " " Hinge Screw | 08 |
| 201525E | 11151 | " " " " Nut | 03 |
| 225708R | 11161 | " " Spring | 10 |
| 230393 | 14554 | Binder complete, Nos. 200246R, 201525E, 225708R, 230391, 230392 and two 200118B | 5 00 |
| 230810 | 11165 | Plate Slide | 1 00 |
| 230394 | 14554 | " " Side Plate with two 200175D | 25 |
| 230839 | --- | " " " " 230394 with 230395 | 65 |
| 230395 | 14554 | " " " " Catch | 40 |
| 200175D | 11153 | " " " " " Screw | 02 |
| 212336 | 12185 | Feed Dog | 75 |
| 229081 | 14554 | Presser Foot | 50 |
| 212341 | 12186 | Throat Plate | 1 65 |
| 230396 | --- | Binder Combination, for slipper work, Nos. 212336, 212341, 229081, 230393, 230810 and 230839 | 8 25 |

EDGE GUIDE

For Purse Work

For Machines of Class 48 w

| | | | |
|---------|-------|------------------------------------|------|
| 230096 | 14604 | Bed Slide | 70 |
| 230097 | 14604 | " " 230096 with 200921D and 230095 | 2 00 |
| 230095 | 14604 | Guide | 1 20 |
| 200921D | 14604 | " Thumb Screw | 10 |

WORK PLATE PLATFORMS

| No. | Plate | Name | Each |
|---------|-------|---|--------|
| 214013 | 11163 | Work Plate | \$1 50 |
| 200990c | 11161 | " " Screw | 10 |
| 201518E | 11151 | " " " Nut | 04 |
| 221106 | 11163 | " " Slide (back) | 35 |
| 215684 | 11163 | " " " (back or front) | 35 |
| 215682 | 11163 | " " Yoke with 200729A | 1 10 |
| 200729A | 11161 | " " " Screw | 12 |
| 215683 | --- | Work Plate complete, Nos. 214013, 215682, 215684, 221106, four 200990c and eight 201518E, for use with crescent or semi- flat Throat Plate | 4 00 |
| 215685 | --- | Work Plate complete, Nos. 214013, 215682, two 215684, four 200990c and eight 201518E, for use with Platform Throat Plate | 4 00 |

UNDER DRIVER

Ball Bearing, Left Hand, Round Belt, Two Speed.

| No. | Plate | Name | Each |
|---------|-------|---|--------|
| 227370 | 11164 | Cone Pulley, two speed, 1 1/2 in. and 5/8 in. belt diam., with 227553 | \$1 35 |
| 25362 | 12321 | Cone Pulley Ball, size 3/8 in. | 02 |
| 204100 | 12321 | " " " Bearing Cup | 12 |
| 204101 | 12321 | " " " Cap | 02 |
| 204102 | 12321 | " " " Retaining Spring | 05 |
| 227553 | 12322 | Cone Pulley Ball Cup complete, Nos. 204100 to 204102 and thirteen 25362 | 45 |
| 202459 | 11164 | Driving Pulley, 7 1/4 in. diam., with 202460 and 204105 | 75 |
| 202460 | 11164 | Driving Pulley Friction Ring (leather) | 05 |
| 204105 | 12321 | " " " " Stop Pin | 01 |
| 227743 | --- | " " Shaft (hollow) with 204109, 204110, 204112 and two 204111 | 60 |
| 202461 | 11164 | Driving Pulley Shaft 227743 with 204107, 204108 and eleven 25303 | 1 00 |
| 25303 | 12321 | Driving Pulley Shaft Ball, size 1/2 in. | 03 |
| 204107 | 12321 | " " " " Cup | 10 |
| 204108 | 12321 | " " " " Cap | 02 |
| 204109 | --- | " " " Oil Plug | 01 |
| 204110 | --- | " " " Oiling Leather | 02 |
| 204111 | --- | " " " " Pin (leather) | 01 |
| 204112 | 12322 | Driving Pulley Shaft Oiling Wick | 01 |
| 200524c | 12321 | " " " " Set Screw | 06 |
| 204113 | 12321 | " " " " Thimble | 10 |
| 227791 | 11164 | Frame with 200524c | 80 |
| 227098 | 11164 | Lever (compression) with 227555, two each 200524c and 202845 | 45 |
| 227792 | 11164 | Lever Brake with 200524c, 204122 and two 200374c | 35 |
| 227793 | 11164 | Lever Brake 227792 with 200082b and 227794 | 60 |
| 227794 | 11164 | Lever Brake Belt Guard | 20 |
| 200082b | 11161 | " " " " Screw | 03 |
| 204122 | 12322 | " " " Leather | 05 |
| 200374c | 12321 | " " " Set Screw | 02 |
| 200524c | 12321 | " " " Set Screw | 06 |
| 204123 | 12322 | " " " Spring | 05 |
| 227555 | 11155 | " Compression Plate (left hand) | 10 |
| 202845 | 12321 | " " " Rivet | 01 |
| 202461 | 11164 | " " Shaft with 202302 | 20 |
| 202302 | 12321 | " " " Coffey Pin | 01 |
| 200524c | 12321 | " " " Set Screw | 06 |

Under Driver

| No. | Plate | Name | Each |
|---------|-------|--|-------|
| 27070 | 11164 | Shaft Pulley (sectional grooved), 10 in. diam., 1 3/8 in. bore, with two 597c | \$ 45 |
| 597c | 11155 | Shaft Pulley Clamping Screw | 08 |
| 227976 | 11164 | Treadle with 200540b | 45 |
| 227977 | 11164 | " " 227976 with 227978 | 60 |
| 227978 | 11164 | " Adjustable Connecting Slide | 15 |
| 200540b | 11155 | " " " " Set Screw | 10 |
| 202468 | 11164 | Treadle Pitman Rod (lower or upper) | 05 |
| 204126 | 12321 | " " " Clamp with two 200530c | 20 |
| 200530c | 12321 | Treadle Pitman Rod Clamp Set Screw | 05 |
| 227980 | 11164 | Treadle Pitman complete, Nos. 204126 and two 202468 | 30 |
| 204127 | 11164 | Treadle Stand (left), with two wood screws 1 in. No. 13 | 08 |
| 204128 | 11164 | Treadle Stand (right) with two wood screws 1 in. No. 13 | 08 |
| 227981 | --- | Treadle and Stand complete, Nos. 204127, 204128 and 227977 | 75 |
| 227982 | --- | Treadle and Pitman complete, Nos. 227980 and 227981 | 90 |
| 227997 | --- | Transmitter complete, Nos. 202459, 202461, 202464, 204113, 204123, 227098, 227370, 227791, 227793 and three wood screws 1 1/2 in. No. 15 | 3 00 |
| 227998 | --- | Under Driver (ball bearing) lever pressure, left hand, two speed, complete, Nos. 27070, 227982 and 227997 | 4 00 |

OBSOLETE PARTS

FEED DOGS

| No. | Plate | Name | Each |
|--------|-------|-------------------------------|-------|
| 212334 | 12185 | Feed Dog, for 212333 | \$ 75 |
| 212278 | 12177 | " " " 212276 and 212277 | 1 00 |

THROAT PLATES

FOR MACHINE No. 48 w 1.

| | | | |
|--------|-------|---|------|
| 212335 | 12185 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212336 | 1 50 |
| 212276 | 12177 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212278 | 1 50 |
| 212277 | 12177 | Throat Plate, 46 needle hole, for needle sizes 5 to 7, for 212278 | 1 50 |
| 212333 | 12185 | Throat Plate, 50 needle hole, for needle sizes 3 to 5, for 212334 | 1 50 |

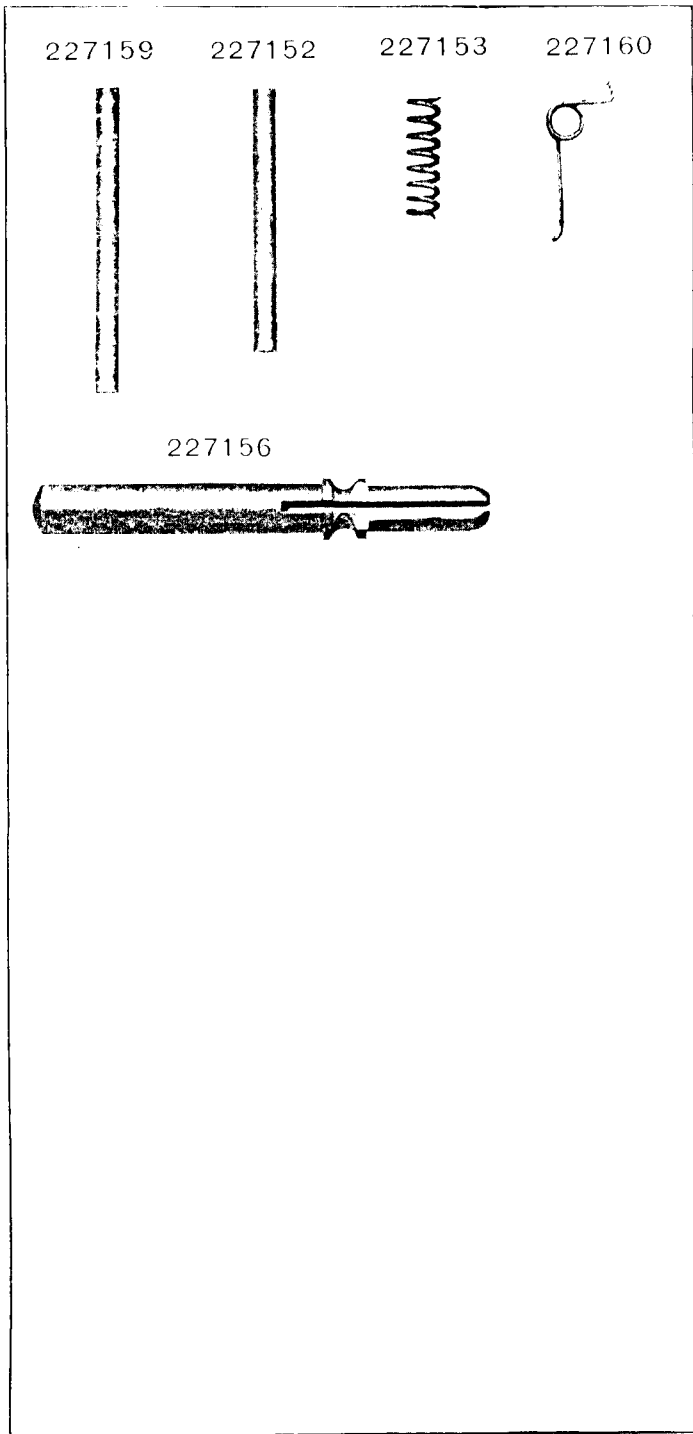 


PLATE 10929 -FULL SIZE

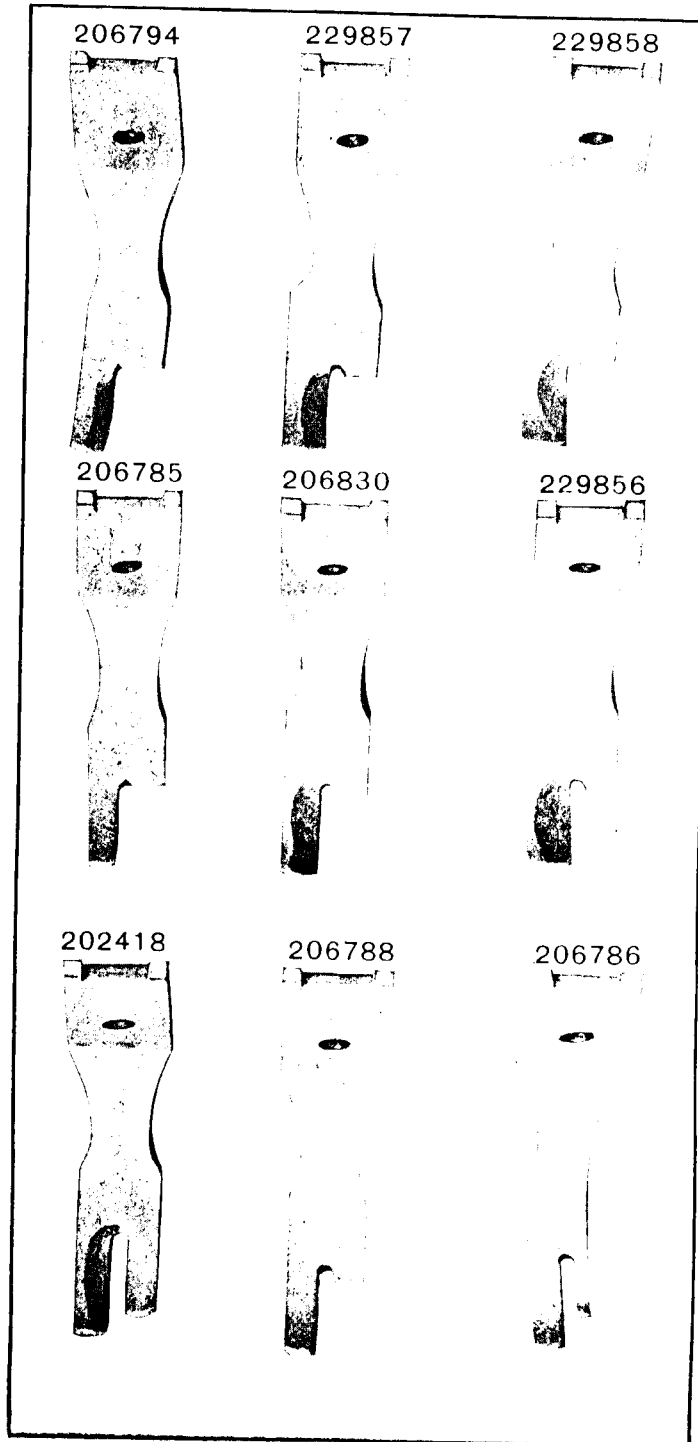 


PLATE 11056 -FULL SIZE


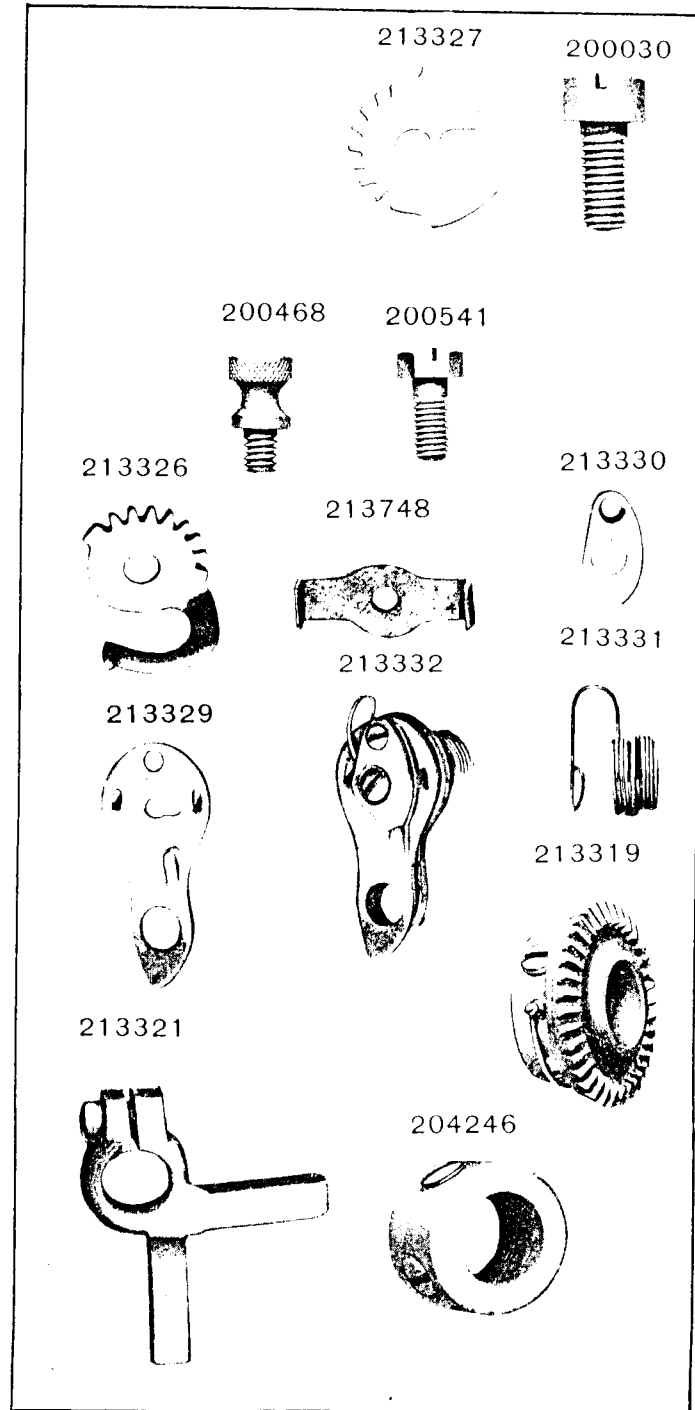 


PLATE 11057--FULL SIZE

 213324



213322

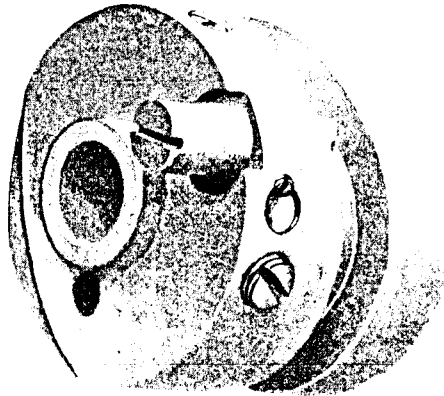

213296



213325


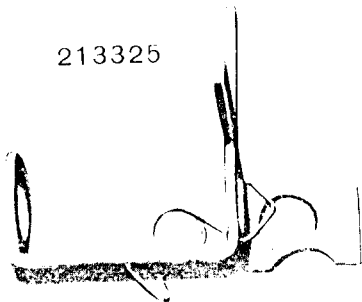 


PLATE 11058--ONE-HALF SIZE

 
213309




213294

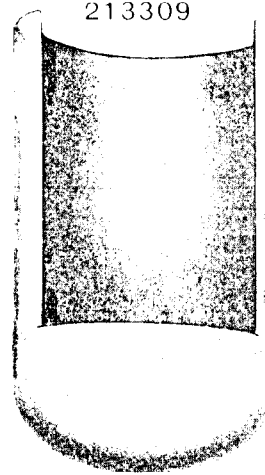

 202618

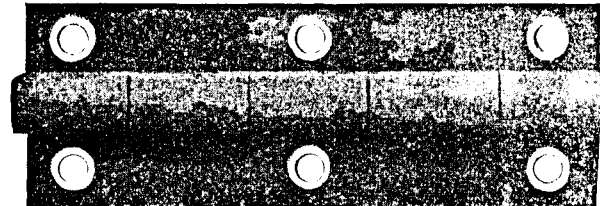

213304

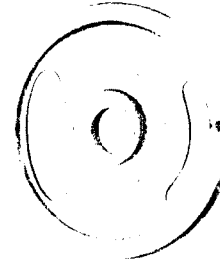 

213305



213303



PLATE 11060-FULL SIZE

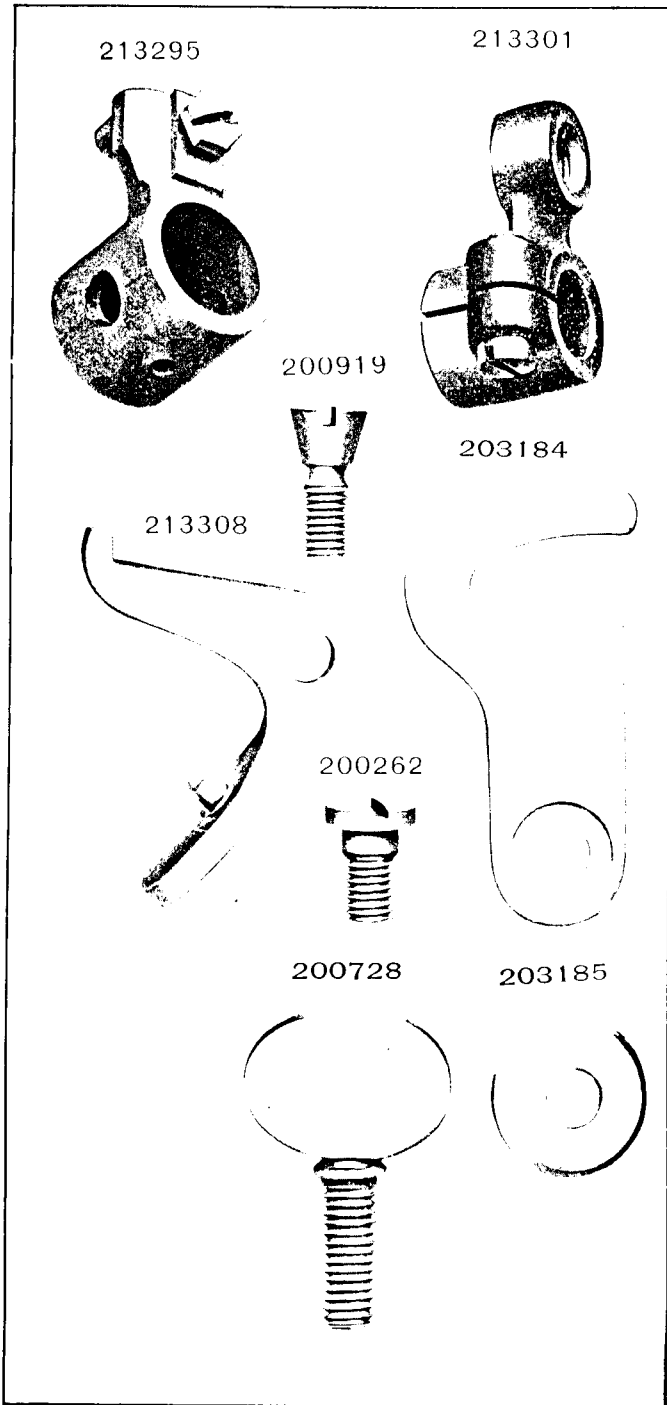 


PLATE 11061-FULL SIZE

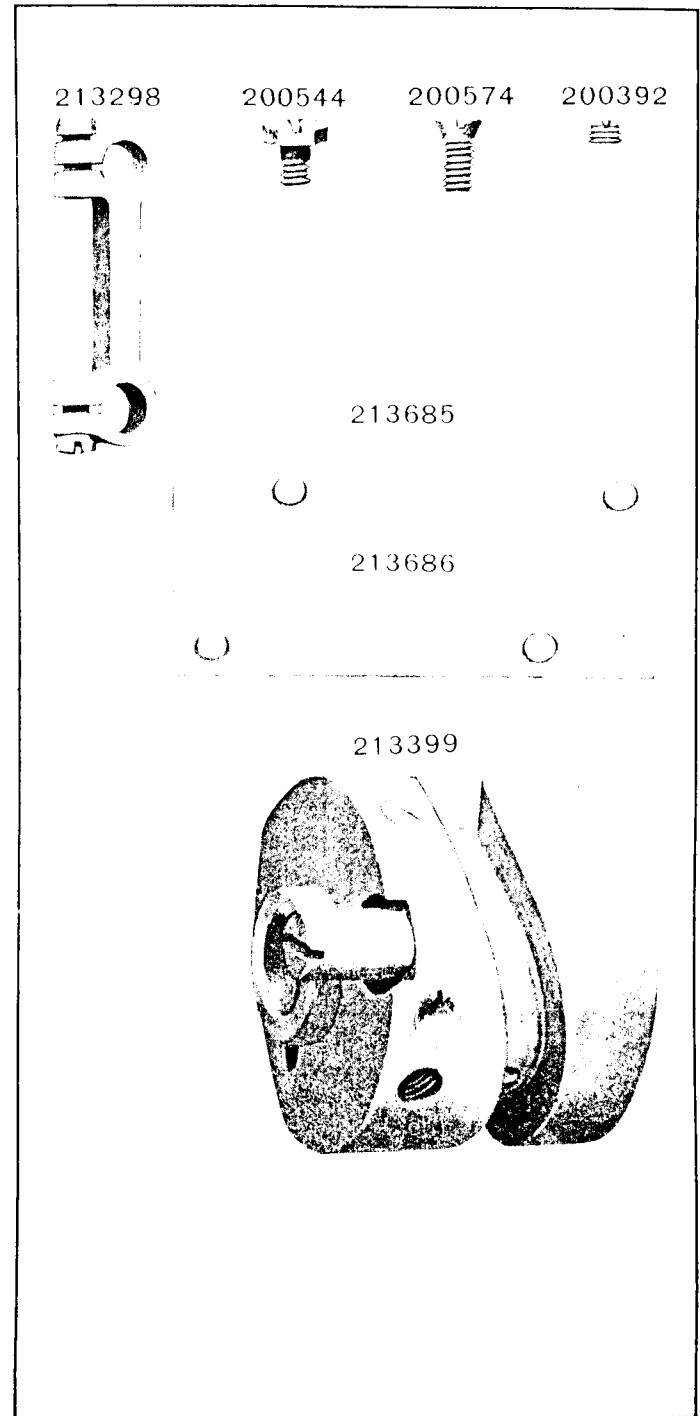 


PLATE 11150 - ONE-HALF SIZE

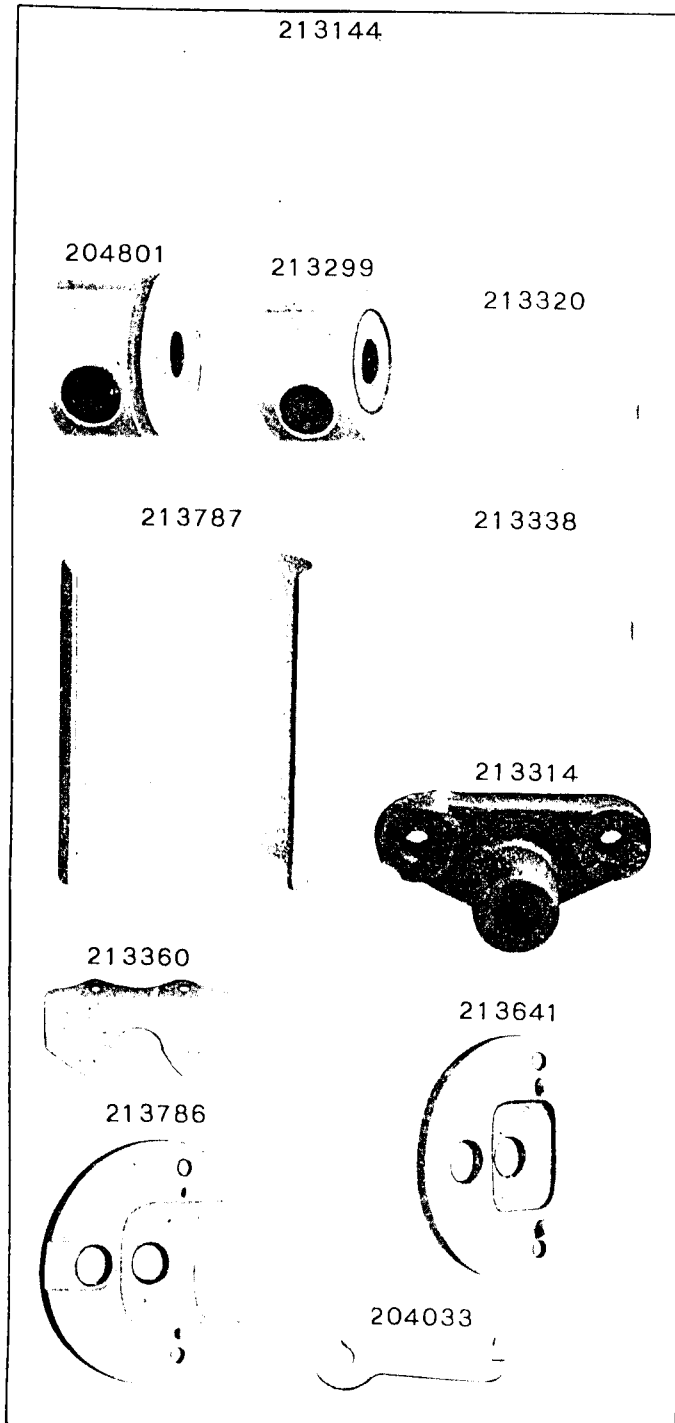 


PLATE 11151 - FULL SIZE

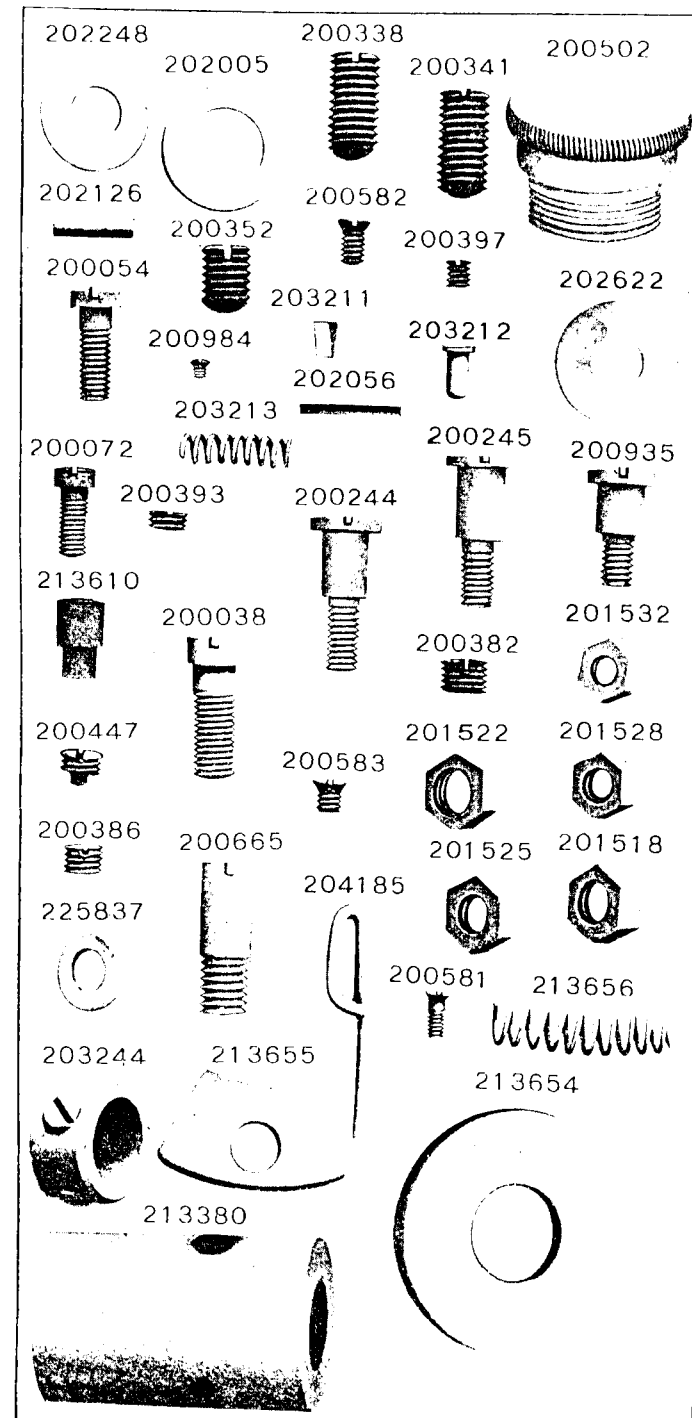 


PLATE 11152 - ONE-FOURTH SIZE

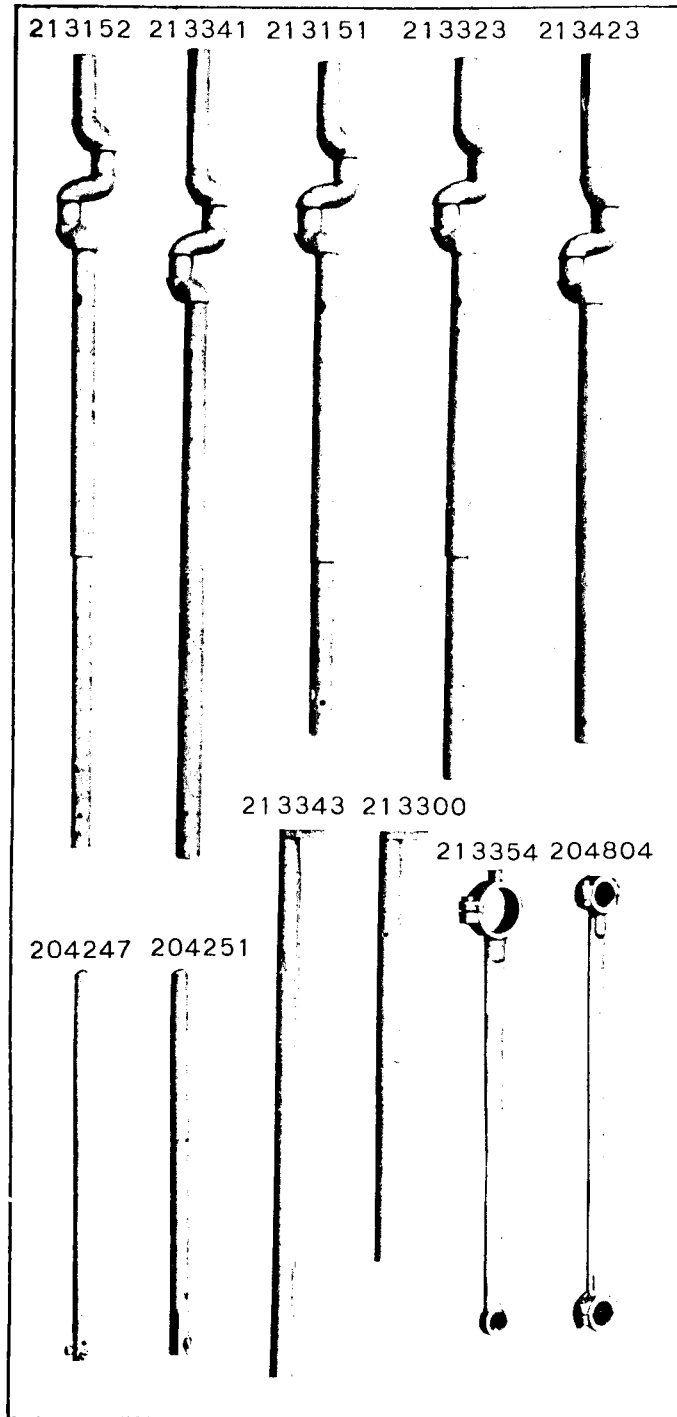 


PLATE 11153 - FULL SIZE

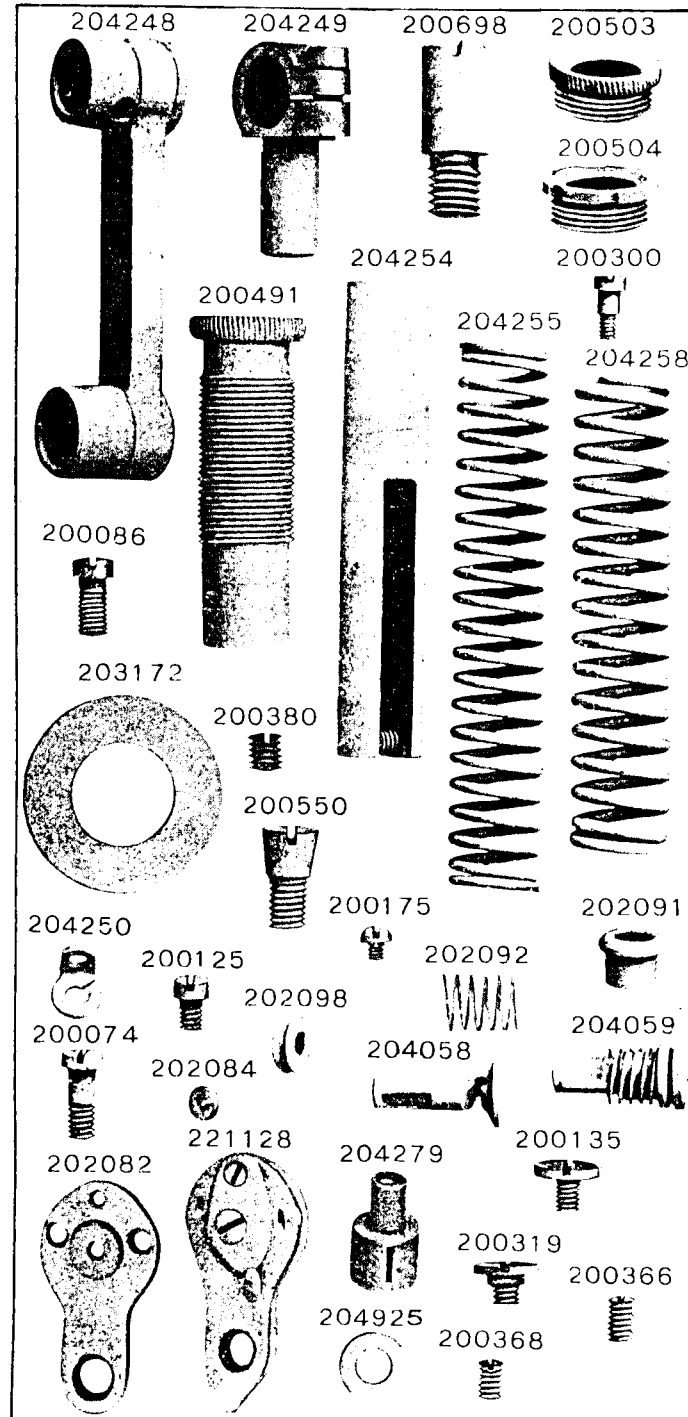 


PLATE 11156 ONE-FOURTH SIZE

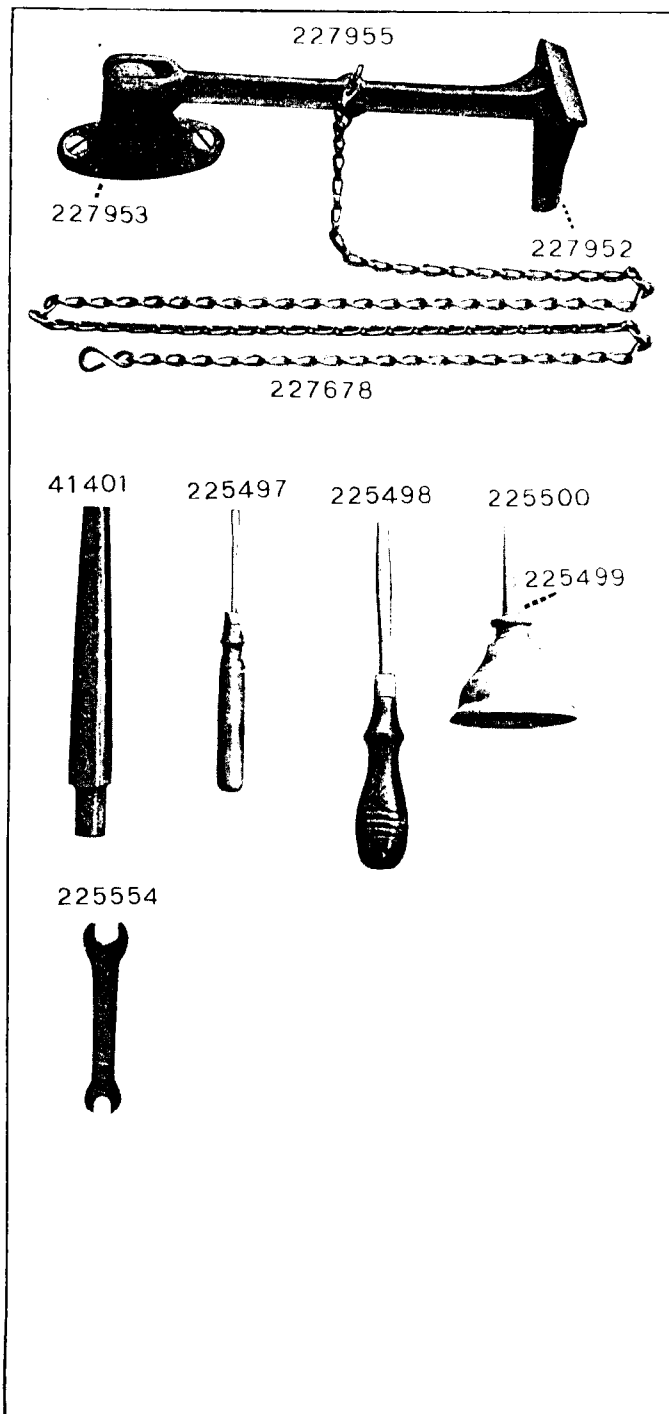 


PLATE 11157 ONE-HALF SIZE

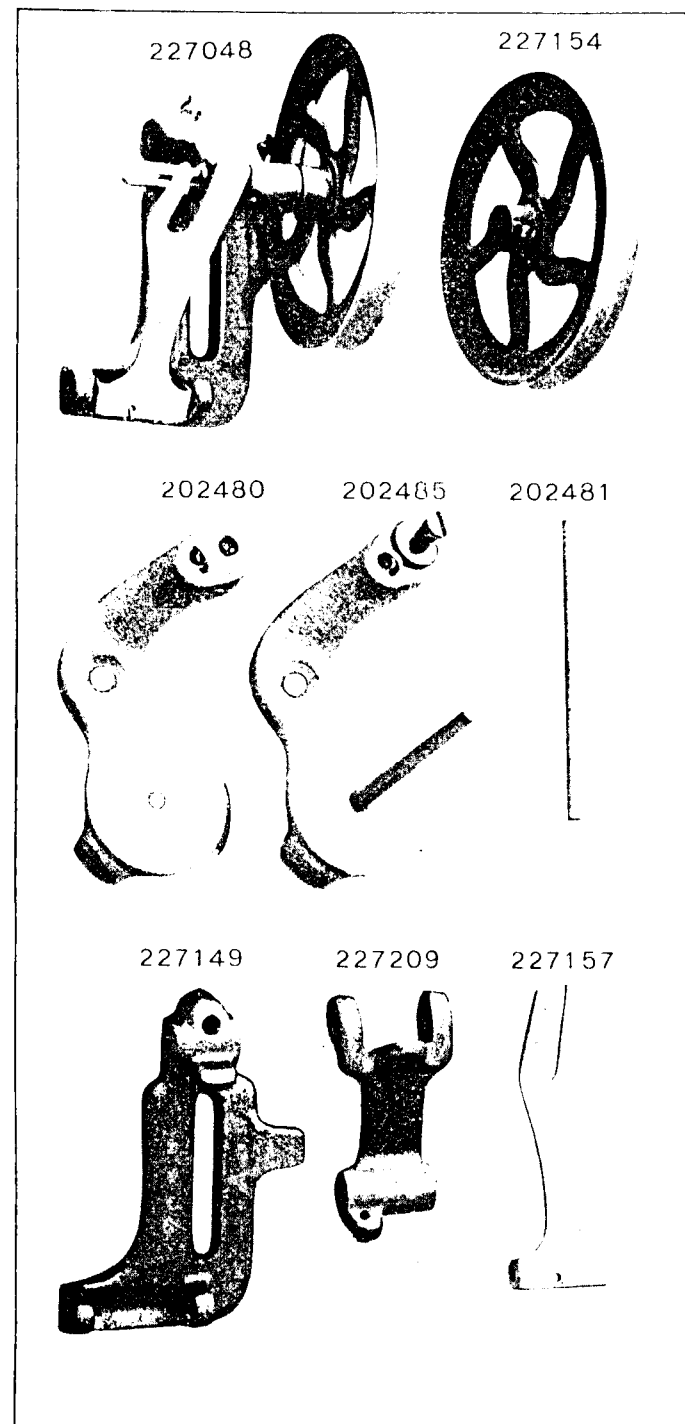 


PLATE 11158 FULL SIZE

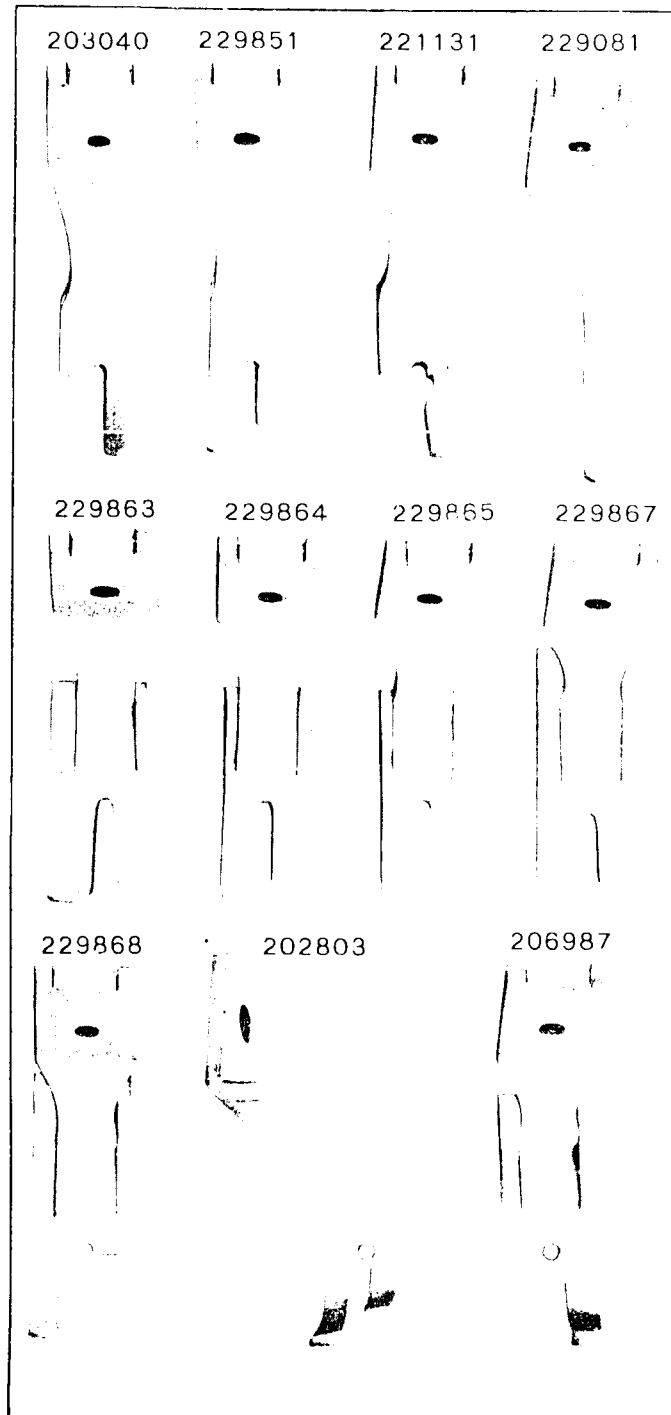 


PLATE 11160 FULL SIZE

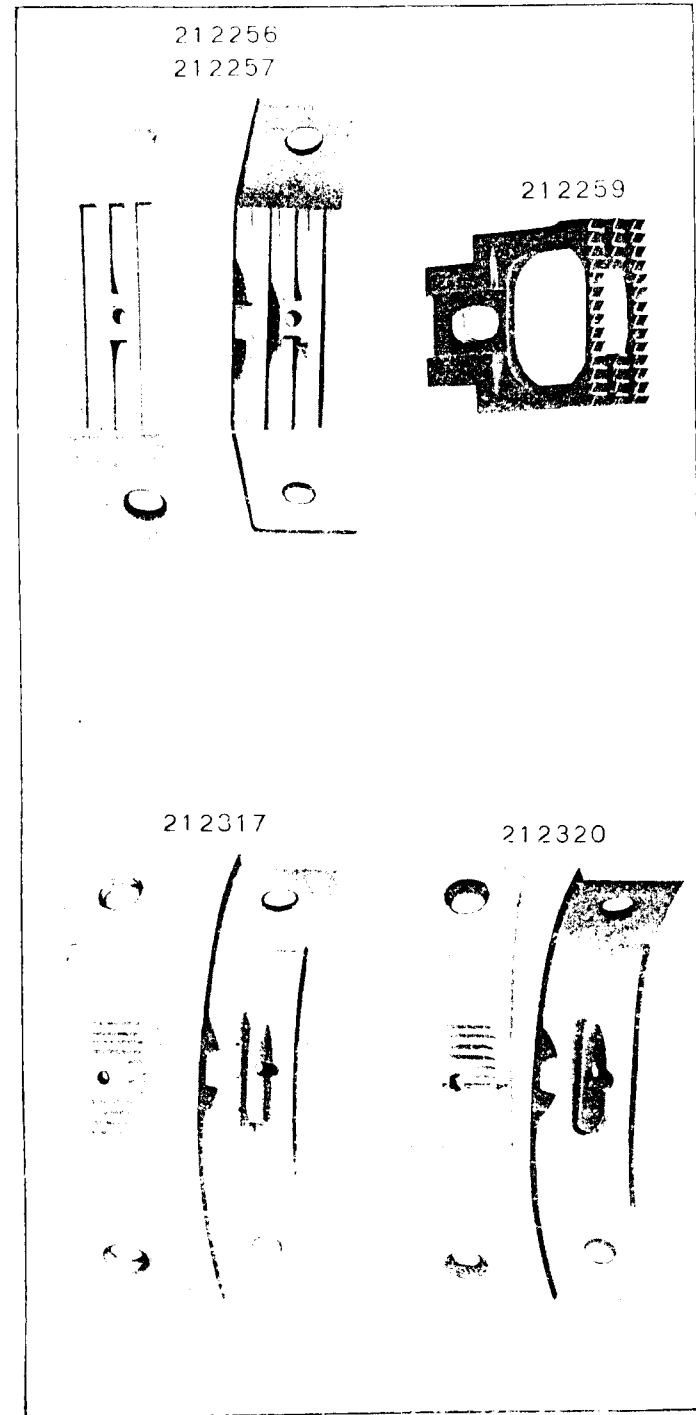 


PLATE 11161 - FULL SIZE

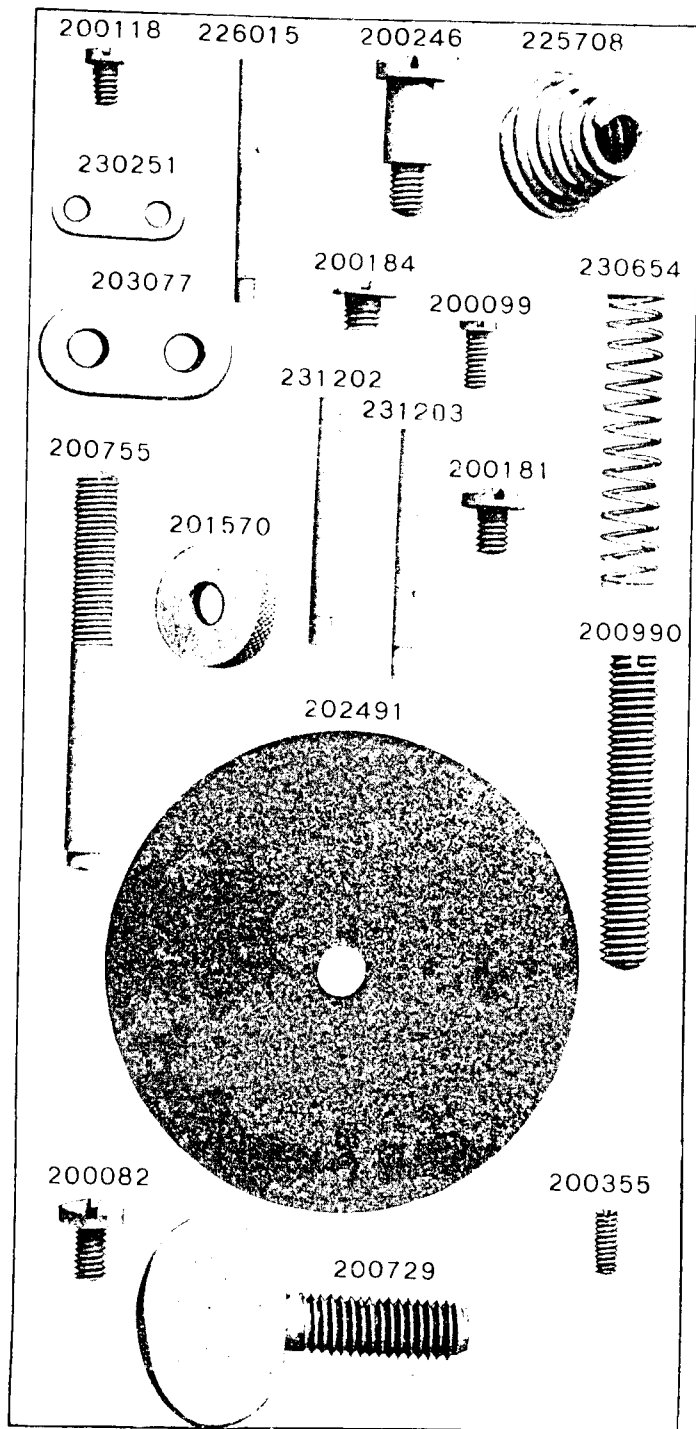 


PLATE 11162 - ONE-FOURTH SIZE

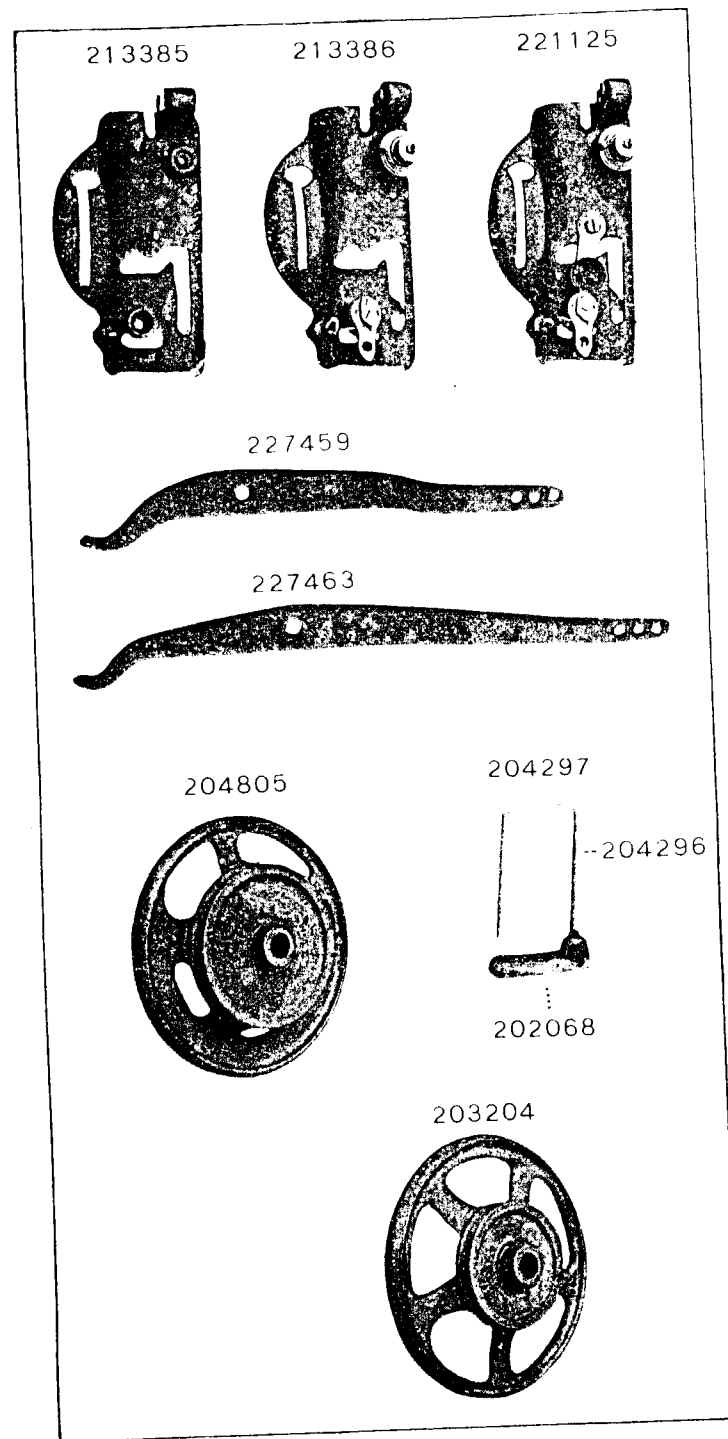 


PLATE 11163 - ONE-FOURTH SIZE

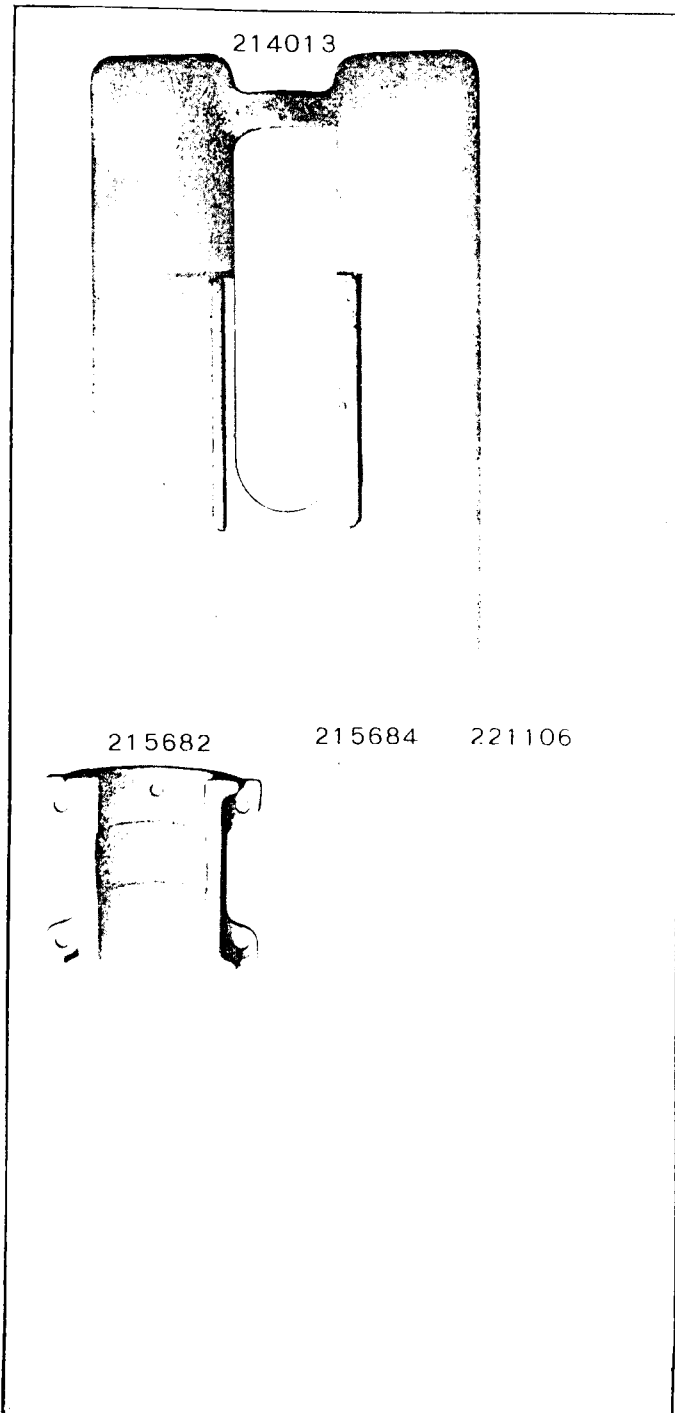 


PLATE 11164 ONE-SIXTH SIZE



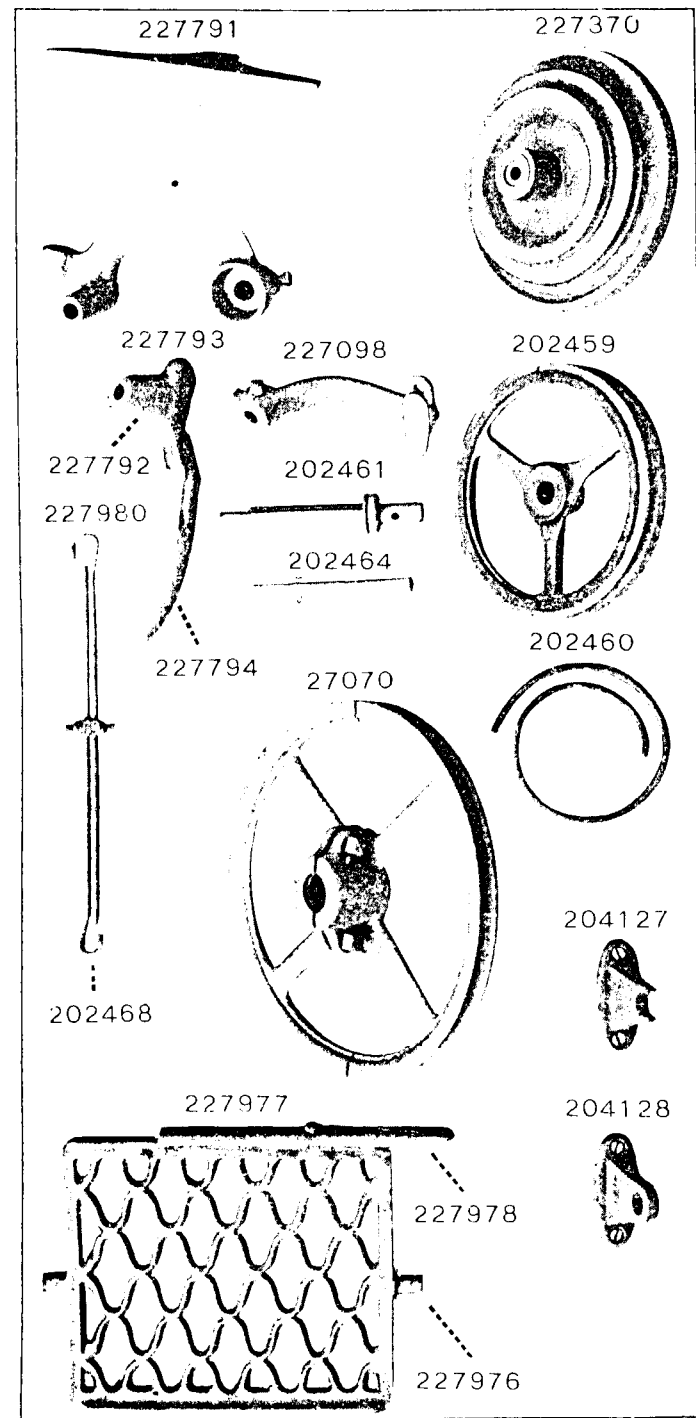 


PLATE 11165 --ONE-HALF SIZE

 230655

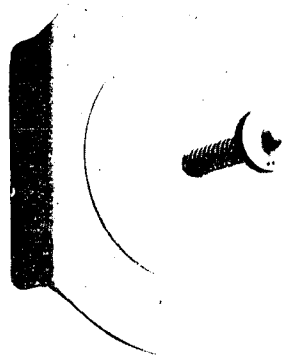

230250

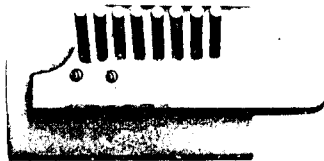 

230810

230847


 


PLATE 11228--FULL SIZE

 
203208



203214

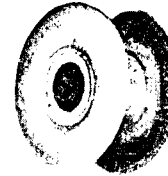

 
203209

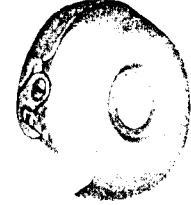


203215



 
203217

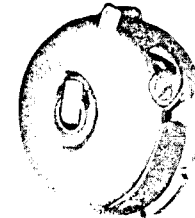

203216

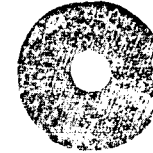 

203210

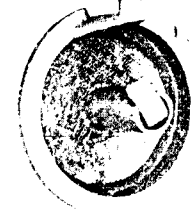 


203254



200600



 203251

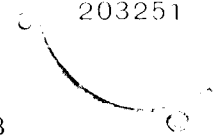

200593

 


200616



200594

203240

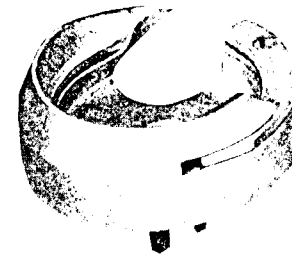

203290

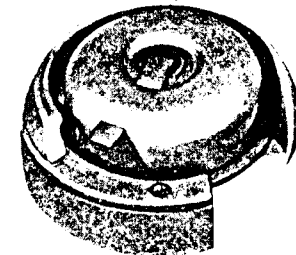 


PLATE 11241-FULL SIZE

203718



203718



203464



203465



PLATE 11253-FULL SIZE

200556



200559



 
200110



200446



203557



203549



203563



203558

 


PLATE 11254-ONE-HALF SIZE

203208 203209 203210 203549



203554

№ 2 OUTFIT

203240



203552



203554



203254



203254



PLATE 11257-ONE-HALF SIZE

203203 203209 203210 203557



203718

203718

203558

203464



203569

№ 4-1 OUTFIT

203553

203566

203564



203567

203568


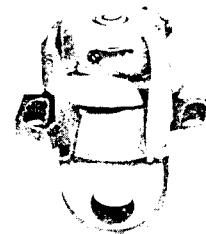 


PLATE 12177-FULL SIZE

212276

 212277

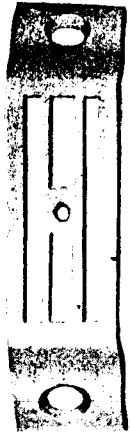


212276

212277



 212278

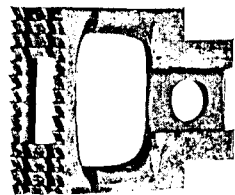

212278


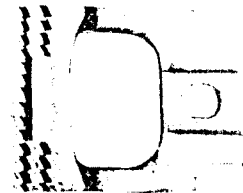 


PLATE 12184-FULL SIZE

 
212324
212325



212327
212328

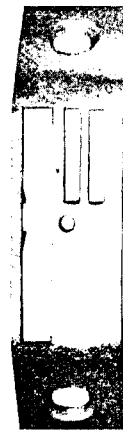

 212326

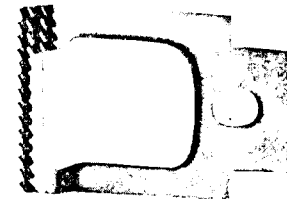

212329

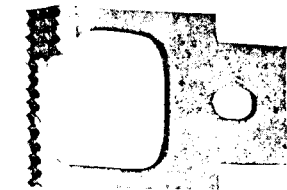 


PLATE 12185--FULL SIZE

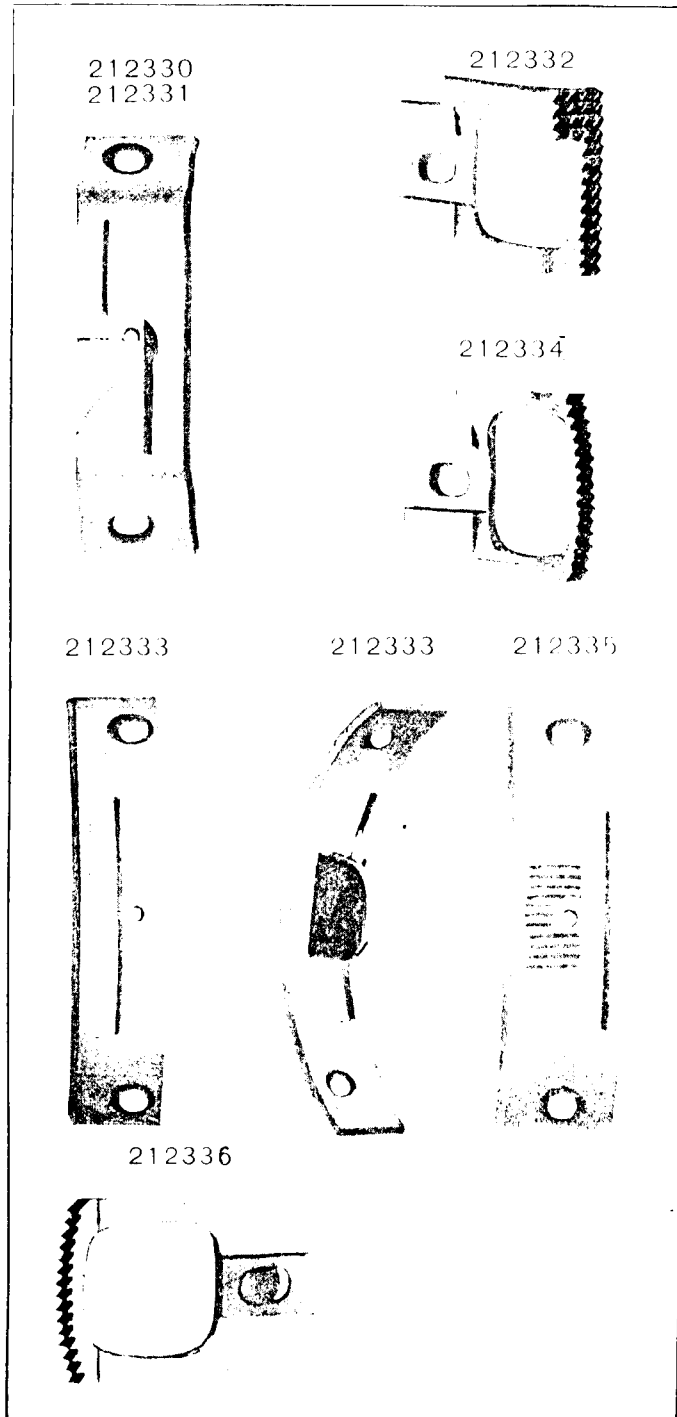 


PLATE 12186--FULL SIZE

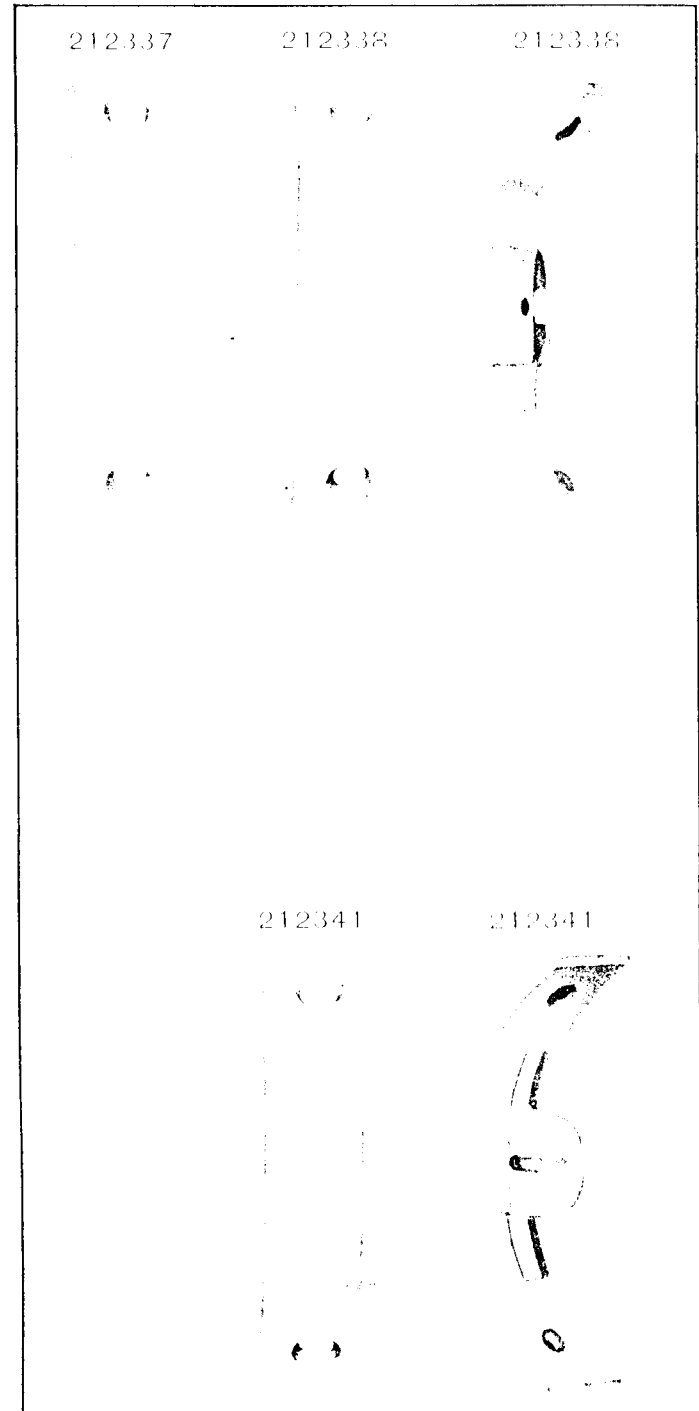 


PLATE 12187-FULL SIZE

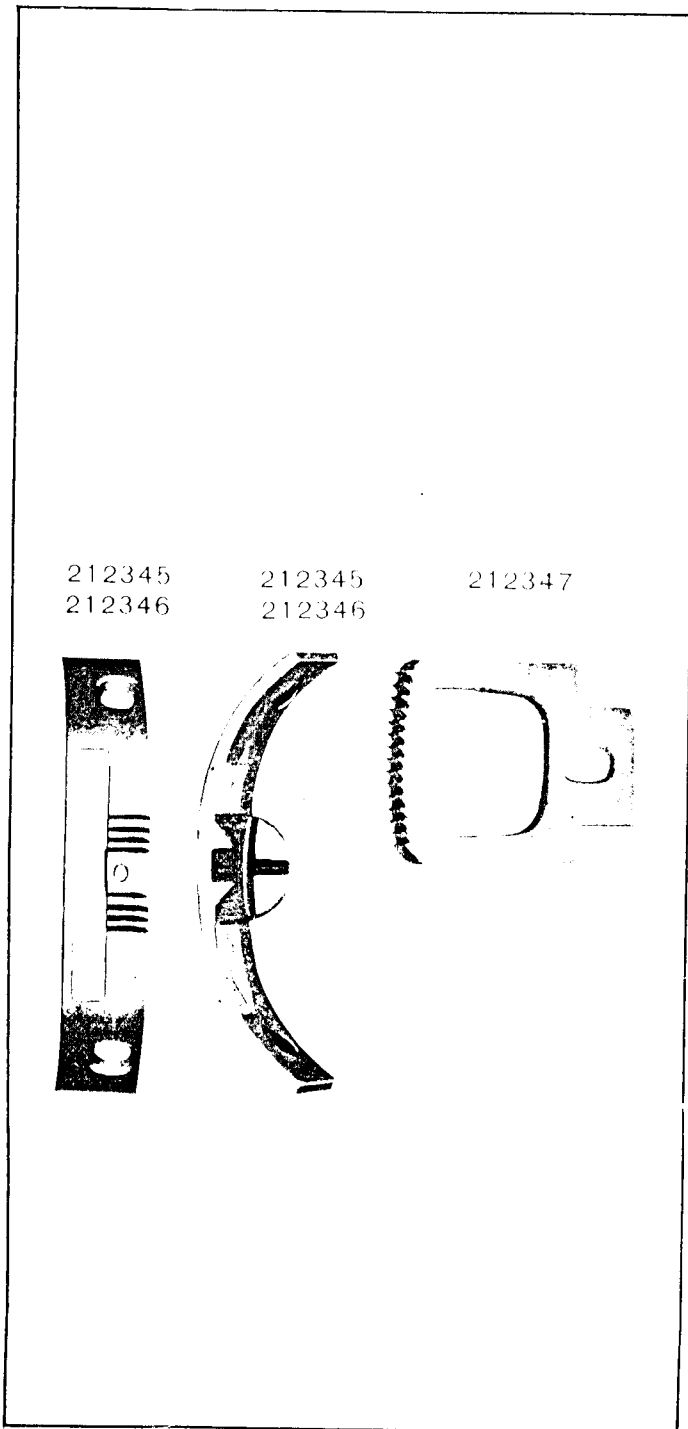 


PLATE 12225-FULL SIZE

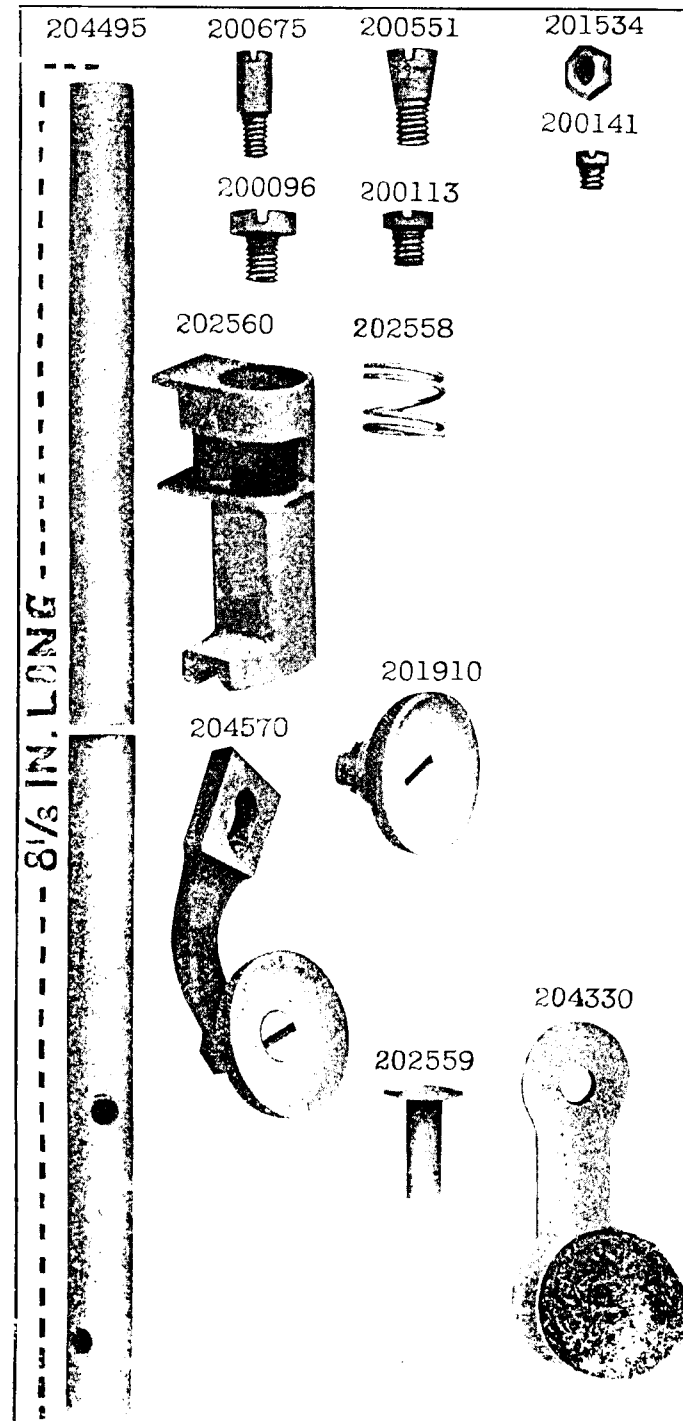 


PLATE 12311-FULL SIZE

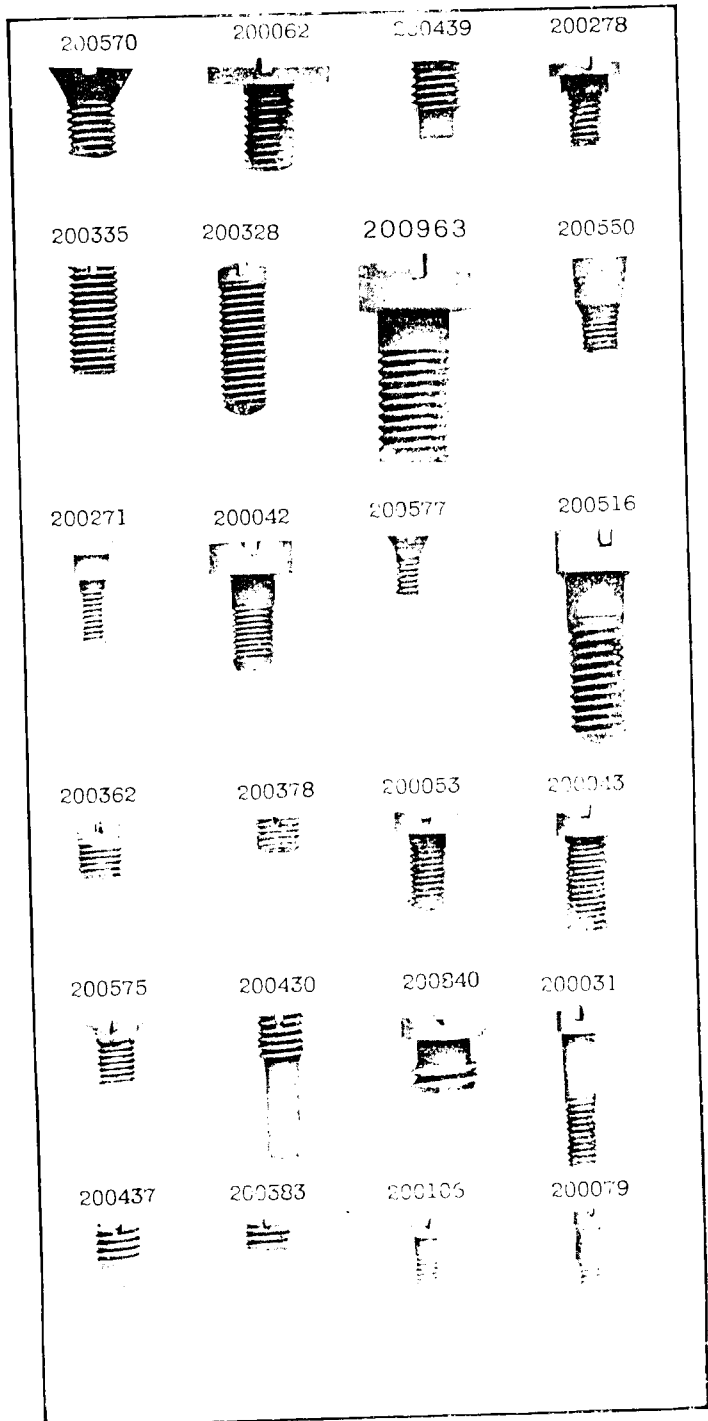 


PLATE 12321-FULL SIZE

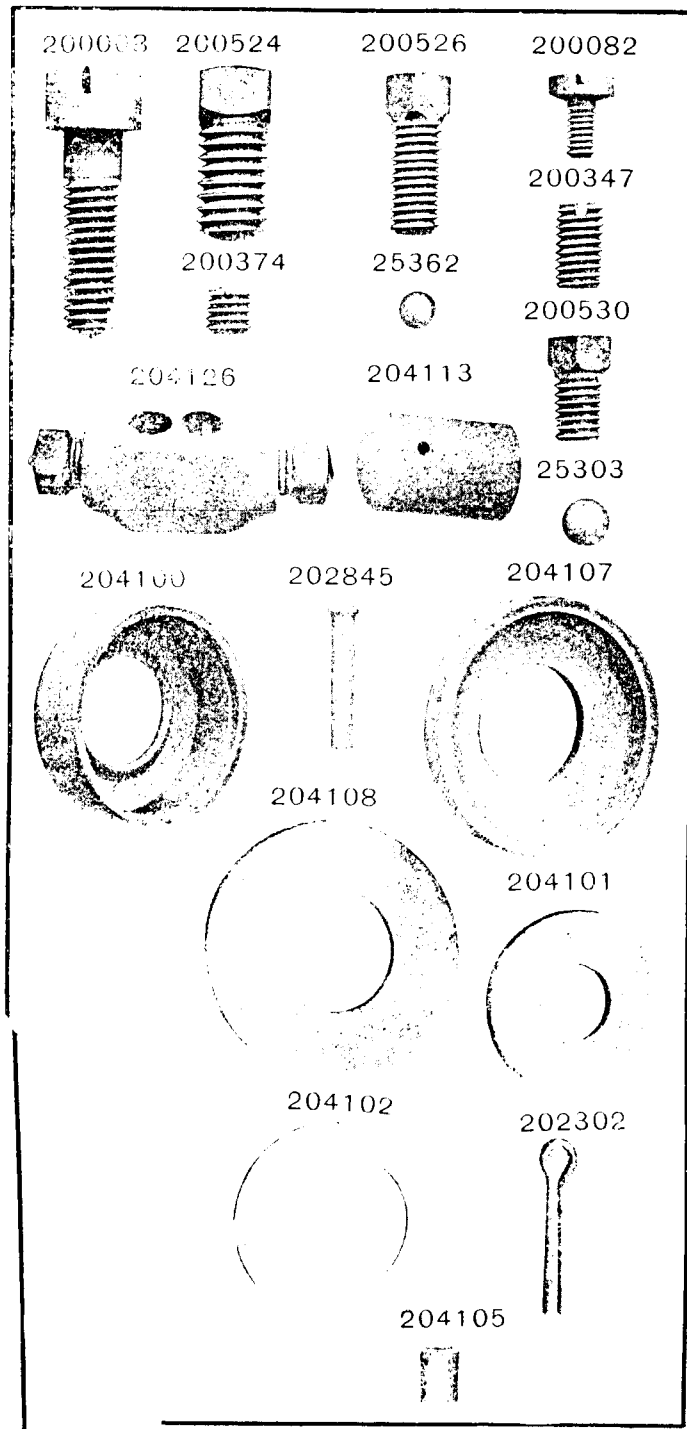 


PLATE 12322-FULL SIZE

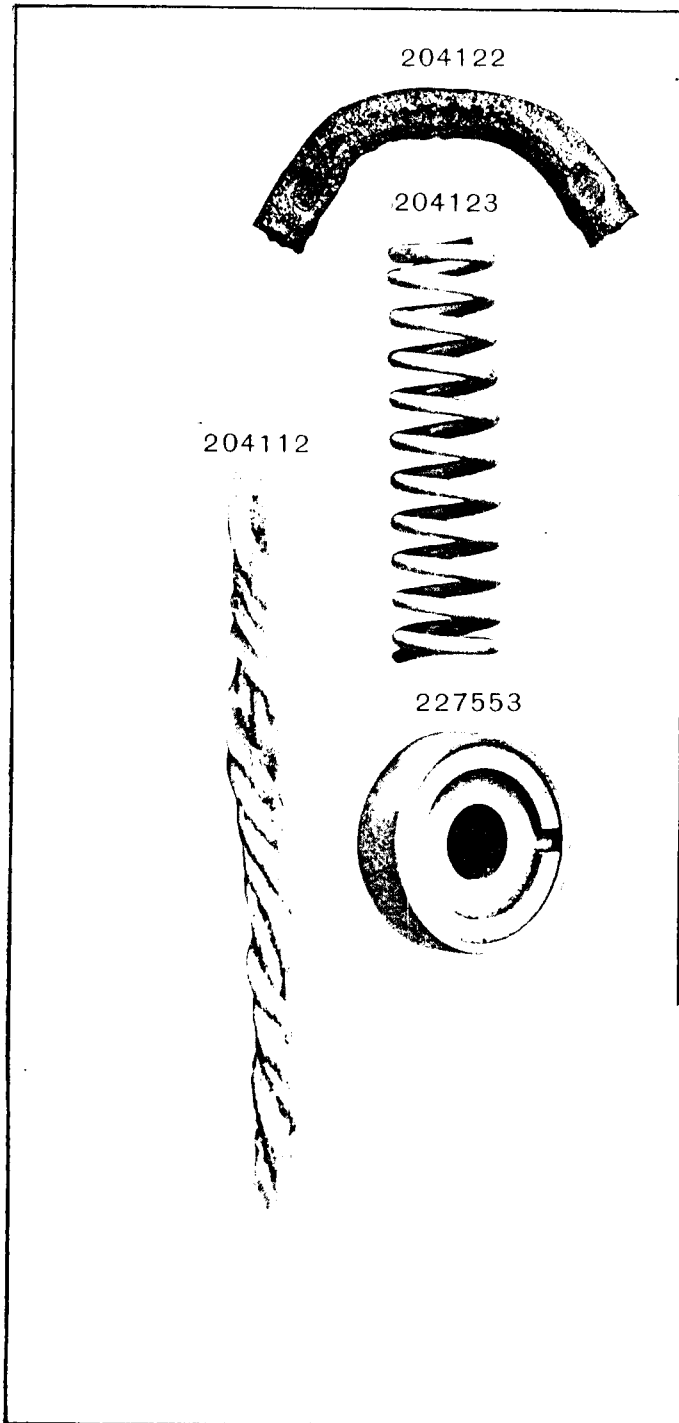 


PLATE 14554-FULL SIZE


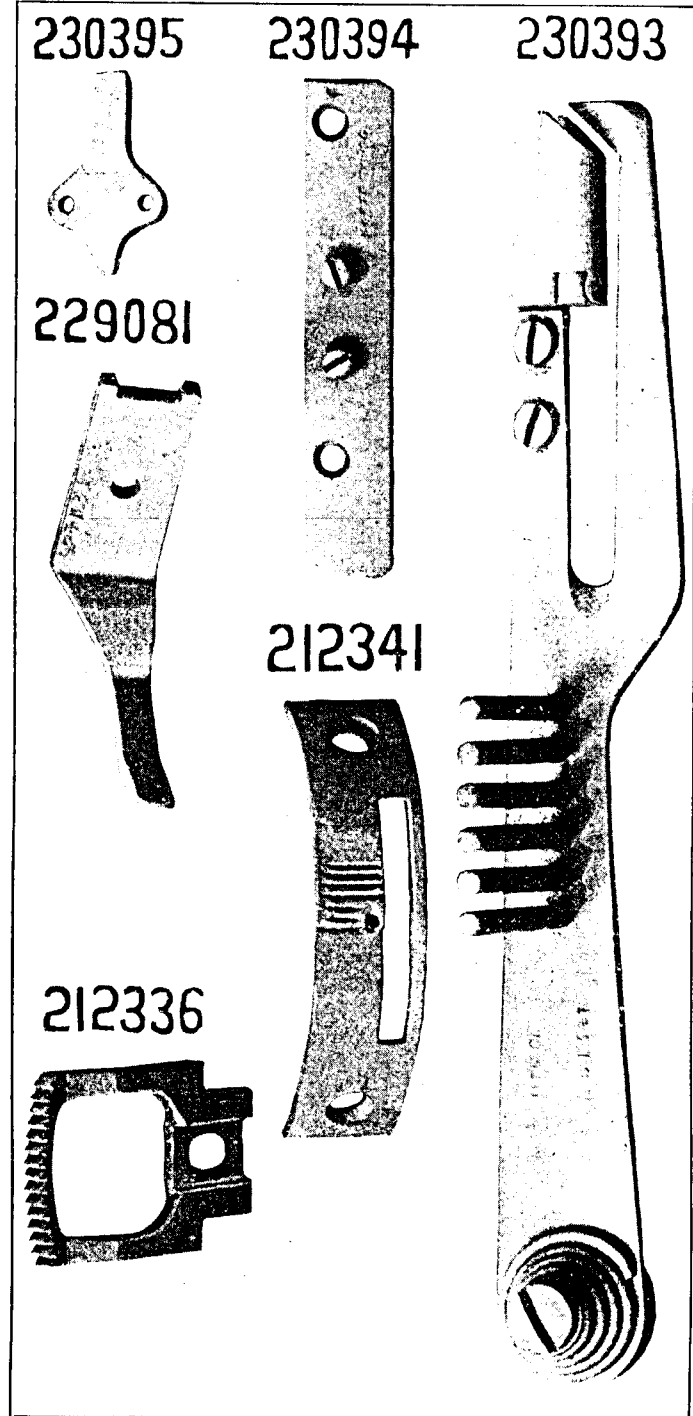 


PLATE 14304 FULL SIZE

 
230095



200921

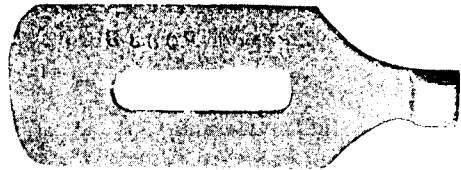

 230096

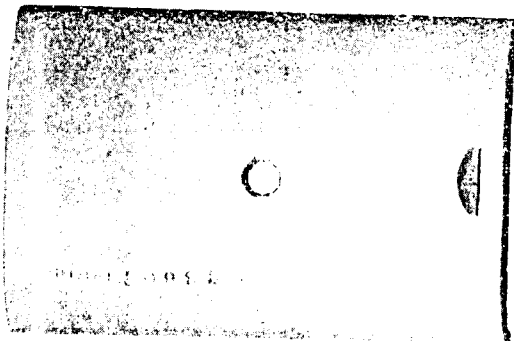

230097

